

### Single Threshold Shower Floors

(see page 2 for detailed information)

With Fit-Flo Drain

# Veritek<sup>®</sup> SHOWER FLOORS

Manufactured from Swanstone Veritek<sup>®</sup>


#### WARRANTY Limited Lifetime – Residential Limited 5-year – Commercial

#### FEATURES


- Will not mold or mildew, no grout to clean
- Coordinates with Swanstone shower and bath walls, vanity tops and wainscoting
- Pebbled, slip-resistant surface
- Made of Veritek with no surface coating to chip or crack


	Nominal	Rough-In Dimensions						
Model	Size	Α	В	C	D			
R-3232	32" x 32"	32-3/8"	32-3/16"	16-3/16"	16-3/16"			
R-3248	32" x 48"	48-3/8"	32-3/16"	24-3/16"	16-3/16"			
R-3260	32" x 60"	60-3/8"	32-3/16"	30-3/16"	16-3/16"			
R-3442	34" x 42"	42-3/8"	34-3/16"	21-3/16"	17-3/16"			
R-3448	34" x 48"	48-3/8"	34-3/16"	24-3/16"	17-3/16"			
R-3454	34" x 54"	54-3/8"	34-3/16"	27-3/16"	17-3/16"			
R-3460	34" x 60"	60-3/8"	34-3/16"	30-3/16"	17-3/16"			
R-3636	36" x 36"	36-3/8"	36-3/16"	18-3/16"	18-3/16"			
R-4236	42" x 36"	36-3/8"	42-3/16"	18-3/16"	20-3/16"			
R-4242	42" X 42"	42-3/8"	42-3/16"	21-3/16"	21-3/16"			

Single Threshold Shower Floors With Fit-Flo Drain

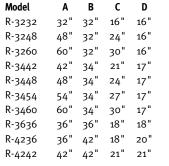

IMPORTANT: Rough-in dimensions are provided for reference only. You must measure the actual shower floor and check local building code requirements before construction of the stud wall.

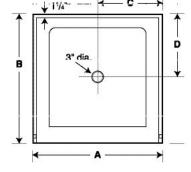



## SPECIFICATIONS

**COLORS** (See pg. 139 for color sample.)

• White (010) • Bone (037) • Bisque (018)

Model	Part	Nominal Size Dimensions	Ship Wt. Lb.	Ship UPS	Carton Dims. In.	Cu. Ft.
Model	Fail	Nominal Size Dimensions	WU. LD.	UFS	DIIII5. III.	Си. г.
R-3232	FF03232MD	32" D x 32" W (813 mm x 813 mm)	32	-	38 x 37 x 10	9
R-3248	FF03248MD	32" D x 48" W (813 mm x 1219 mm)	49	-	54 x 38 x 10	12
R-3260	FF03260MD	32" D x 60" W (813 mm x 1524 mm) - Center drain	56	-	66 x 37 x 10	15
R-3442	FF03442MD	34" D x 42" W (864 mm x 1067 mm)	46	-	48 x 40 x 10	12
R-3448	FF03448MD	34" D x 48" W (864 mm x 1219 mm)	47	-	54 x 39 x 10	13
R-3454	FF03454MD	34" D x 54" W (864 mm x 1372 mm)	55	-	60 x 40 x 10	14
R-3460	FF03460MD	34" D x 60" W (864 mm x 1524 mm)	63	-	66 x 40 x 10	16
R-3636	FF03636MD	36" D x 36" W (914 mm x 914 mm)	40	-	42 X 41 X 10	10
R-4236	FF04236MD	42" D x 36" W (1067 mm x 914 mm)	44	-	47 X 42 X 10	12
R-4242	FF04242MD	42" D x 42" W (1067 mm x 1067 mm)	53	-	48 x 48 x 10	14

Kit Includes: One code approved compression molded Veritek<sup>®</sup> shower floor with molded-in Fit-Flo drain and complete installation instructions. Packaging: Each floor packed in a rectangular carton.

## STANDARDS AND RATINGS

Class B fire rating

American National Standard Institute—ANSI Z124.1.2—2005 International Association of Plumbing and Mechanical Officials (IAPMO)—listed cUPC listed—Certified to CSA Standard B45 by IAPMO American Society for Testing and Materials National Electrical Manufacturers Association

# SUPPORT DOCUMENTS

Installation instructions available on line at www.swanstone.com

# MAINTENANCE AND CLEANING INFORMATION

Everyday cleaning should consist of liquid cleaners such as Dow or Lysol foaming bubbles, Top Job, Mr. Clean or liquid Lysol along with a sponge. Remove hard water stains, mineral or soap build-up with scale removers such as Lime-Away. If necessary, you may use an abrasive cleaner such as Aiax or Comet with a nylon brush or pad to remove build up on the pebble surface. Do not use steel wool or a wire brush. An abrasive cleaner, brush or pad will not remove the finish because the color is molded throughout. However, it is best to avoid the higher sheen surface of the floor. Prolonged scrubbing of this area could cause it to look dull and promote soap build up.