

OUTLET BOX
CAJA DE SALIDA

MOUNTING STRAP
PLANCHA PARA MONTAR

FIXTURE
CAJA DE LA UNIDAD

SOCKET CUP
TAZA DEL CASQUILLO

ROD
VARILLO

THREADED BALL
BOLILLA ROSCADA


SHAFT
EJE

ACORN FINIAL
REMATE EN
FORMA DE
BELLOTA

GLASS
VIDRIO

- 1) Turn off power.
- 2) Assemble mounting screws into threaded holes in mounting strap.
- 3) Attach mounting strap to outlet box. (Screws not provided)
- 4) Grounding instructions: (See Illus. A or B).
 - A) On fixtures where mounting strap is provided with a hole and two raised dimples. Wrap ground wire from outlet box around green ground screw, and thread into hole.
 - B) On fixtures where a cupped washer is provided. Attach ground wire from outlet box under cupped washer and green ground screw, and thread into mounting strap.

If fixture is provided with ground wire. Connect fixture ground wire to outlet box ground wire with wire connector. (Not provided.) After following the above steps. Never connect ground wire to black or white power supply wires.

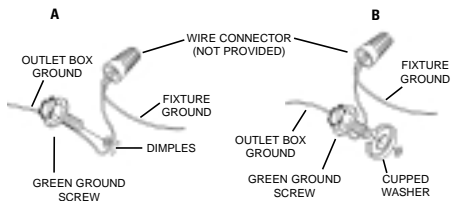

- 5) Make wire connections (connectors not provided.) Reference chart below for correct connections and wire accordingly.

Connect Black or Red Supply Wire to:	Connect White Supply Wire to:
Black	White
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)
Clear, Brown, Gold or Black without tracer	Clear, Brown, Gold or Black with tracer
Insulated wire (other than green) with copper conductor	Insulated wire (other than green) with silver conductor

*Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)

- 6) Push fixture to wall, carefully passing mounting screws through holes.
- 7) Secure fixture to wall using threaded balls.
- 8) Install recommended bulb.
- 9) Slip shaft of one acorn finial through one of the holes in glass.
- 10) Lift glass and finial up to fixture aligning finial with one of the rods from socket cup and screw finial onto rod. **NOTE:** Rods are not intended to pass through holes in glass.
- 11) Align remaining two holes in glass with rods. Secure in place by passing shaft of finial through holes in glass and then screwing on to rods. **NOTE:** Finial that was installed first may have to be loosened.
- 12) Tighten all acorn finials until glass is secure. (DO NOT over tighten).


- 5) Haga las conexiones de los alambres (no se proveen los conectores.) La tabla de referencia de abajo indica las conexiones correctas y los alambres correspondientes.

Conectar el alambre de suministro negro o rojo al	Conectar el alambre de suministro blanco al
Negro	Blanco
*Cordon paralelo (redondo y liso)	*Cordon paralelo (cuadrado y estriado)
Claro, marrón, amarillo o negro sin hebra identificadora	Claro, marrón, amarillo o negro con hebra identificadora
Alambre aislado (diferente del verde) con conductor de cobre	Alambre aislado (diferente del verde) con conductor de plata

*Nota: Cuando se utiliza alambre paralelo (SPT I y SPT II). El alambre neutro es de forma cuadrada o estriada y el otro alambre será de forma redonda o lisa. (Vea la ilustración).

- 1) Desconecte la corriente.
- 2) Enrosque los tornillos para montaje en los agujeros roscados de la plancha para montar.
- 3) Sujete la plancha para montar a la caja de conexión. (No se proveen los tornillos.)
- 4) Instrucciones de conexión a tierra solamente para los Estados Unidos. (Vea la ilustración A o B).
 - A) En las lámparas que tienen el fleje, de montaje con un agujero y dos hoyuelos realzados. Enrollar el alambre a tierra de la caja tomacorriente alrededor del tornillo verde y pasarlo por el agujero.
 - B) En las lámparas con una arandela acopada. Fijar el alambre a tierra de la caja tomacorriente del ajo de la arandela acoada y tornillo verde, y pasar por el fleje de montaje.

Si la lámpara viene con alambre a tierra. Conectar el alambre a tierra de la lámpara al alambre a tierra de la caja tomacorriente con un conector de alambres. (No incluido) Después de seguir los pasos anteriores. Nunca conectar el alambre a tierra a los alambres eléctricos negro o blanco.

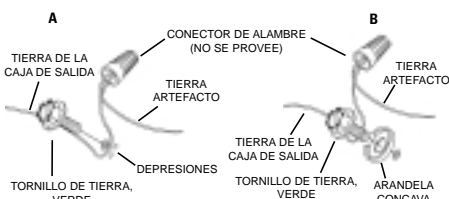

- 6) Empuje la unidad contra la pared, pasando con cuidado el tubo roscado a través del agujero.
- 7) Sujete la unidad contra la pared apretándola con la tapa roscada.
- 8) Instale la bombilla que se recomienda.
- 9) Resbale el eje de uno de los remates en forma de bellota a través de uno de los orificios del vidrio.
- 10) Levante el vidrio y el remate decorativo hasta el nivel del artefacto alineando el remate en forma de bellota con una de las varillas del portalámpara y atornille este remate en la varilla. **NOTA:** No se pretende que las varillas pasen por los orificios en el vidrio.
- 11) Alinee los dos orificios restantes del vidrio con las varillas. Sujete en su lugar pasando el eje de cada remate en forma de bellota a través de los orificios en el vidrio y luego atornillándolos en las varillas. **NOTA:** Puede ser necesario aflojar el remate que se instaló primero.
- 12) Apriete todos los remates en forma de bellota hasta que el vidrio esté seguro (NO APRIETE DEMASIADO).