


Assembly Instructions For

F2638/3 (E) 12/10

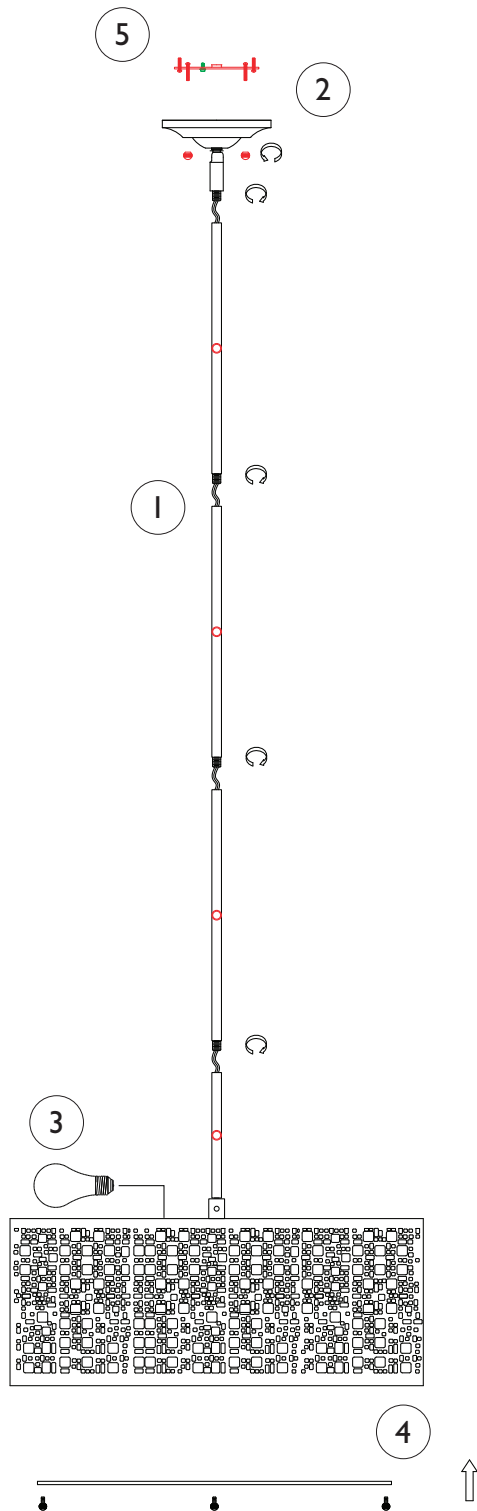

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulbs not included.

I. STEM HUNG INSTALLATION:


A. Choose desired installation height. Thread fixture wires through each stem to be used. Note correct position of stems from left diagram. Screw all stem together until secure. Screw bottom stem into fixture coupler until secure.

B. Thread fixture wires from top stem through canopy. Install top end of stem assembly by screwing into canopy.

WITHOUT STEM INSTALLATION:

A. Thread fixture wires from top of fitter through canopy. Then screw canopy on top of fitter.

2. Cut excess wires leaving only 6" (15 cm) length of wires above canopy. Split fixture wire into two strands. Then strip off 3/4" (19 mm) of outer plastic insulation.
3. Install light bulb (not included). See relamping label at socket area for type and maximum allowed wattage.
4. Install the shade plate onto the bottom of the shade and secure with thumb screws.
5. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture then hire a qualified electrician to create one.



MURRAY
FEISS

GENERATION
BRANDS™