
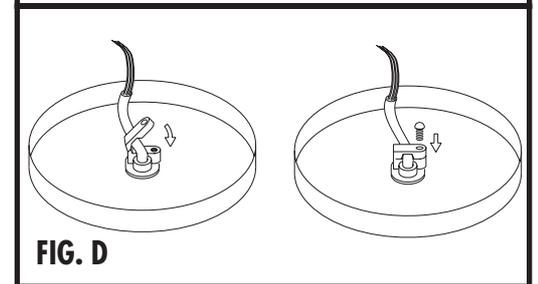
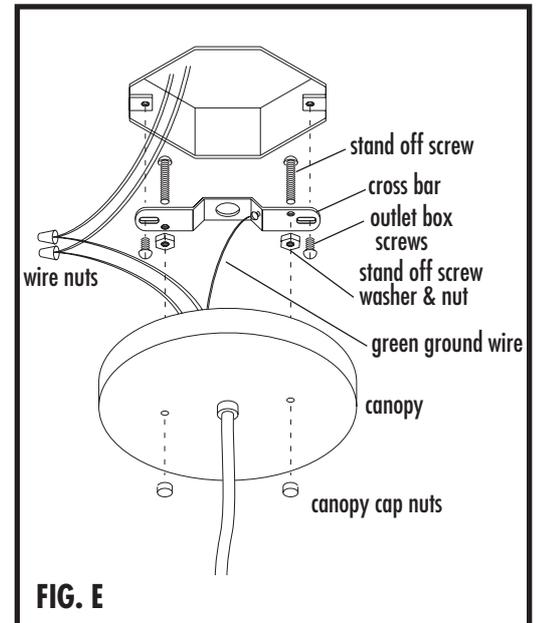


SONNEMAN®

A WAY OF LIGHT

Assembly Instructions for: Lightweights - 3138, 3139

This light should be installed by a licensed electrician

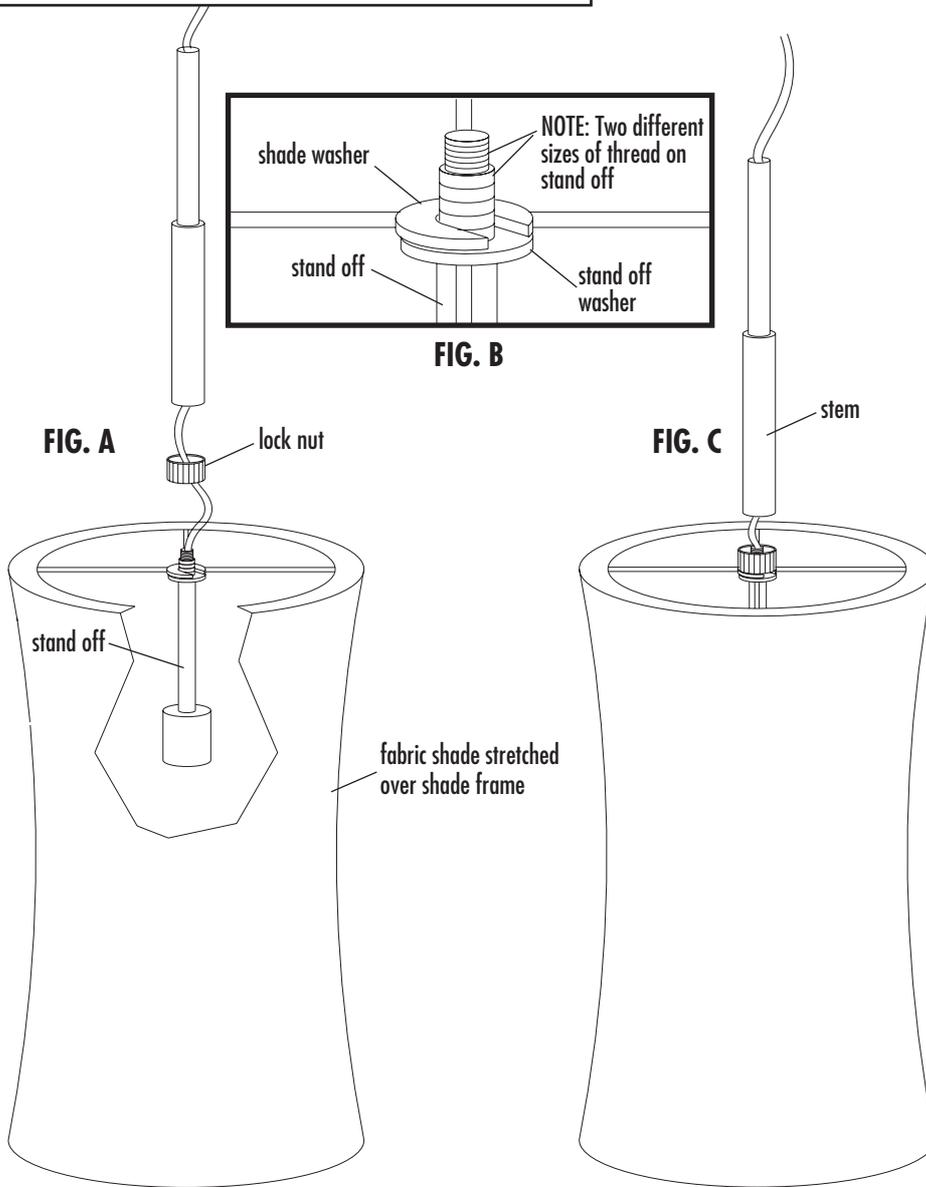

Assembly & Installation Instructions

1. Carefully stretch the fabric shade over the shade frame.
2. Place stand off within the shade washer. (Fig. A with detail Fig. B)
3. Secure with lock nut. (Fig. C)
4. Screw stem on to stand off
5. Insert bulbs in sockets.
6. Loosen strain relief in the canopy to adjust length of cable. Be sure to secure the strain relief once the desired length is obtained. (Fig. D)
7. Install stand off screws in the cross bar. The thread should project at least 3/4" beyond the ceiling surface when the cross bar is installed.
Fix length of stand off screw with supplied washer and nuts. (Fig. E)
8. Shut off power to outlet box.
9. Mount cross bar to outlet box using outlet box screws.
10. Make electrical connections using wire nuts. If there is no green ground wire from the outlet box, connect the fixture ground wire to the cross bar with the green screw provided.
11. Attach canopy over outlet box with canopy cap nuts.