

## INSTRUCTIONS: Line Volt Pendant Light Track Mounted

- **CAUTION:** Always turn off power at fuse box prior to installation to prevent electrical shock.
- Do not install in damp or wet locations.
- Do not attempt to energize anything other than a track lighting fixture on the track.

### To Track Mount:

1. Installation is the same as for a track head. Raise the track adapter to track height. Align the contact tabs, and gently push upward while turning 90°. If installed properly the plastic detent tab will be seated in the center groove of the track.

### To Field Shorten Pendant:


1. Undo the socket assembly by turning the retaining ring counter clockwise. Unscrew the socket in the same direction.
2. Gently pull the wires from the socket and undo the wire nuts. Loosen the strain relief bushing and slide up the length of wire as needed.
3. Tighten the strain relief bushing, trim wires to correct length and reconnect, be sure to use the same ceramic wire nuts provided. Reinstall the socket.

### To Install Shade:

1. Remove retaining ring from the socket by turning it counter-clockwise.
2. Slip the shade over the socket and replace the retaining ring. Turn the retaining ring clockwise until the shade is snug fit to the aluminum cone.

\* Leveling spring is available for PLD-G401, 402, 406, 407 & 408 shades if needed.

Suitable Bulbs			
Type	Base	Voltage	Max Watts
A lamp	E27	120	100
G lamp	E27	120	100

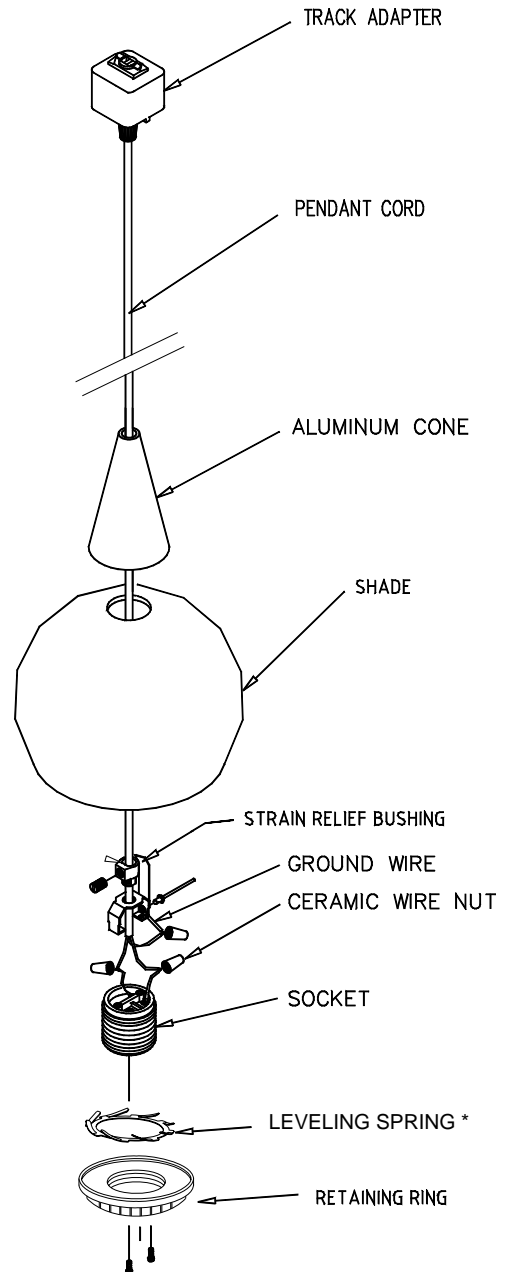

**W · A · C** | LIGHTING

www.waclighting.com

615 South Street, Garden City, NY 11530  
Tel: (516) 515-5000 Fax: (516) 516-5050

168 Brea Canyon Road, City of Industry, CA 91789  
Tel: (909) 468-1848 Fax: (909) 468-9958

05/21/07 Rev1