





Toilet Paper Niche Installation Instructions

1


Add horizontal stud to support bottom of Niche

Refer to specifications for cut out dimensions

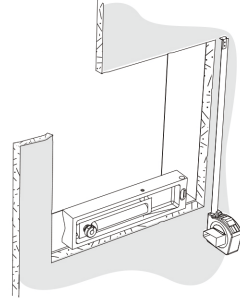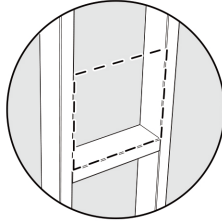


2

Peel off the tape cover.

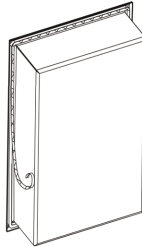

3

Rest the bottom first, then push in.

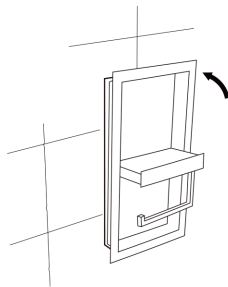

Apply silicone around all edges.

