Multi Pendant



WARNINGS AND CAUTIONS

Important: ALWAYS be sure to disconnect power before re-lamping or wiring the fixture. Read these instructions completely before starting installation.

To avoid the risk of fire and/or shock fixture must be installed in compliance to national and local electrical and building codes.

If an existing fixture is being replaced take special notice of which wires were connected in the outlet box. DO NOT SEPARATE ANY WIRES THAT MAY BE EXISTING IN THE JUNCTION BOX DO NOT DAMAGE THE INSULATION OF JUNCTION BOX WIRES.

In Regular circumstances the BLACK wire will be "live", WHITE will be "neutral" and GREEN or BARE COPPER will be "ground". In older buildings it is always good practice to reconfirm the polarity of the wiring.

NOTICE

· The important safeguards and instructions outlined in this sheet cannot cover all possible conditions and situations that may occur. It must be understood that caution and certain care factors must be followed. These instructions are provided for your safety and we highly recommend that a licensed, trained electrician install this unit.

ASSEMBLY INSTRUCTIONS

Step 1

Remove fixture from its original package.

Separate mounting plate (1c) from canopy (2a) by removing decorative nuts (2c.)

Step 3

Align mounting plate screws (1d) to desired orientation.

Important: This fixture must be mounted independently from junction box (1a), additional means of support is required.

Step 4

Secure mounting plate (1c) to mounting surface with anchors (1f) and screws (1g)

Step 5

To change fixture height, shorten or lengthen wire by removing set screw (3a) from canopy (2a) and push or pull wire to your desired length. Secure set screw (3a) in canopy (2a) to lock wire in place.

Step 6


Attach safety hooks (4b) onto mounting plate (1c).

Step 7

Make proper electrical connections (black to hot "L", white to neutral "N", ground to "GND") with wire nuts (1b) provided in hardware package and place driver (4a) inside canopy (2a).

Align and insert mounting plate screws (1d) through holes on canopy (2a), secure with decorative nuts (2c).

You are now ready to enjoy your fixture.

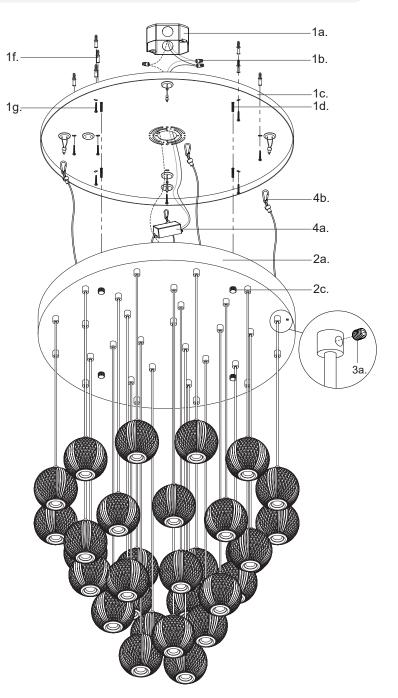



20221108

CANADA: 19054 28th Avenue Surrey - BC V3Z 6M3 USA: 3035 E. Lone Mountain Rd - Las Vegas, NV, 89081 www.aloralighting.com

