


ALTAIR
FASHION BATHROOM LIFE

SHOWER DOOR INSTALLATION INSTRUCTIONS

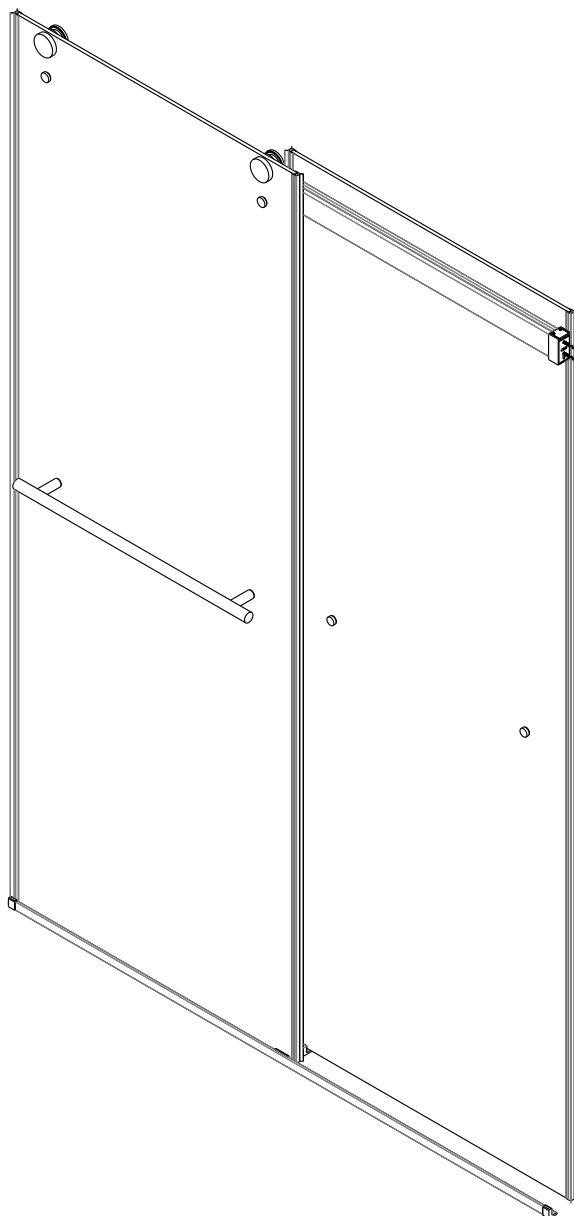





SD80752-BP-MB
SD80756-BP-MB
SD80760-BP-MB
SD80768-BP-MB



IMPORTANT-Please read and follow all warnings and instructions before using this product. Injury can result from improper use. Save this documents.



WARNING
Tempered Glass, please don't hit the corners and the surrounding, otherwise the glass will burst.

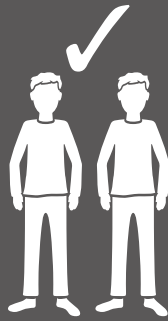

● General Information

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

Notes: Safety glass can not be re-worked.

Please read these instructions carefully before start of installation.

Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.

Note: This product is heavy and may require two people to install.


Aftercare instructions

After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up. Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.

Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.

Please keep these instructions for aftercare and customer service details.



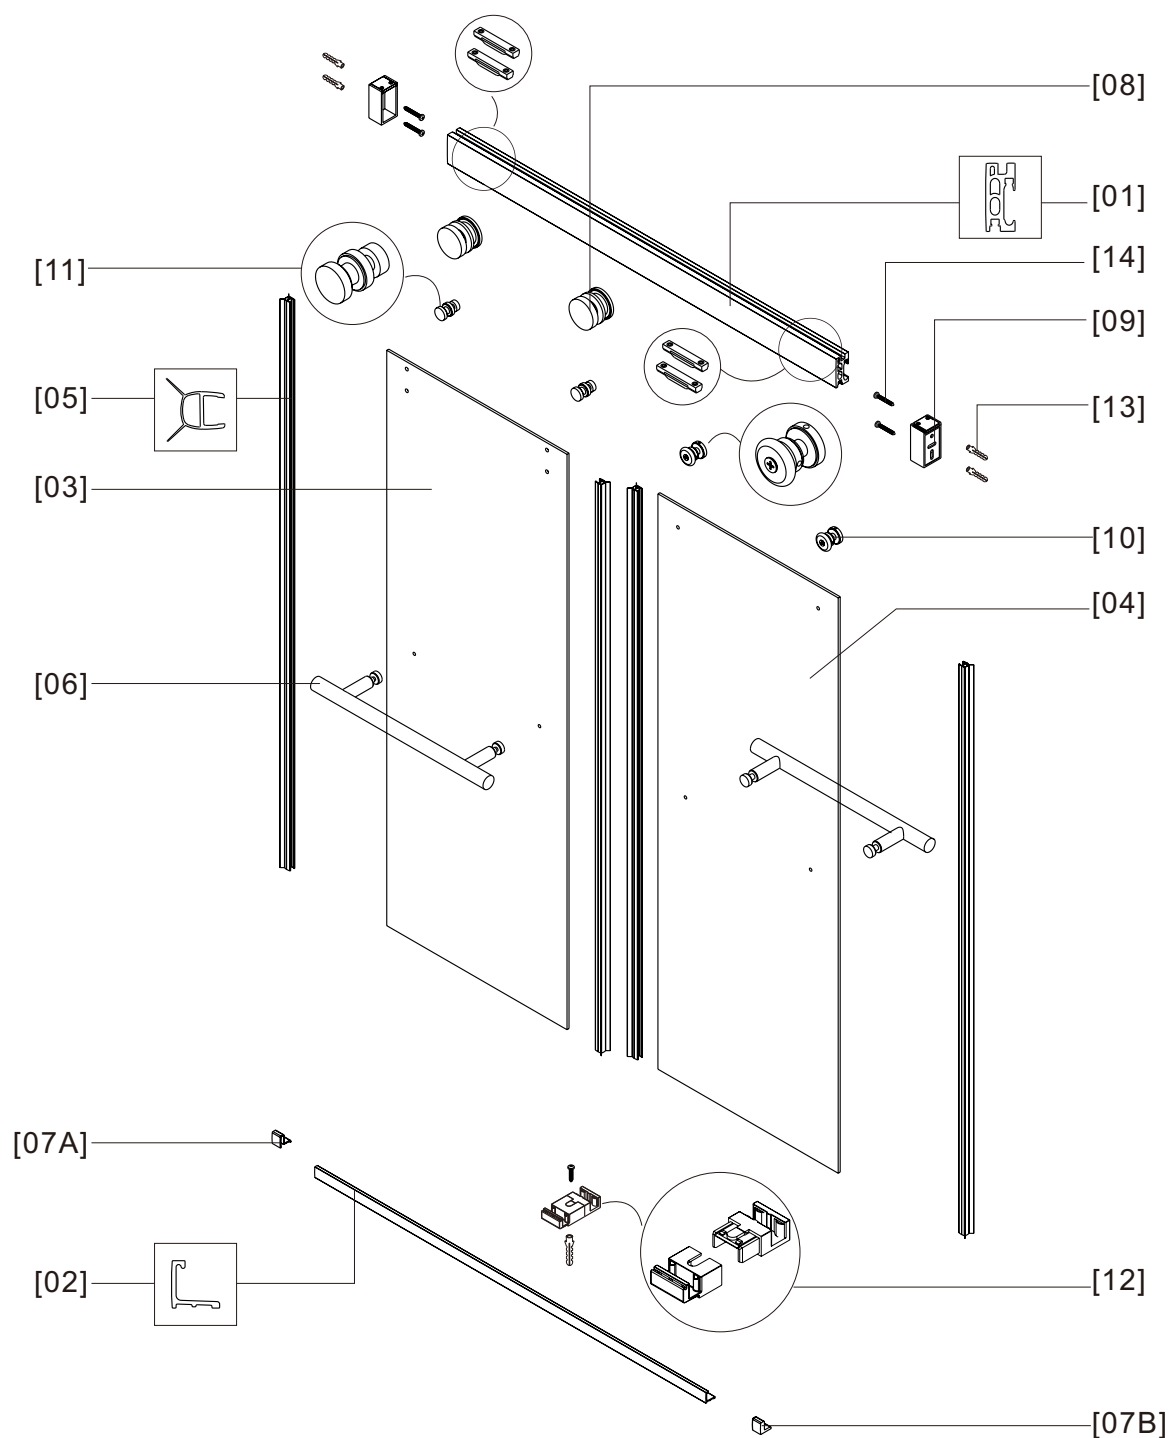





















Detailed Diagram of shower door components



- [01] 1xTop Horizontal Rail.
- [02] 1xBottom Threshold.
- [03] 1xDoor Panel A.
- [04] 1xDoor Panel B.
- [05] 4xClosing Gaskets.
- [06] 2xHandle Sets.
- [07A] 1xFixing.
- [07B] 1xFixing.

- [08] 2xTop Rollers.
- [09] 2xFixed Seats.
- [10] 2xAnti-collision Components.
- [11] 2xFasteners.
- [12] 1xBottom Slider.
- [13] 5xWall Plugs.
- [14] 5xScrews ST4.2x30.

● Parts List:

1xInstallation Instruction.	➔	
[01] 1xTop Horizontal Rail.	➔	 
[02] 1xBottom Threshold.	➔	 
[03] 1xDoor Panel A.	➔	
[04] 1xDoor Panel B.	➔	
[05] 4xClosing Gaskets.	➔	 
[06] 2xHandle Sets.	➔	 
[07A] 1xFixing. [07B] 1xFixing.	➔	 
[08] 2xTop Rollers.	➔	 
[09] 2xFixed Seats.	➔	 
[10] 2xAnti-collision Components.	➔	 
[11] 2xFasteners.	➔	 
[12] 1xBottom Slider.	➔	
[13] 5xWall Plugs. [14] 5xScrews ST4.2x30.	➔	 




● Assembly



4

01


Size	L
52"(1321mm)	48"-52"(1219-1321mm)
56"(1422mm)	52"-56"(1320-1422mm)
60"(1524mm)	56"-60"(1422-1524mm)
68"(1727mm)	64"-68"(1625-1727mm)

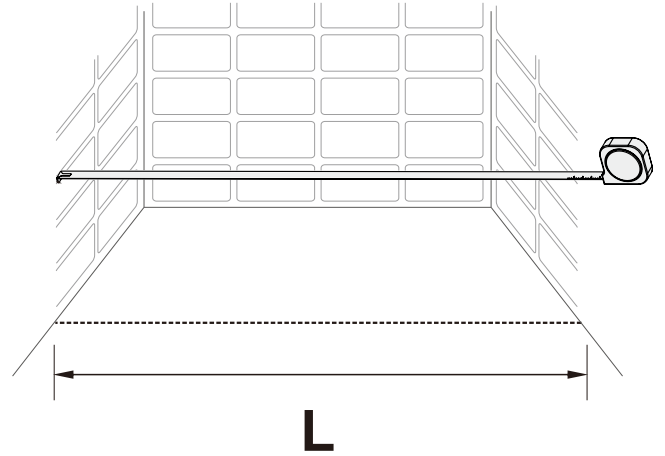



02





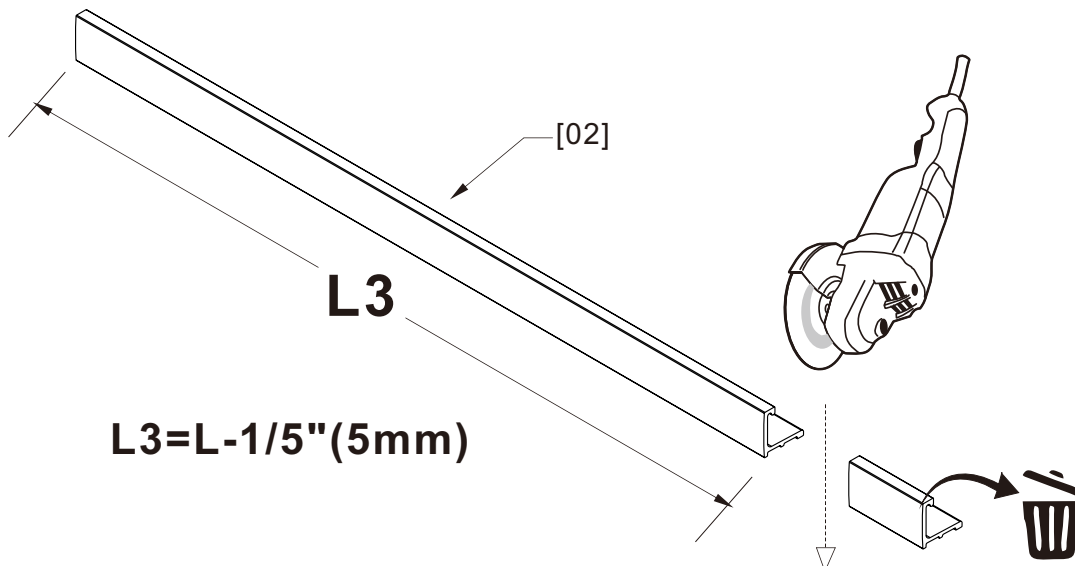
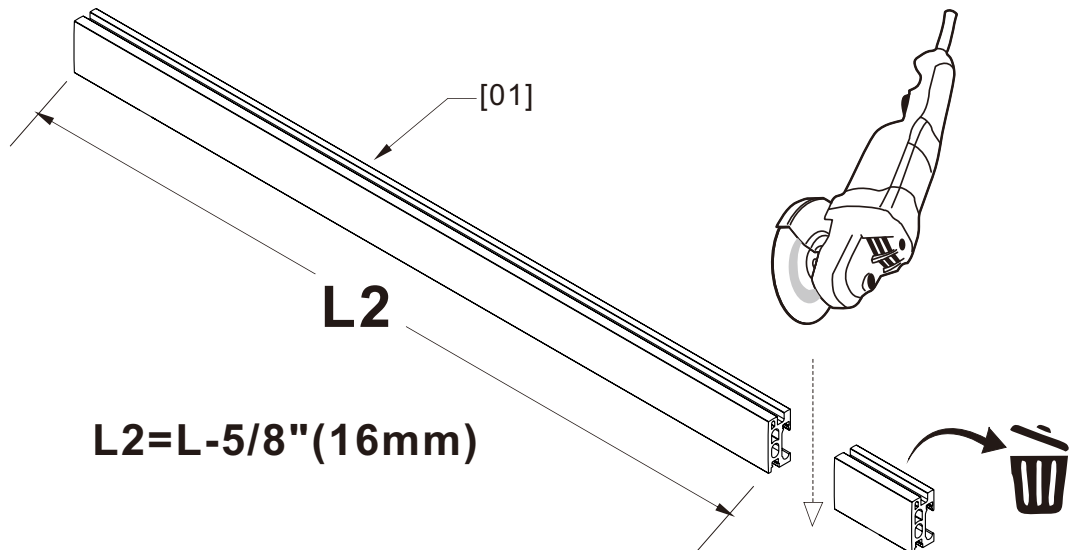


3.1

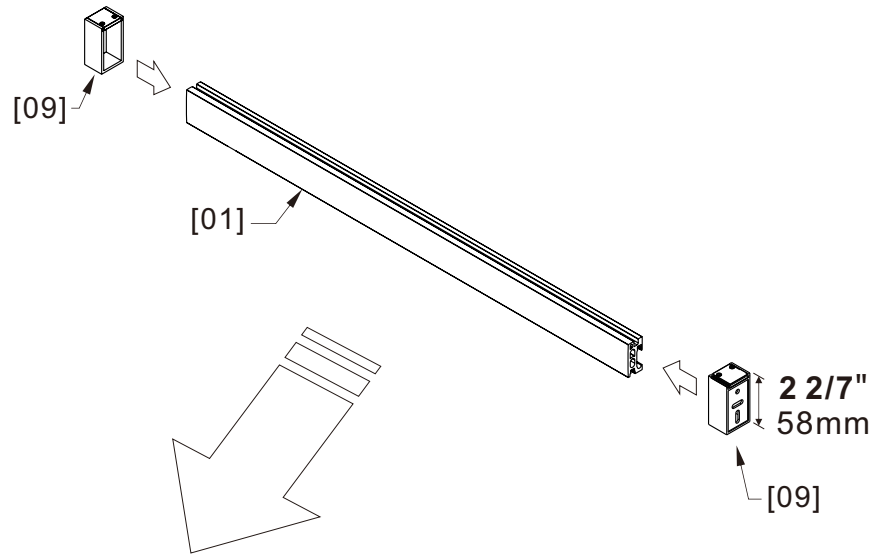


3.2

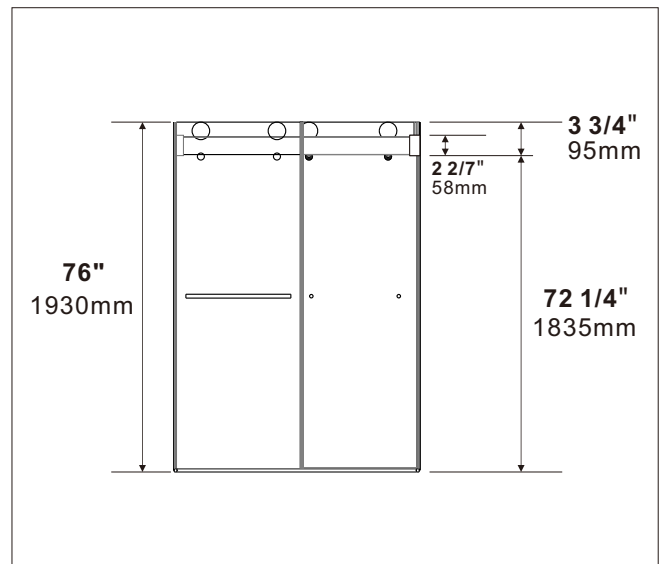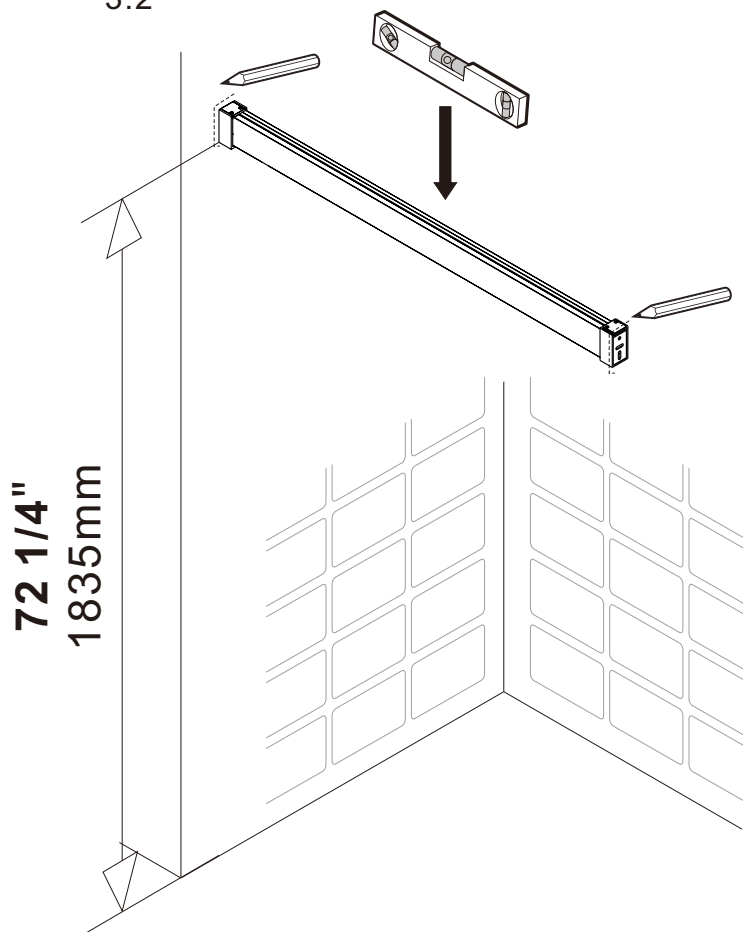


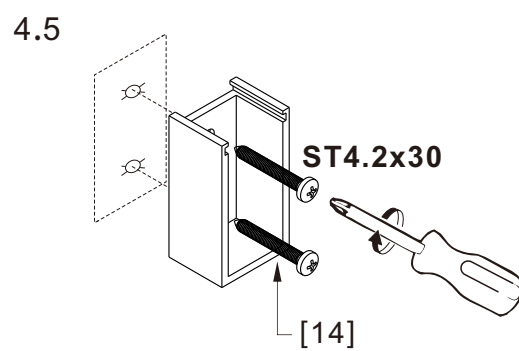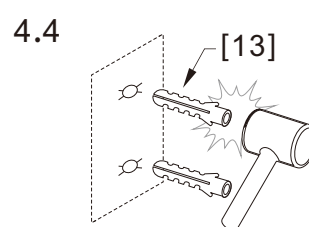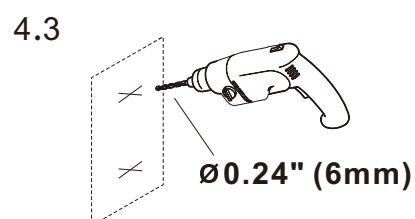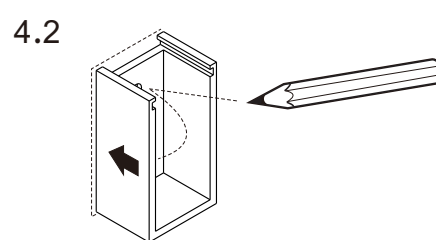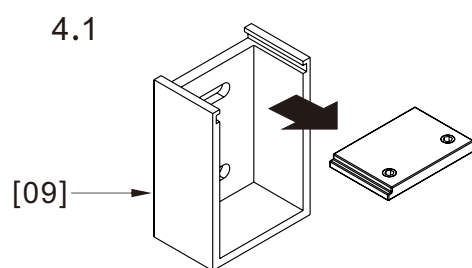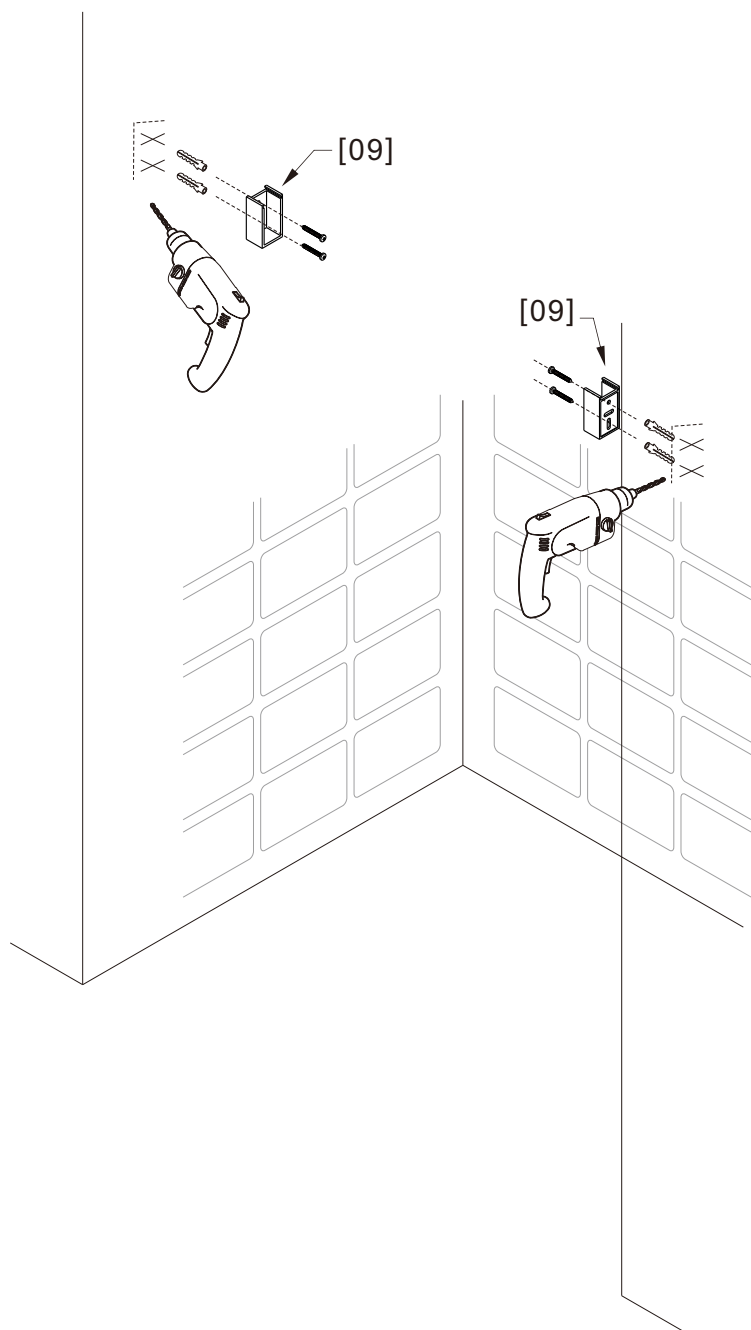


5.1

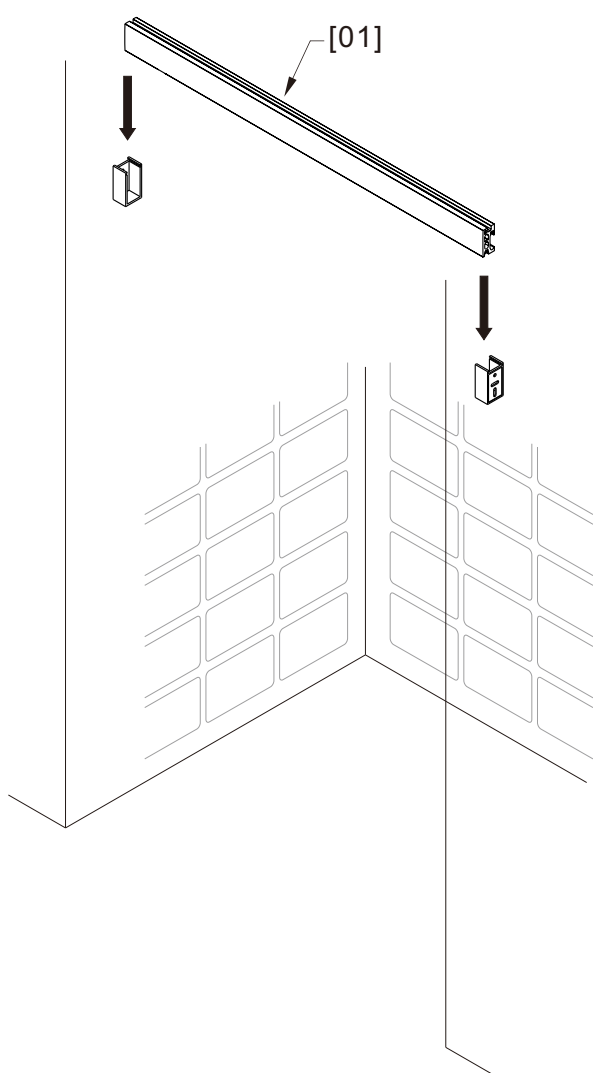


5.2

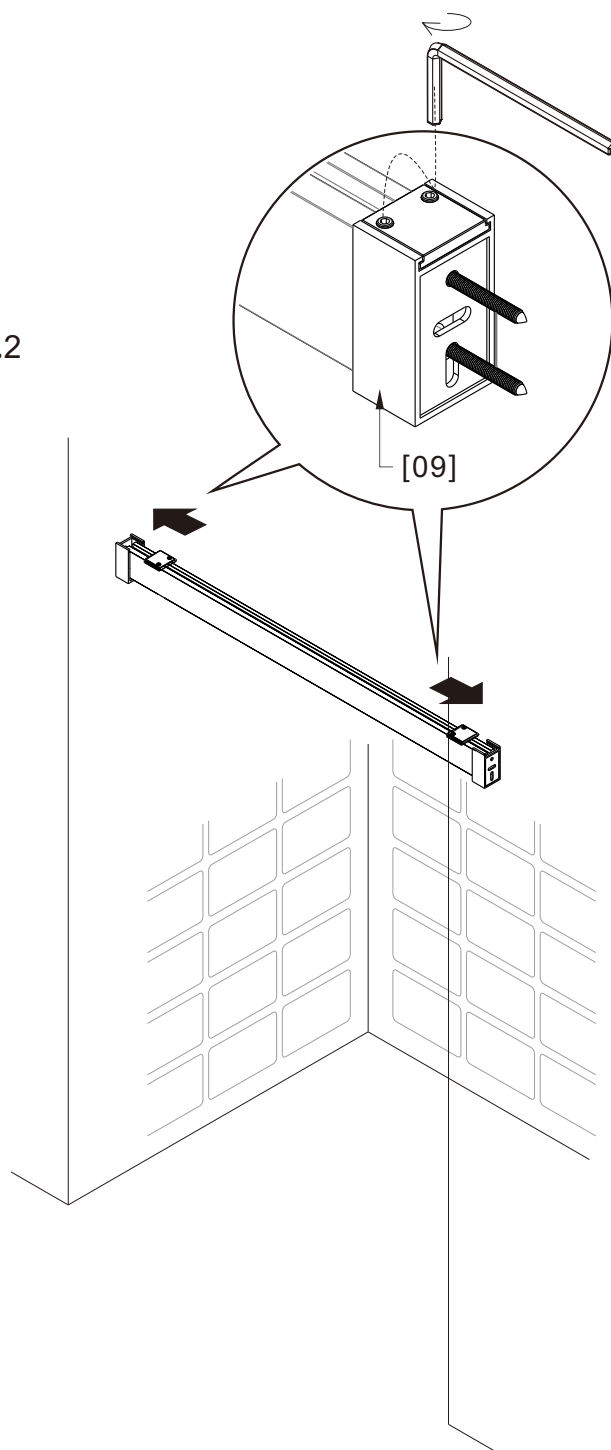



06

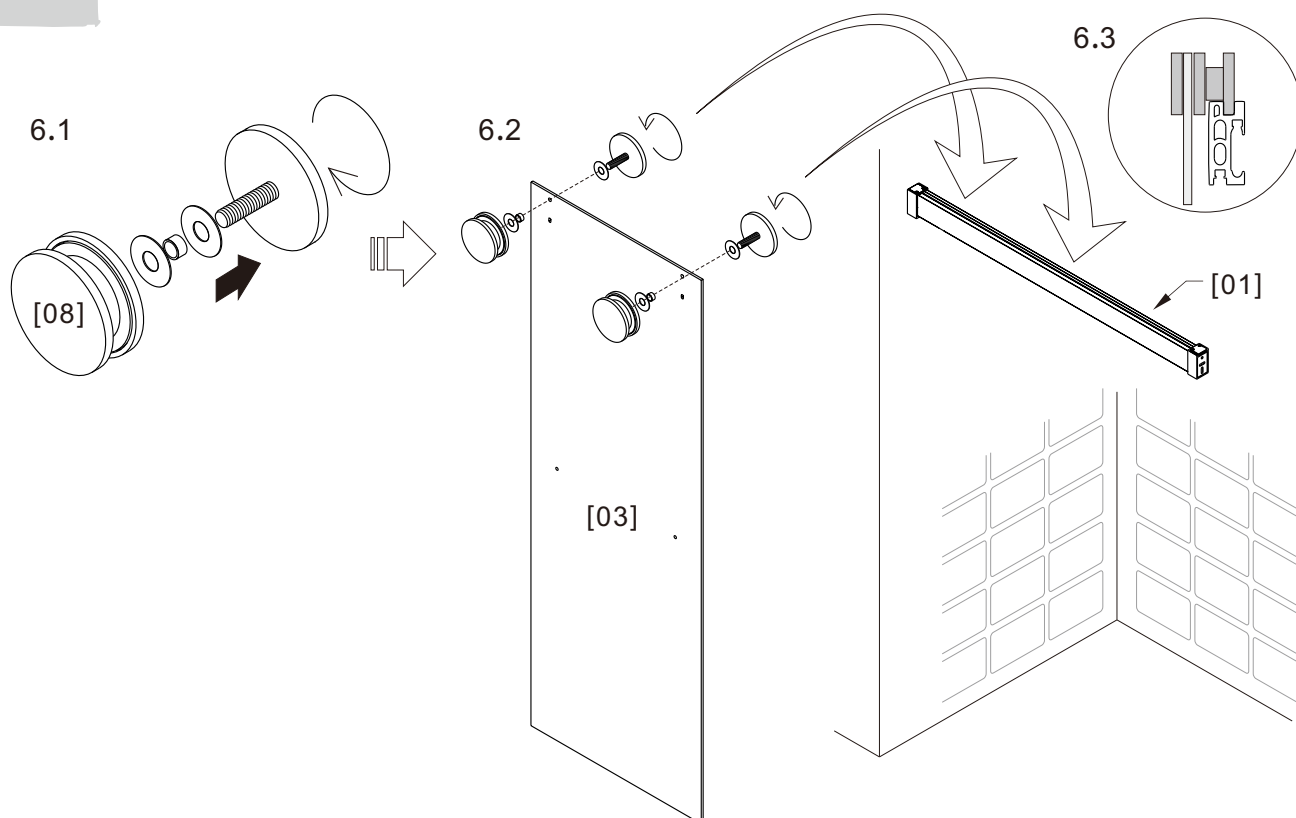

07

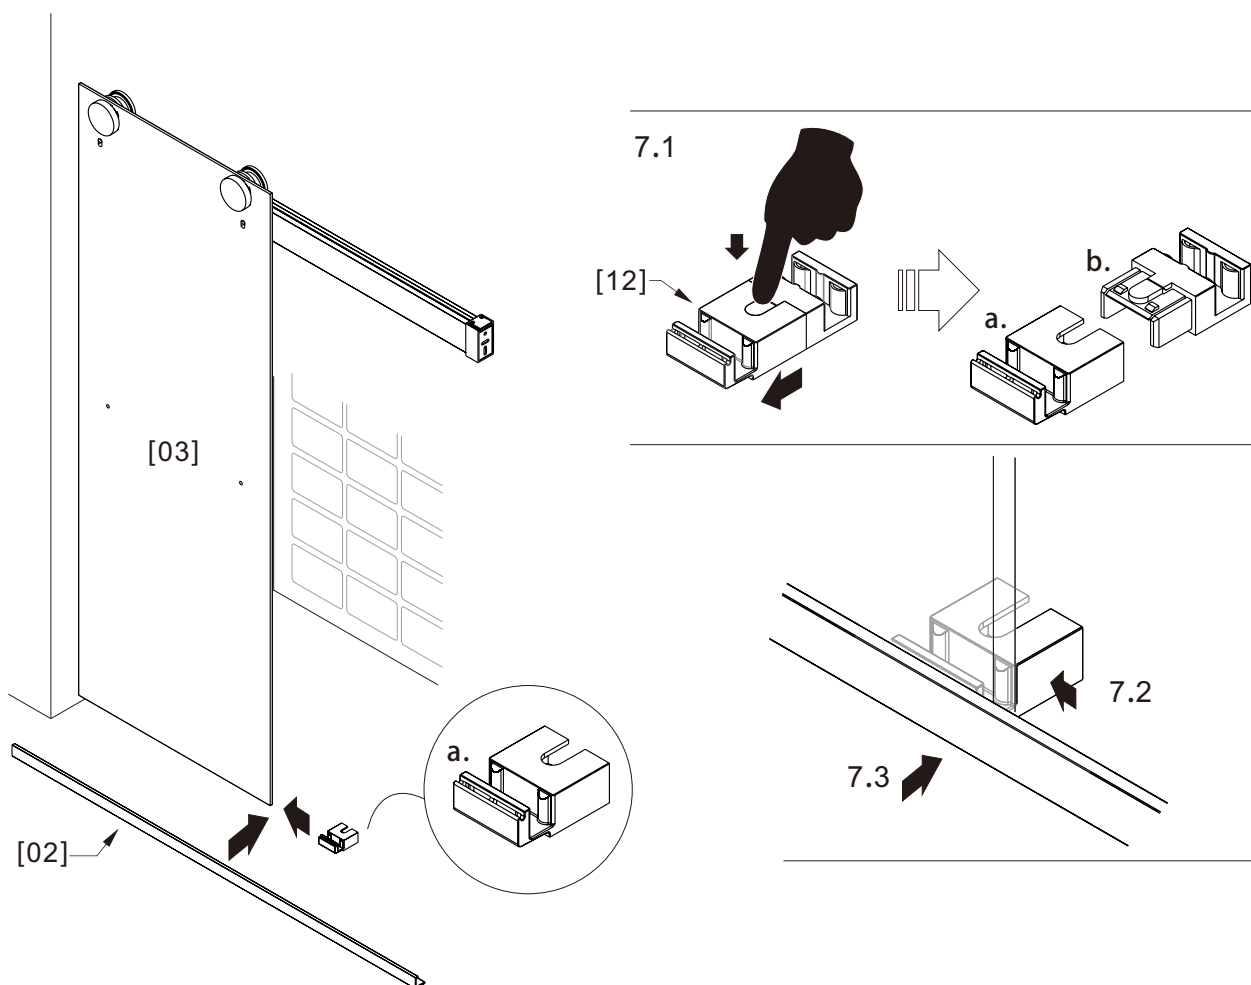


08

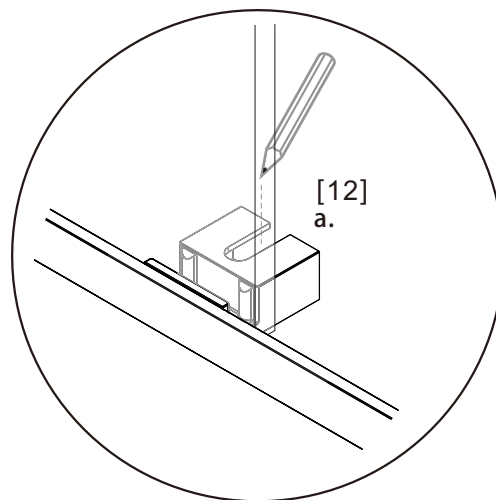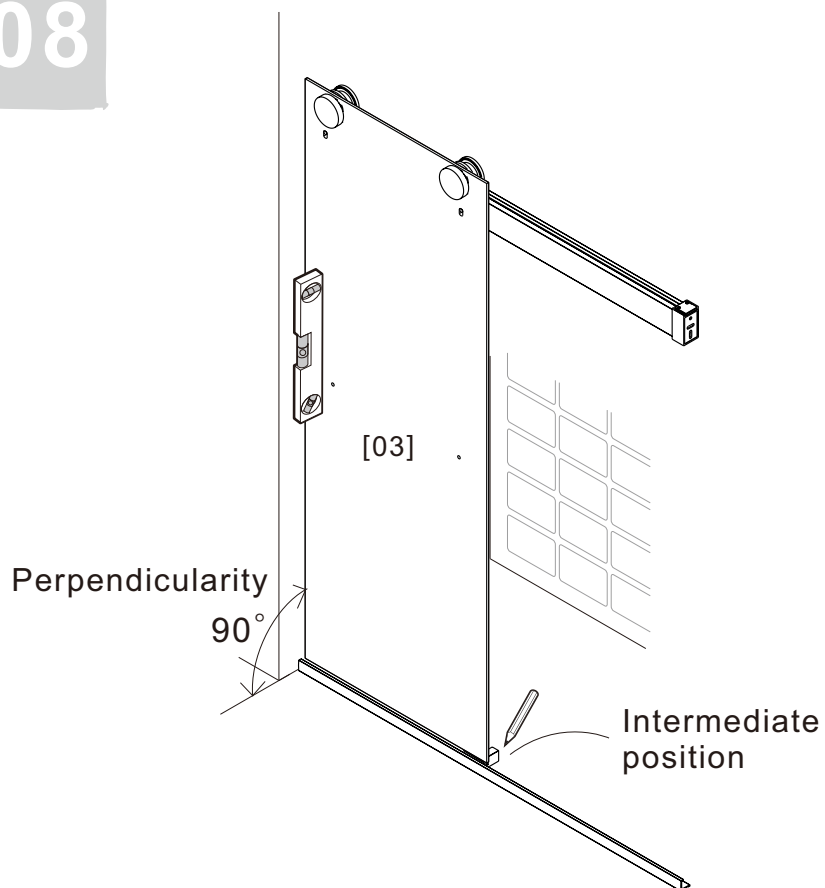




09


9.1

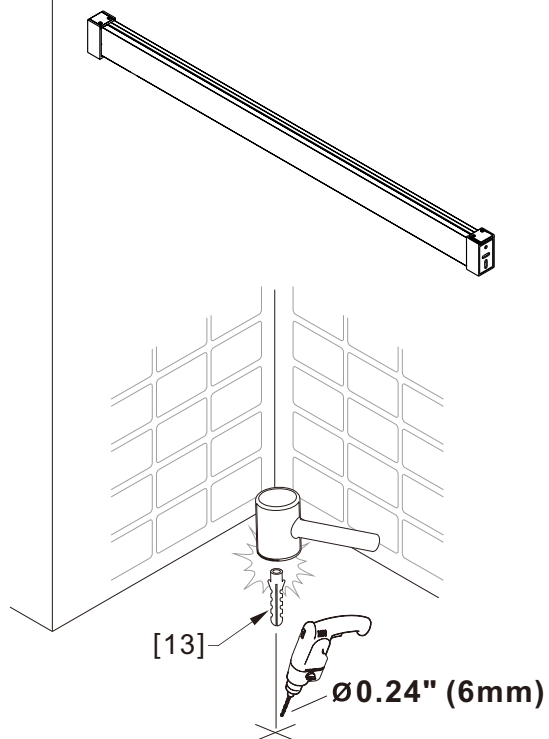


9.2

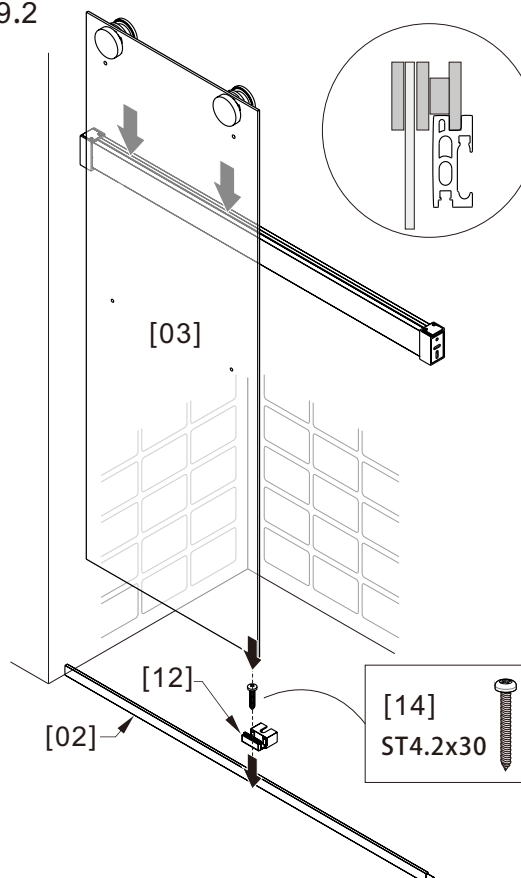

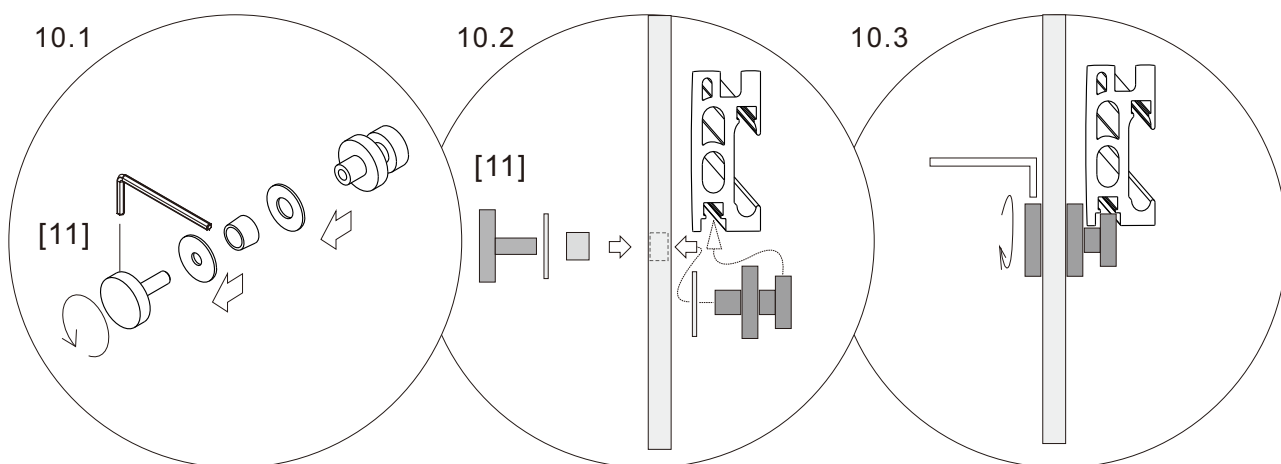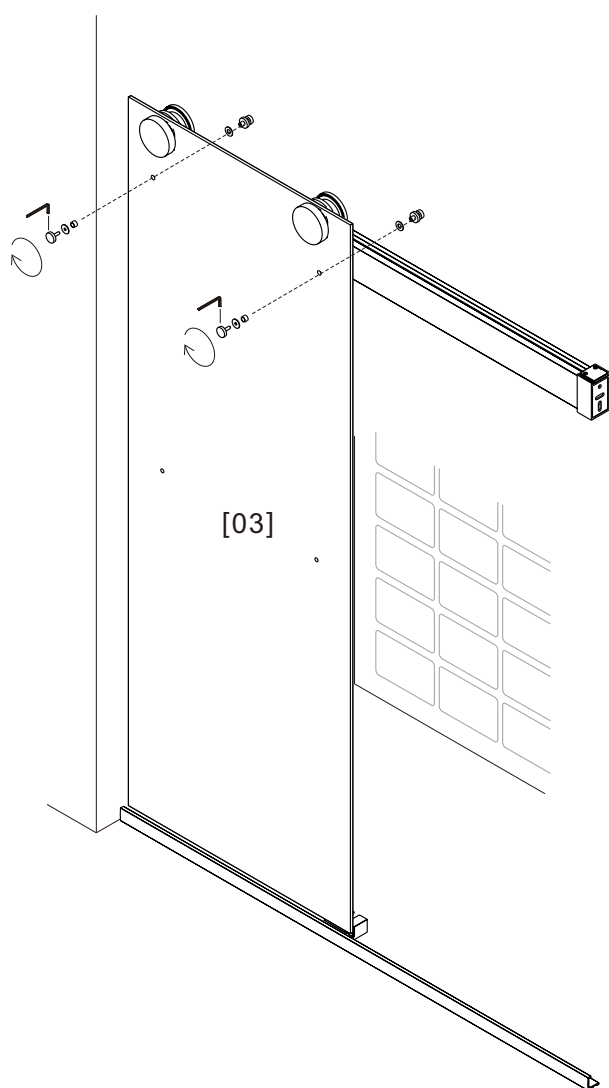


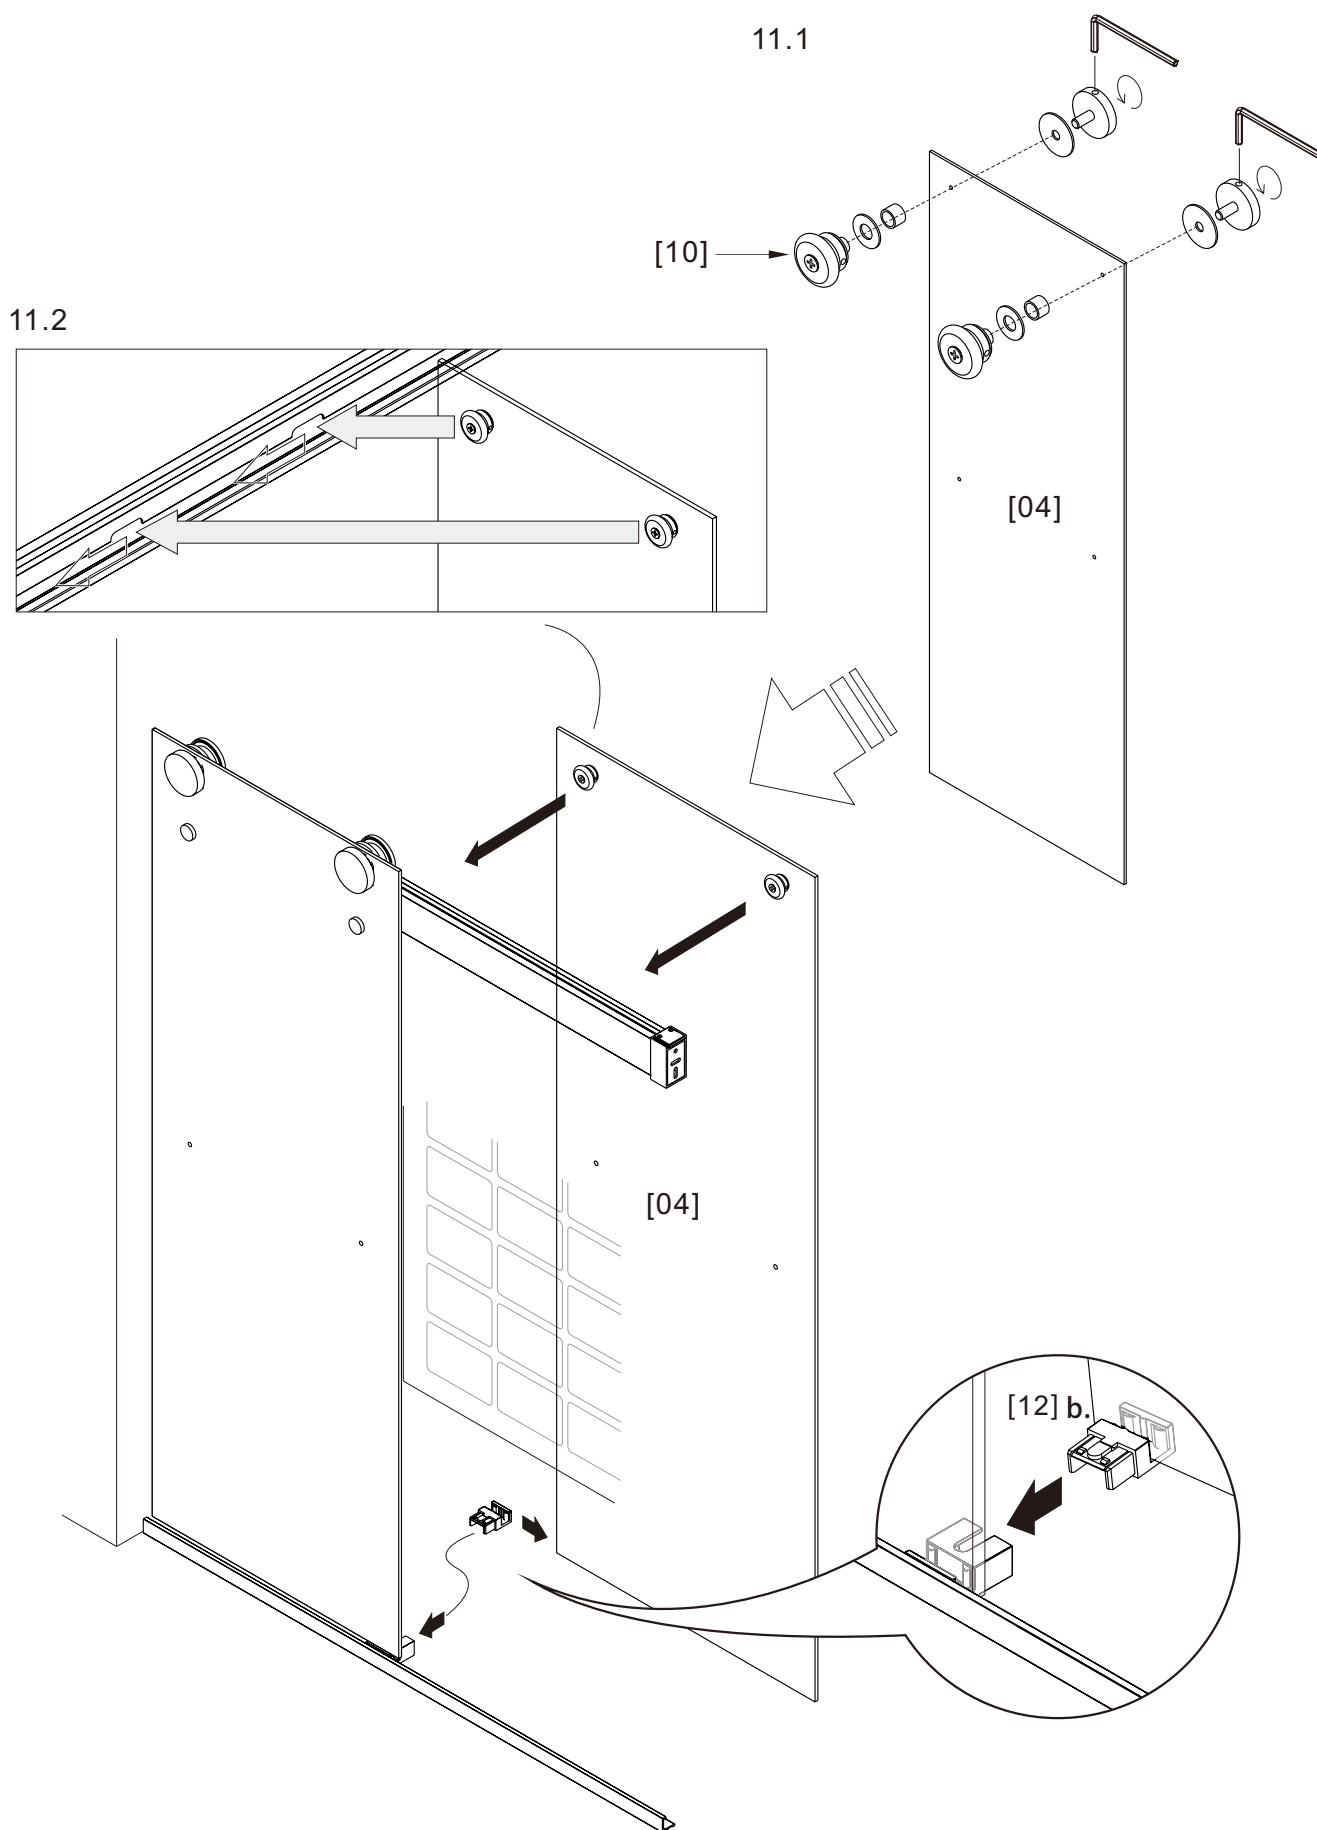



12

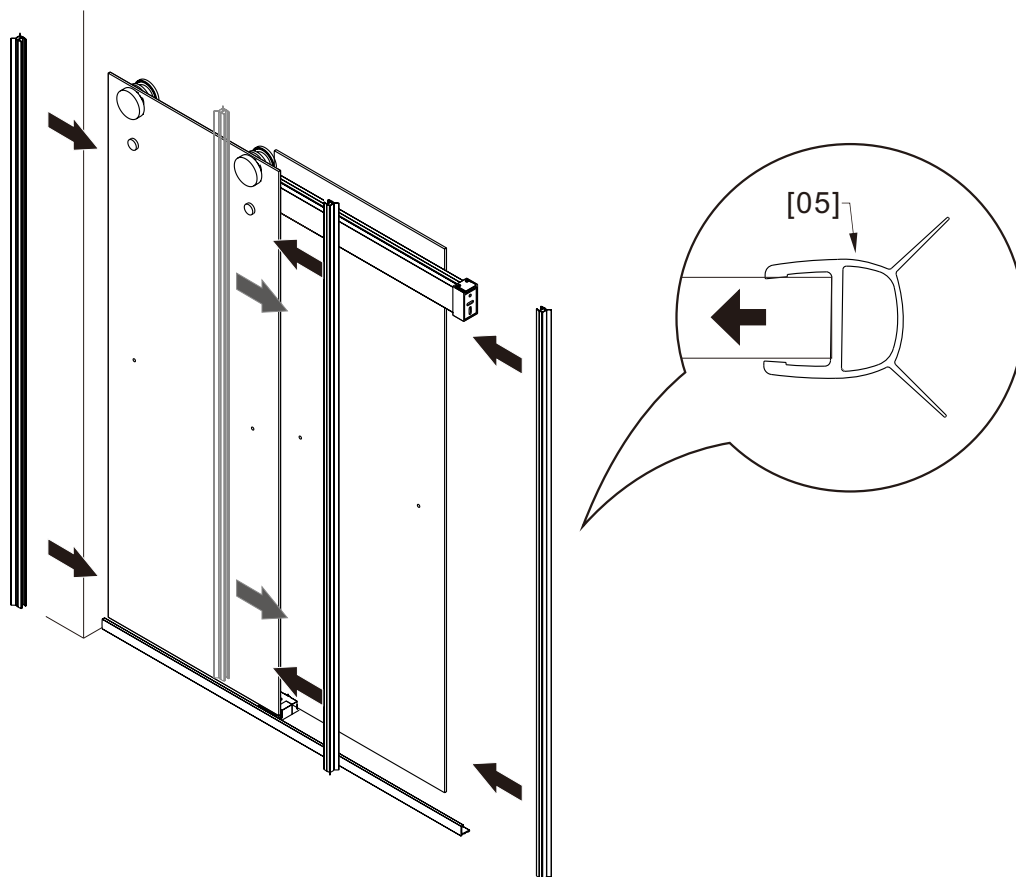

13

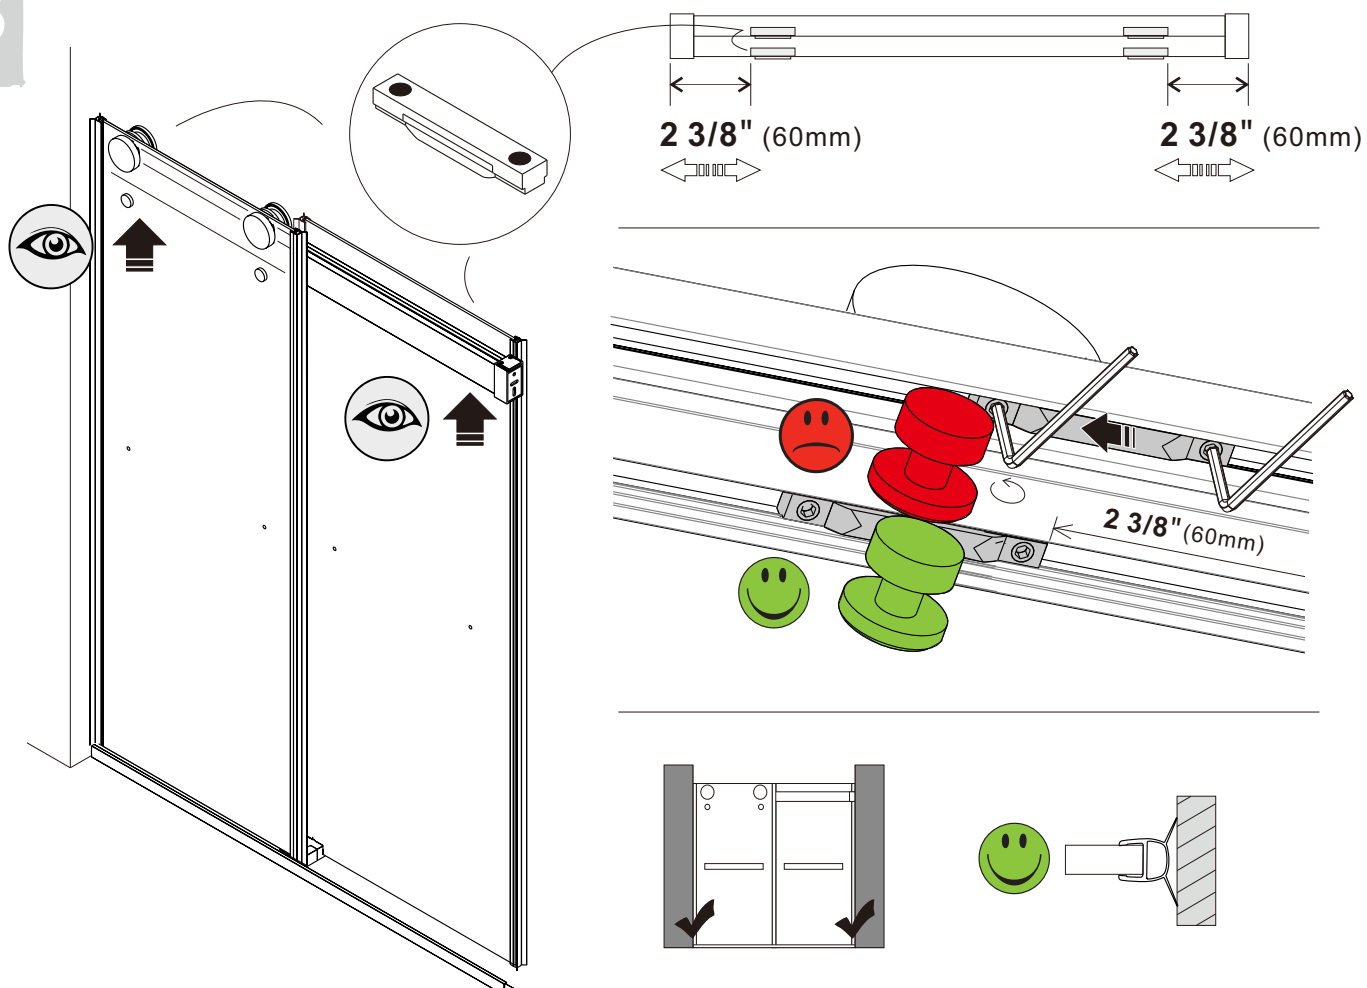

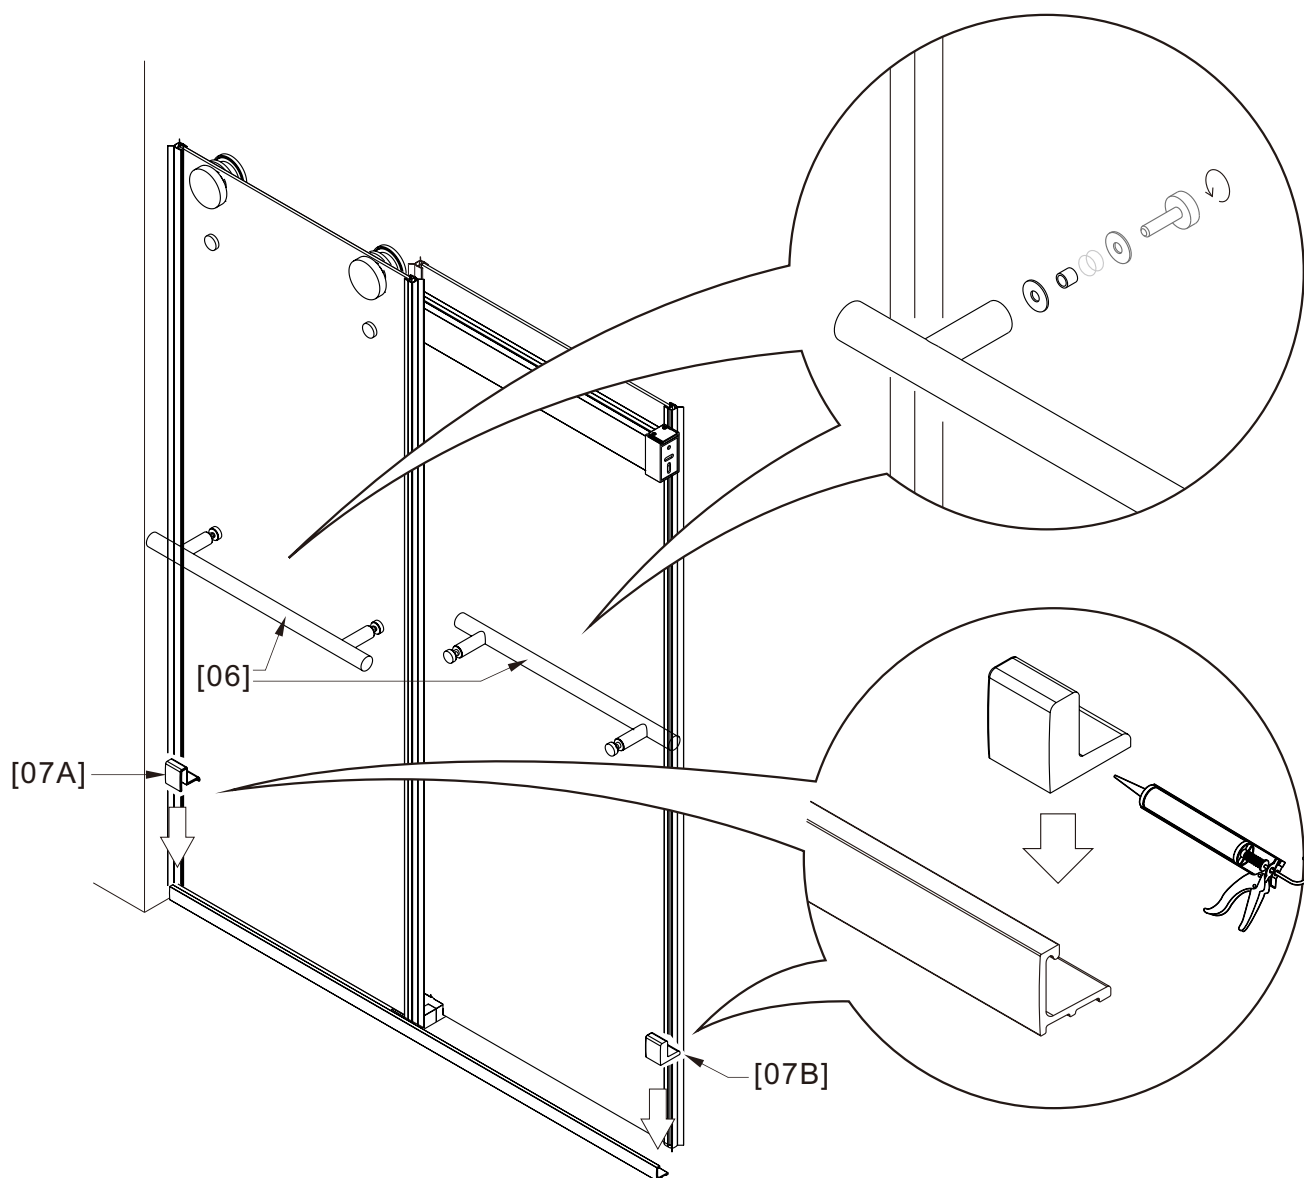

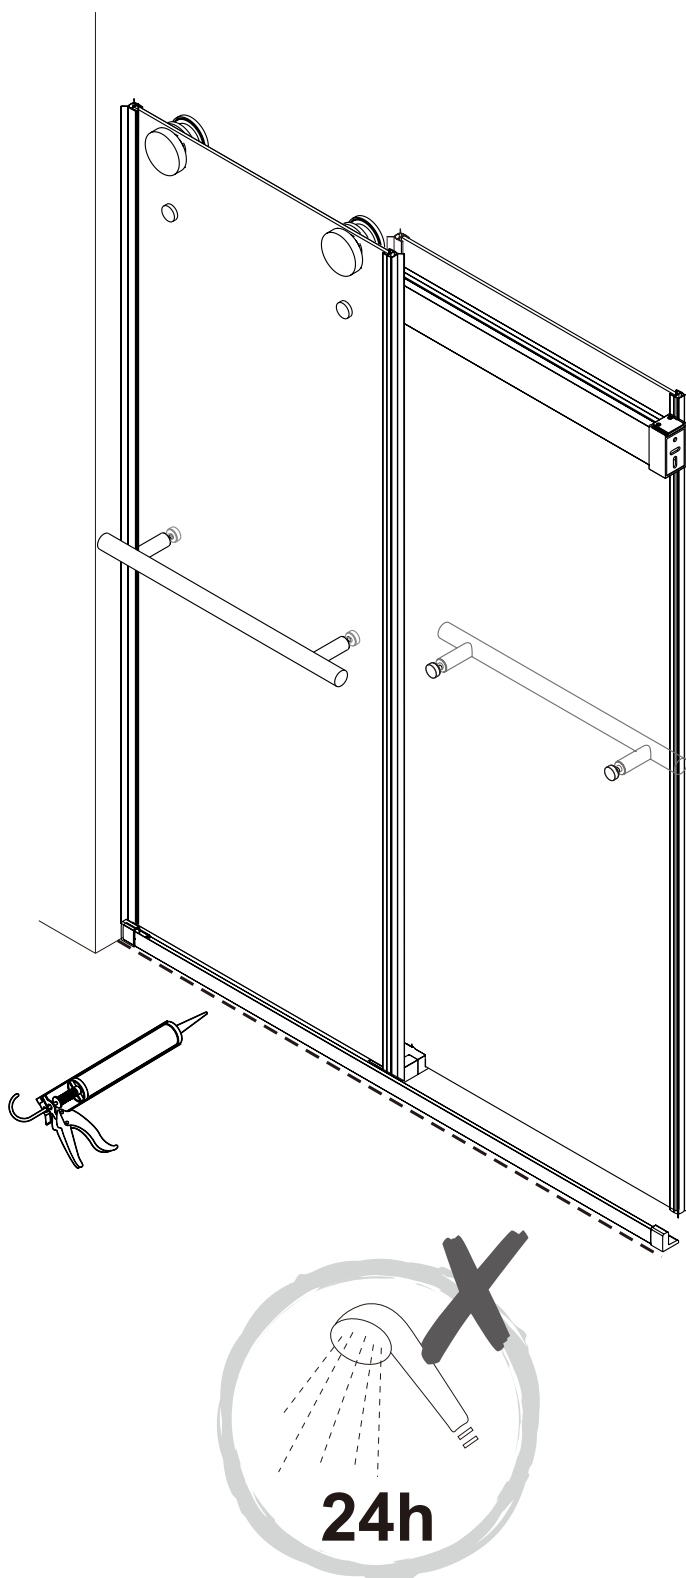

- Do not use the shower enclosure for at least 24 hours in order to allow the silicone sealant to cure fully.

