


# ALTAIR

FASHION BATHROOM LIFE

## BATHTUB SHOWER SCREEN INSTALLATION INSTRUCTION

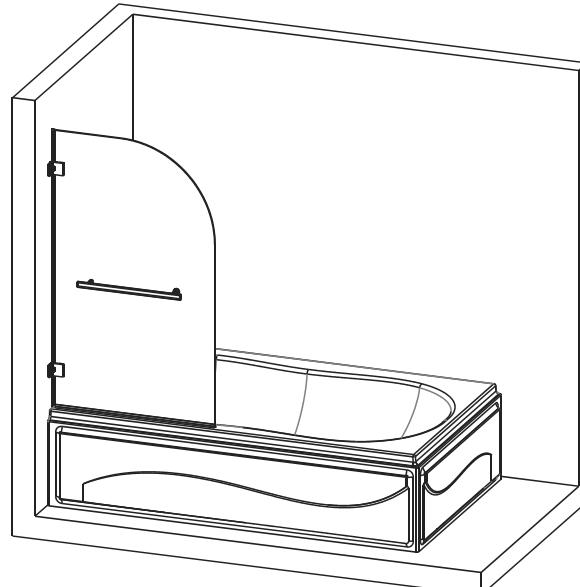


TS81134-HI-MB


With Anti-Shatter Film



IMPORTANT-Please  
read and follow all warnings and instructions before using  
this product. Injury can result from improper use. Save this  
documents.

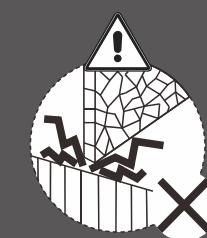

**WARNING**  
Tempered Glass, please  
don't hit the corners and  
the surrounding, otherwise  
the glass will burst.

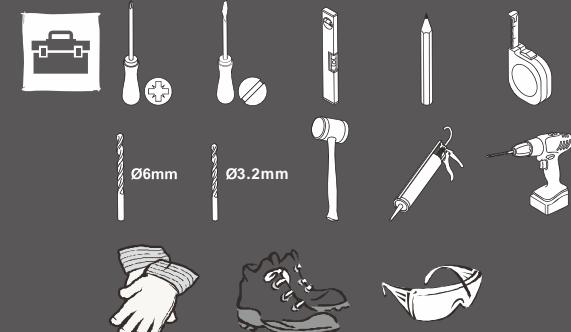

### ● General Information

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

#### **Notes: Safety glass can not be re-worked.**

Please read these instructions carefully before start of installation.

Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.

Note: This product is heavy and may require two people to install.

#### **Aftercare instructions**


After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up. Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.

Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.

Please keep these instructions for aftercare and customer service details.

ALTAIR  
FASHION BATHROOM LIFE

[www.altairdesignusa.com](http://www.altairdesignusa.com)

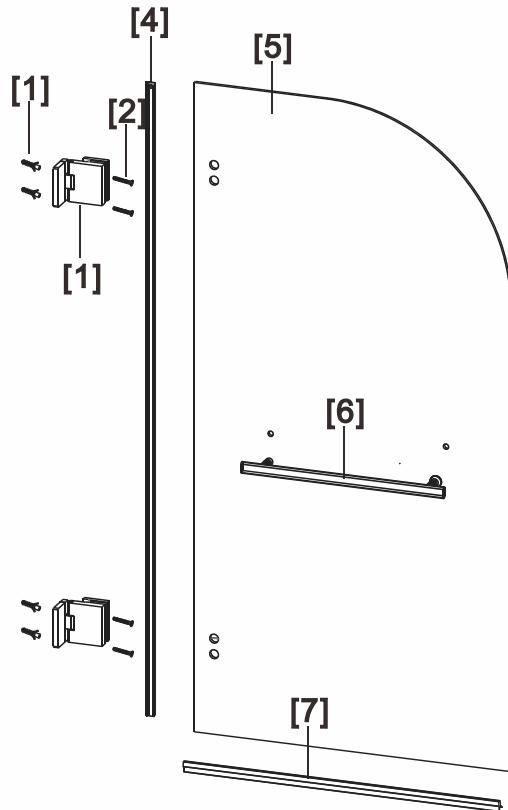

- [1] 4X Wall Anchor
- [2] 4X Screw ST M5X40mm
- [3] 2X Stainless Steel Hinge
- [4] 1X Side anti-water strip
- [5] 1X Glass panel
- [6] 1X Towel bar
- [7] 1X Bottom anti-water strip

## ● Box Contents:

- [1] 4X Wall Anchor



- [2] 4X Screw ST M5X40mm



- [3] 2X Stainless Steel Hinge



- [4] 1X Side anti-water strip



- [5] 1X Glass panel



- [6] 1X Towel bar





- [7] 1X Bottom anti-water strip





## Important Note

### Attention:

The Glass Shower doors include with anti-shatter film-on the reverse side of the certification printed logo.

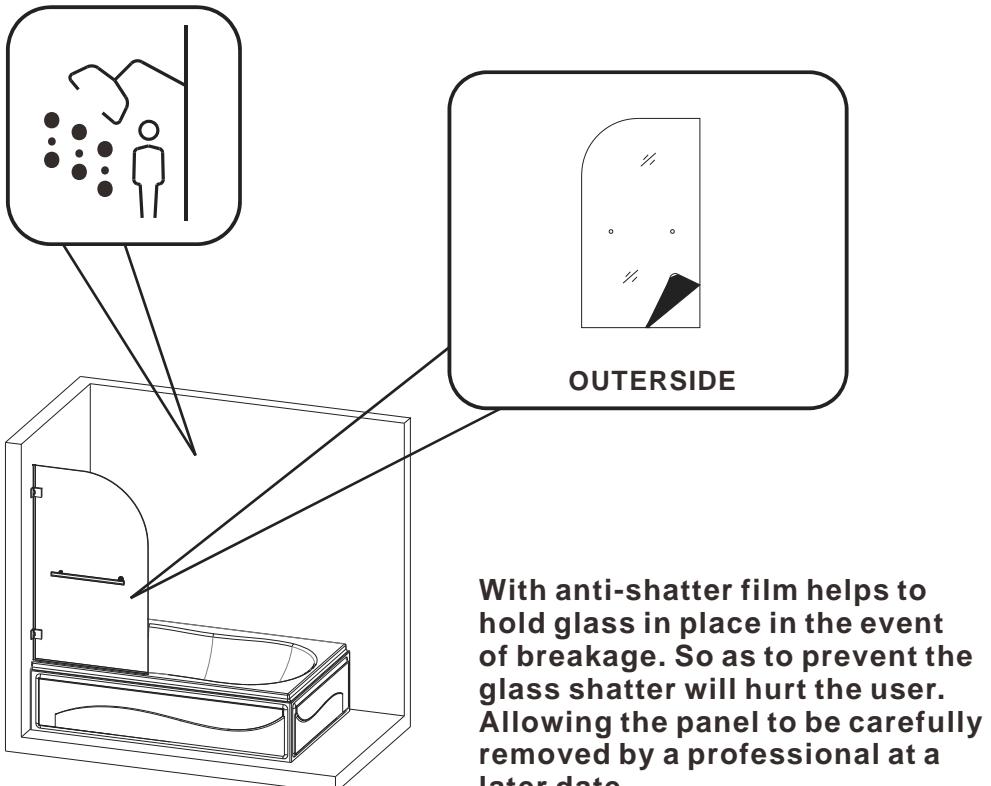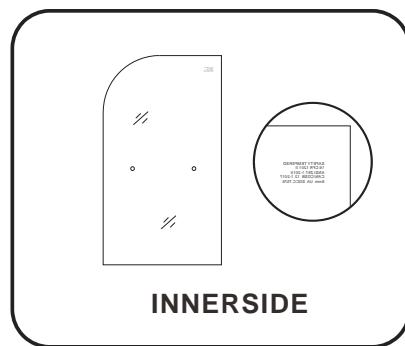

With anti-shatter film helps to hold glass in place in the event of breakage. So as to prevent the glass shatter will hurt the user. Allowing the panel to be carefully removed by a professional at a later date.

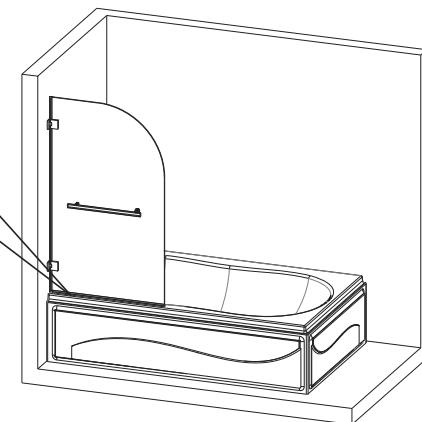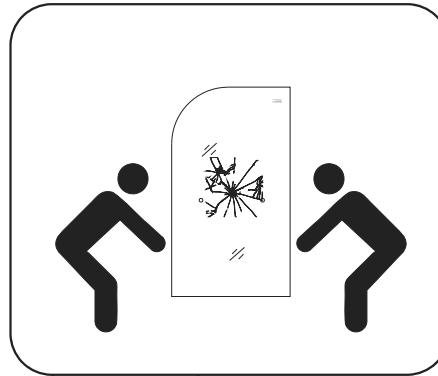



### In the event of breakage please follow the steps below.

1. If someone is inside the shower, move the panel slowly out of the way and exit the bathroom as soon as possible. Do not allow anyone to re-enter bathroom until prepared to remove and dispose of broken panel.
2. Utilize safety precautions such as a hard-hat, safety glasses, leather gloves, proper footwear and moving blankets to minimize risk of injury.
3. It is recommended that two people assist in the removal of the panel. One person to hold panel steady, and the other to un-install the hardware. Then carefully remove glass from shower and lay flat on cardboard or plywood until it can be removed. Once laying flat, a razor knife or box cutter can be utilized to cut the film and remove in smaller pieces.





● Assembly




01

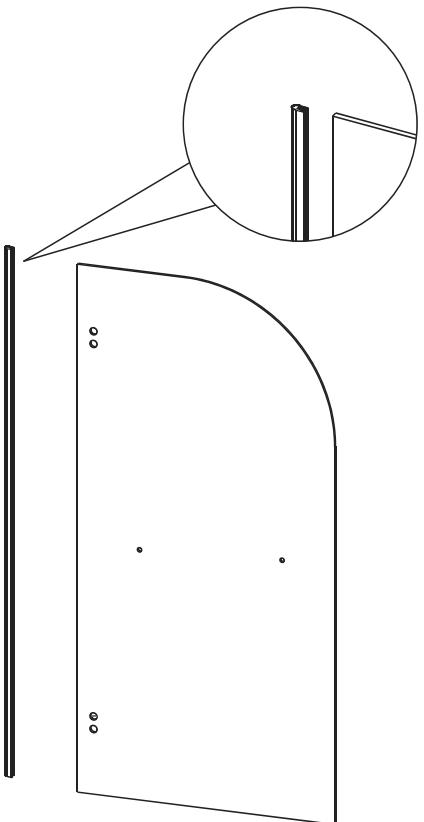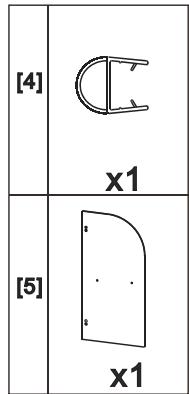

02





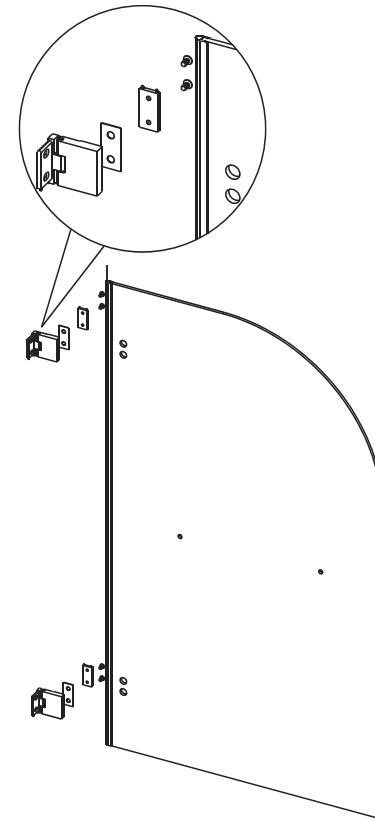
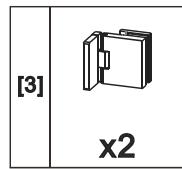


03

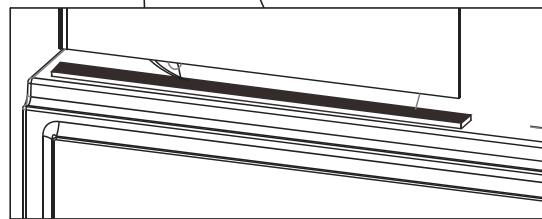
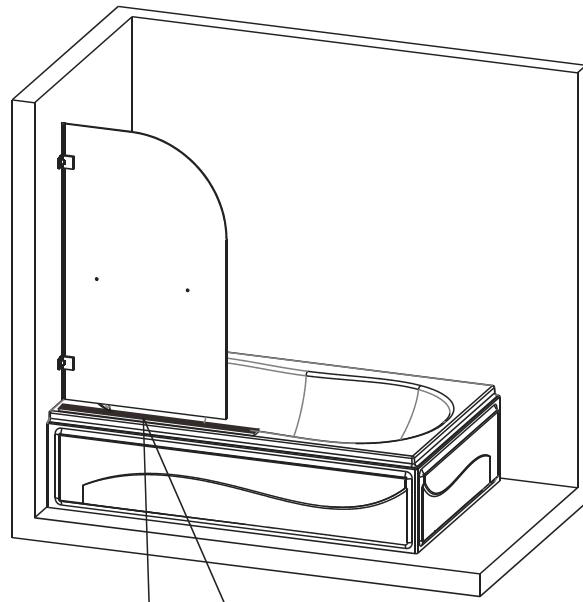
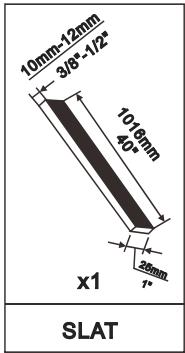


Please prepare a long slat 1016x25mm  
 @ 10~12mm (40"X1"@3/8"~1/2")thickness to hold on the  
 glass panel during the installation.

04

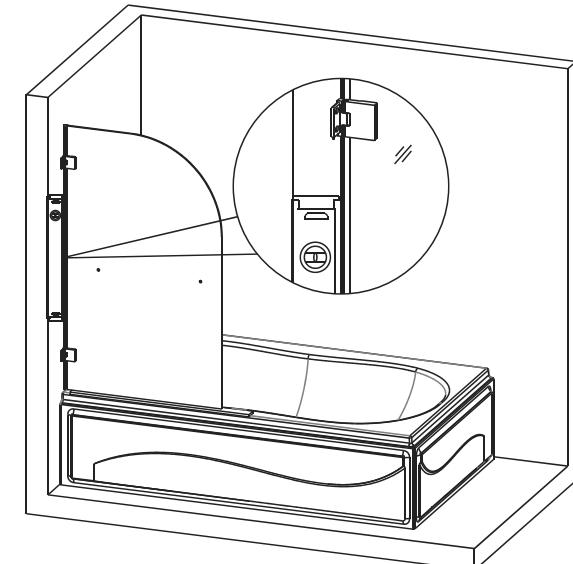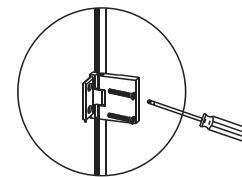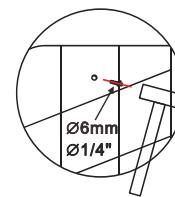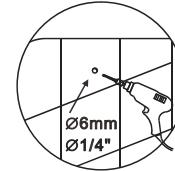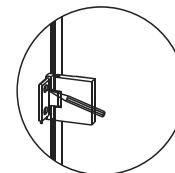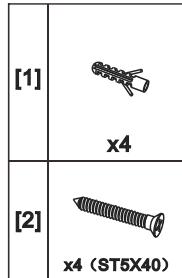

05

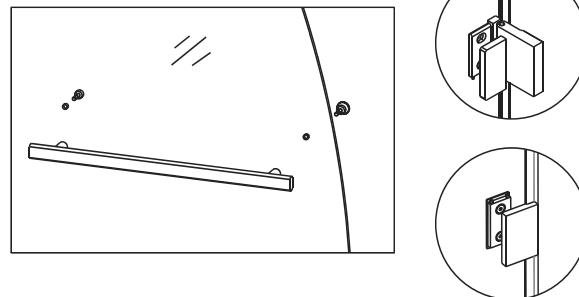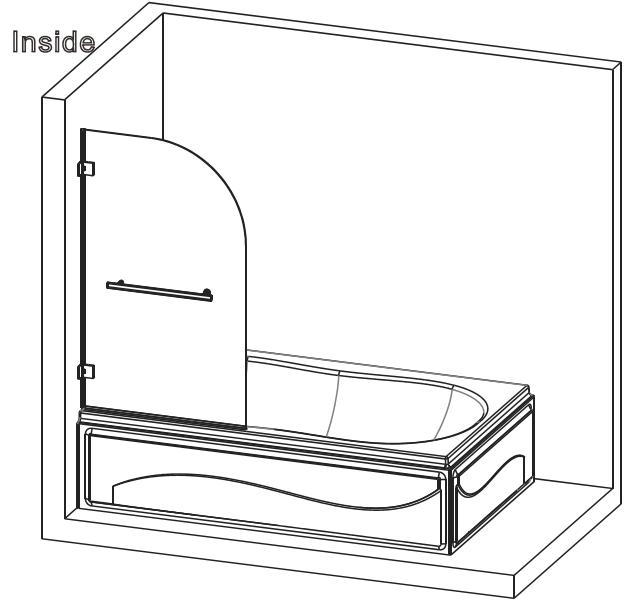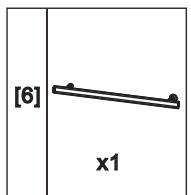

06

