
# ALTAIR

# **INSTALLATION INSTRUCTIONS**

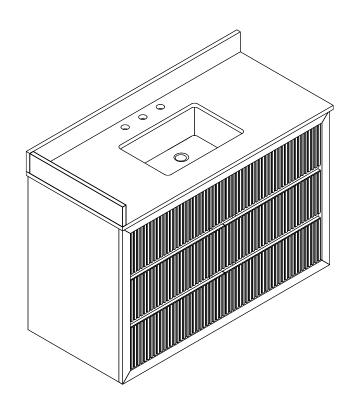

Model: 588048

# ARE YOU INSTALLING THIS PRODUCT?



If the product is not installed in accordance with these instructions, your

against you(the installer).

We recommend consulting professional help if you are unfamiliar with

We recommend consulting professional help if you are unfamiliar with installing bathroom vanities and/or plumbing.



IMPORTANT-It is the responsibility of the installer to make any adjustments to doors/drawers after installation if required.


There may have been some movement in transportation and installation which causes doors/drawers to become unaligned.

PLEASE RETURN TO HOME OWNER- IMPORTANT CARE & WARRANTY INFORMATION INSIDE.


For more information visit www.altairdesignusa.com

### Crate Storage and Care


 Keep the countertop and sink in its box until installation

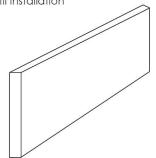

Do not stack anything on top of box

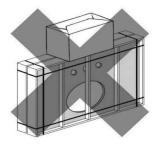

Store Crate vertically in safe location

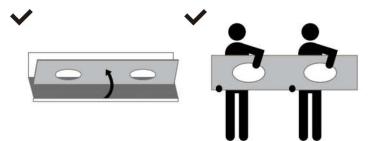



NEVER LIFT THE VANITY TOP FLAT



NEVER CARRY THE VANITY TOP FLAT

#### **Tools and Materials**













Tape Marker Measure


Level


Neutral Cure Silicone Sealant


Damp Cloth


Wood Shims


# **Main Body Parts**

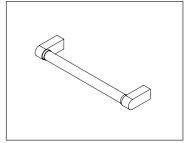

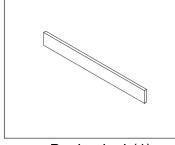

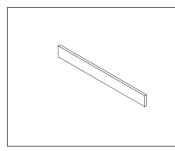

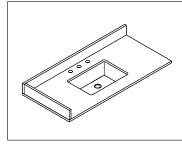

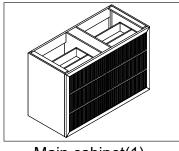

Hardware(0)


Backsplash(1)

Sidesplash(1)


Top&Basin(1)

Main cabinet(1)


### **Cabinet Installation**

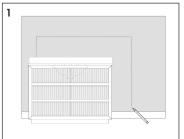


Determine location of where you would like to install your vanity.

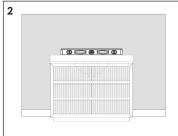


Place vanity in the installation location. Check that vanity cabinet is level.

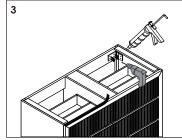


Apply a bead of adhesive silicone onto each edge of cabinet top. You can leave the EVA buffer strip or tear it off, before gluing the top. Secure the main cabinet to the wall.

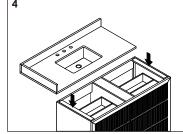

Place ALTAIR vanity top onto the cabinet, making sure vanity is seated properly.

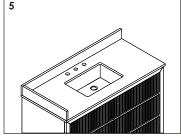



Do not use the vanity for at least 24 hours, in order to allow the glue to cure fully.

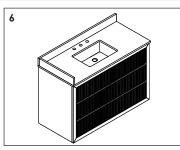



Disassemble drawer handles inside and install on drawer panel (Please disregard if the handles are installed properly).


# Slider/Drawer Adjustment

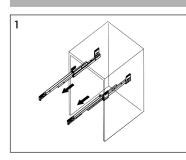

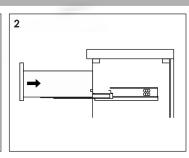


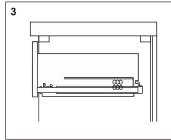


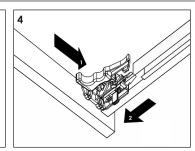


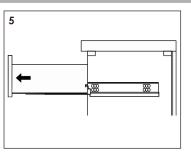

# **Hinge/Door Adjustment**

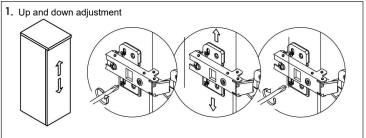

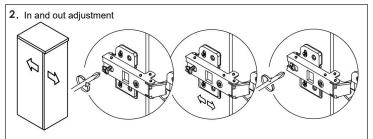

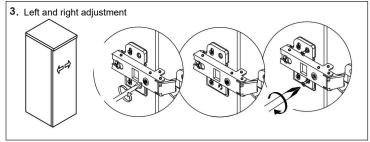

### **Dimensions**

