


Recommended Tools

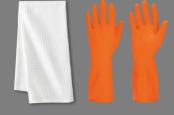









Masking Tape

Sanding Paper 120

Dish Towel & Washing Gloves




Spray Bottle



Miter Saw with Diamond Blade



Utility Knife

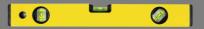

Level



01 Surface Preparation

- 1. Before installation, clean and clear surface with towel.
- 2. Keep area dry and cool before installation.




02 Measure and Plan the Installation

1. Draw a line from the highest countertop point.

This line will serve as a guide to install the first row of tiles.

2. Measure and mark the center on the level line previously drawn.



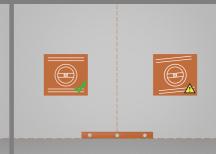





Cutting Tips

- 1. Draw a non-permanent cutting line on the face of the tile.
- 2. Cut the tile along the line drawn.
- 3. Sand the cut edge to soften the edges.





04 Laying Mosaics

- 1. Before laying the mosaics, mix water with 1 to 2 teaspoons(s) of mild dishwashing liquid into a 500ml to 750ml spray bottle.
- 2. Place the tile (pre-cut if needed) with the material side facing the countertop and remove the protective paper.
- 3. Spray a small amount of the mixture onto the adhesive and spread over the whole surface.

4. Stick and center the first tile over the level line previously drawn, and hold the tile in place for a few seconds.







ALTAIR DESIGN. INC. www.altairdesignusa.com 1431 S. BAKER AVE, ONTARIO, CA 91761





05 Finish and Grouting

- 1. Once all the tiles are in place, press tiles with a grout float to ensure adhesion is even.
- 2. Stick masking tape between the edges and countertop.

3. With the color of your choice, use a silicone finish to fill in space and create a professional finish of the edges.



