






STOP, please make sure the cabinet is level before installing the countertop

COMPONENTS	TOOLS REQUIRED	HARDWARE
<ul style="list-style-type: none">CountertopSink basin(s)Backsplash	<ul style="list-style-type: none">Permanent markerCaulking gun + Silicone	<div><div><div>A</div><p>Wing nut bolts (4)</p></div><div><div>B</div><p>Washers (4)</p></div><div><div>C</div><p>Undermount clips (4)</p></div></div>




STEP 1 - PLACE & TRACE

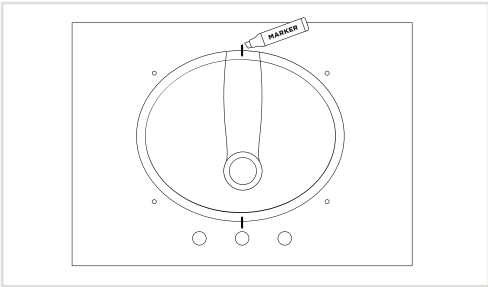Place the sink basin on the underside of the countertop, face down. Make sure it is centered over the opening in the countertop. Draw two guiding lines at the topmost and bottommost positions of the sink, intersecting both the countertop and the sink for positioning purposes.

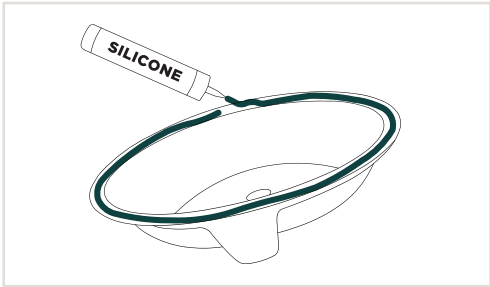


STEP 2 - PREPARE SINK BASIN

Using a caulkung gun, apply an ample amount of silicone glue of your choice to the top side of the sink basin edge.

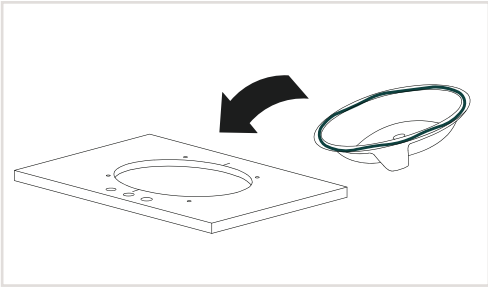


STEP 3 - FLIP & SET IN PLACE

Carefully flip the basin over and place it so the guiding lines matches up between the sink and the counter-top.

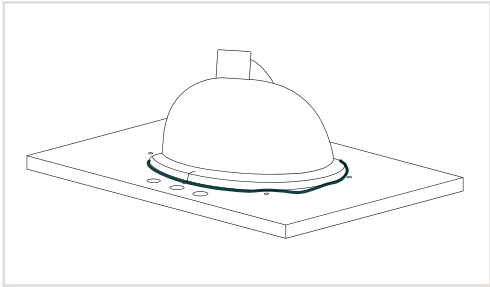


STEP 4 - DRY & SET

Press down on the sink basin to seal the silicone. Remove any excessive silicone on the outer edge. Follow the recommended drying time found on your silicone product, typically 12 to 24 hours.

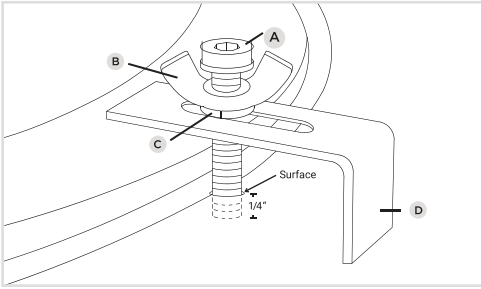


STEP 5 - ATTACH UNDERMOUNT CLIPS

Please tighten Bolt (A) into wing nut (B) slide on washer (C) and guide through Under-mount clip (D) opening into threaded bolt hole in the countertop. ONLY-Hand Tighten Bolt (A) to a depth of about 1/4" below countertop surface. Then secure the Sink with the under-mount clip (D) by Tightening wing nut (B) only

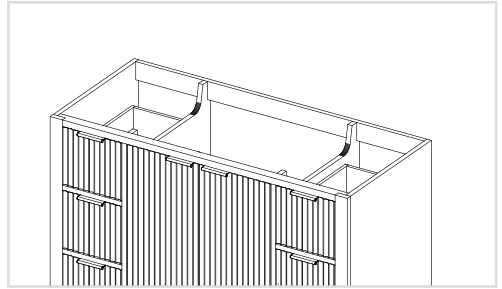


STEP 6 - ATTACH BASE CABINET TO WALL

Place cabinet in desired location and determine where the wall studs are.

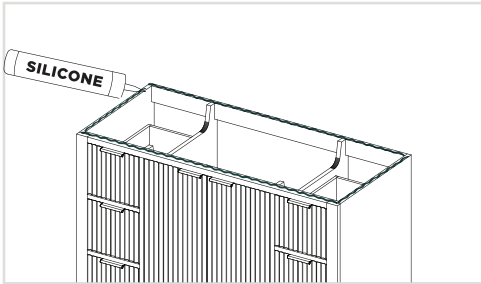


STEP 7 - PREPARE BASE CABINET

Using a caulking gun, apply silicone around the top of the base cabinet.

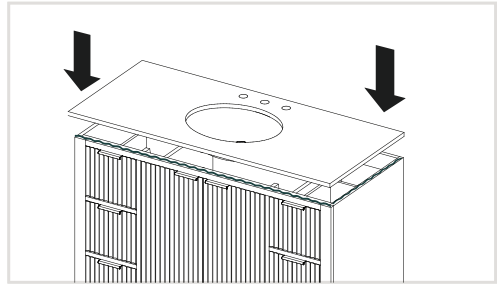

STEP 8 - SET COUNTERTOP IN PLACE

Carefully place the countertop, with the sink attached, onto the cabinet and press down firmly. Wipe away any excess silicone immediately.

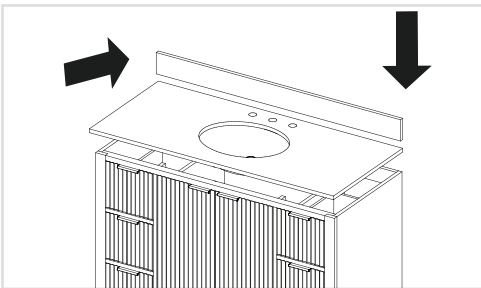

STEP 9 - SET BACKSPASH

After the vanity is in place, use a caulking gun to apply silicone to the back and bottom unfinished sides of the backsplash. Press firmly down and back to set in place. Remove any excess silicone.