


INSTALLATION GUIDE

ARIEL


STOP, please make sure the cabinet is level before installing the countertop

COMPONENTS	TOOLS REQUIRED	HARDWARE
• Countertop • Sink basin(s) • Backsplash	• Permanent marker • Caulking gun + Silicone	 A  B Wing nut bolts (4) Nuts (4)  C Undermount clips (4)

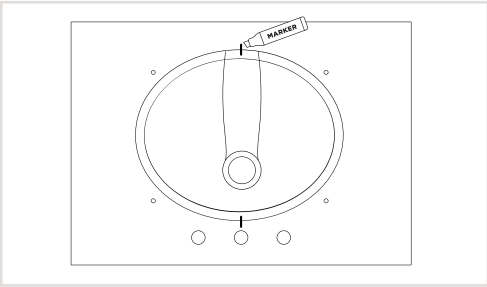


STEP 1 - PLACE & TRACE

Place the sink basin on the underside of the countertop, face down. Make sure it is centered over the opening in the countertop. Draw two guiding lines at the topmost and bottommost positions of the sink, intersecting both the countertop and the sink for positioning purposes.

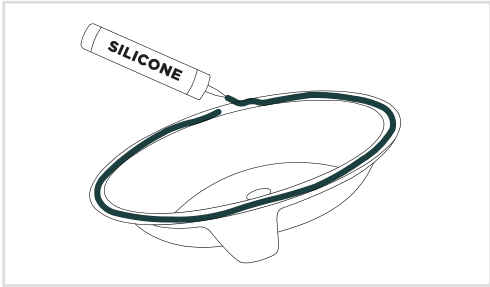


STEP 2 - PREPARE SINK BASIN

Using a caulking gun, apply an ample amount of silicone glue of your choice to the top side of the sink basin edge.

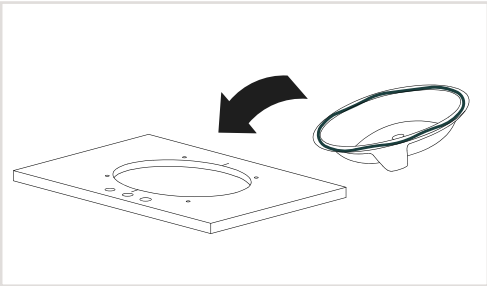


STEP 3 - FLIP & SET IN PLACE

Carefully flip the basin over and place it so the guiding lines matches up between the sink and the countertop.

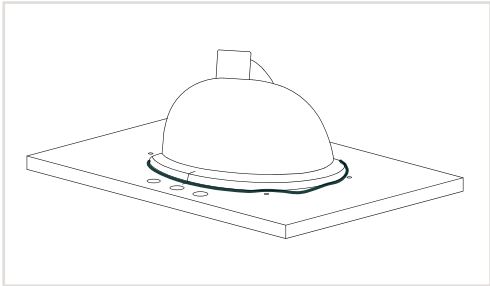


STEP 4 - DRY & SET

Press down on the sink basin to seal the silicone. Remove any excessive silicone on the outer edge. Follow the recommended drying time found on your silicone product, typically 12 to 24 hours.

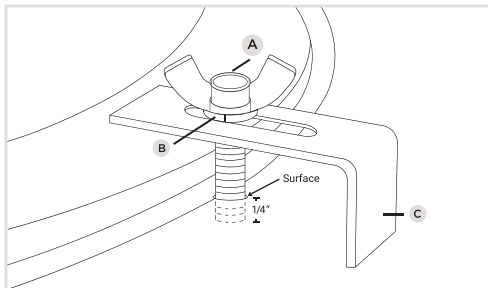

STEP 5 - ATTACH UNDERMOUNT CLIPS


Please insert the Wing Nut Bolt (A) through the Nut (B) and then guide it through the opening of the Undermount Clip (C). Insert the bolt into the threaded hole located on the underside of the countertop. ONLY Hand-tighten the bolt until the clip sits approximately 1/4" below the countertop surface. Ensure the Sink is aligned and secured in place by tightening the Wing Nut Bolt (A) as needed.

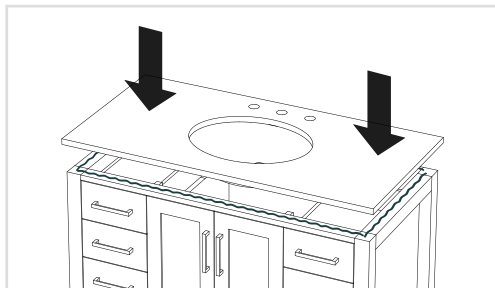

STEP 6 - SET COUNTERTOP ONTO YOUR CABINET

Apply silicone glue to the upper edge of your cabinet where it would meet the countertop. After the silicone glue has dried, flip the countertop and set on top of the vanity. Press down against the edges.

*Note: Cabinet is not included with this product. This guide is intended for installation of our countertop with your cabinet of choice.

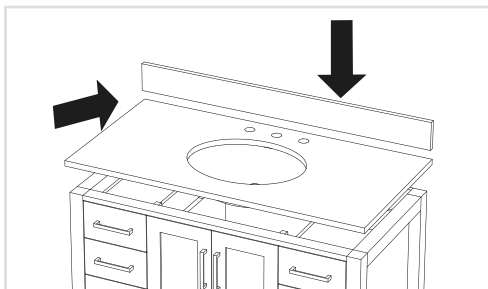

STEP 7 - SET BACKSPLASH

After the countertop is in place, apply silicone glue to the unpolished (roughed) bottom and back sides of the backsplash. Press down against the countertop and backward against the wall to set the backsplash in place. Remove any excessive silicone.




SCAN FOR DETAILS

HANDLE & KNOB INSTALLATION


REQUIRED TOOLS
(Not included)



Screwdriver

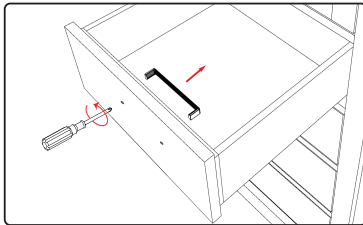

1. Open the drawer/door you will find the handle/knob attached inside, use a screwdriver to remove it to proceed with installation.

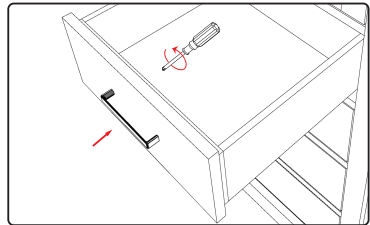


2. Use screwdriver to reinstall handle/knob in correct direction.

ADJUSTABLE SHELVES INSTALLATION

PARTS & ACCESSORIES INCLUDED

Adjustable shelf:




x2


Shelf pin:



x8
+2 extra

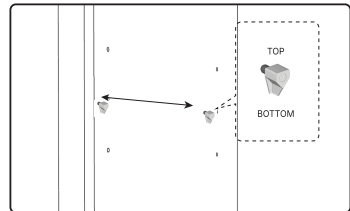


1. Attach 4 shelf pins into the pre-drilled locations. Make sure they are at the same level and properly positioned.

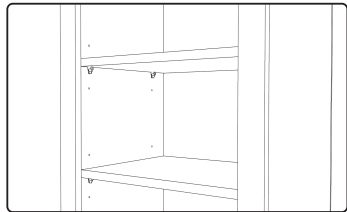

2. Place the shelf panel onto the shelf pins, and make sure it is level.



MISSING ANY?

Please find the accessories located inside at the bottom of the box.



TIPS!

You can tilt the shelf panels to easily place them inside.

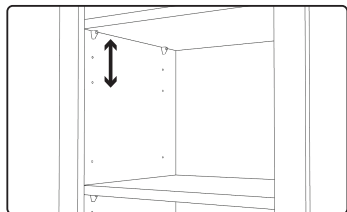

3. You can adjust the shelf panel to different levels to suit your needs.