

ASSEMBLY INSTRUCTIONS


ITEM #49961 | DALLAS DOUBLE SCONCE

ITEM DESCRIPTION

MATERIAL TYPE:STEEL/GLASS
 SOCKET TYPE: E12 CERAMIC
 BULB TYPE: TYPE G
 ITEM NET WEIGHT:

FINISH :ANTIQUE BRASS/OPAL
 SOCKET QTY:2
 BULB WATTAGE: 25W VOLTAGE:110V-120V

TOP COAT/SEALANT:

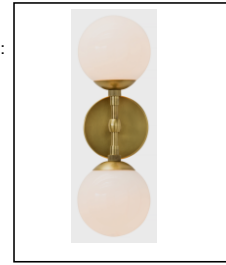


NOTE:

*YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON
 *THIS ITEM MAY REQUIRE PERIODIC TIGHTENING


PARTS

A	MOUNTING PLATE	1 PC
B	BACK PLATE	1 PC
C	GLASS SPHERE	2 PCS
D	SOCKET ASSEMBLY	2 PCS
E	METAL RING	2 PCS
F	PLATE SCREW	4 PCS


INCLUDED ASSEMBLY HARDWARE

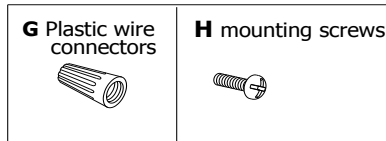

TOOLS NEEDED(NOT INCLUDED)



PRODUCT ASSEMBLY

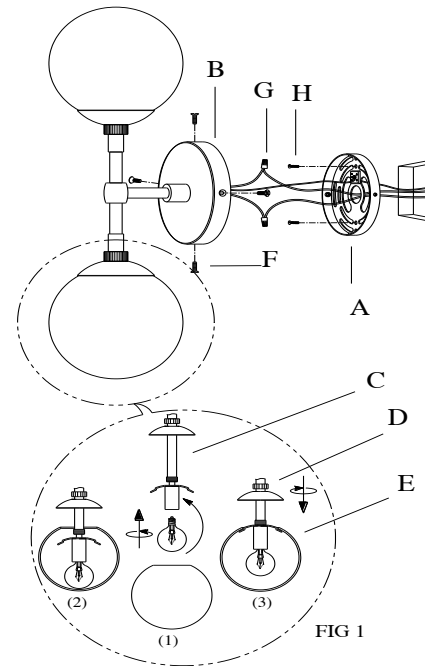

ASSEMBLY INSTRUCTIONS

- 1.REMOVE ALL PACKING CONTENTS AND PARTS FROM THE CARTON(S)CAREFULLY
- 2.PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY
- 3.TURN OFF POWER TO THE JUNCTION BOX WHERE THE LAMP WILL BE INSTALLED
- 4.PULL THE ELECTRICAL CORD OF "J BOX"THROUGH THE EXIT HOLE OF THE MOUNTING PLATE(A)
- 5.AS FIG 1,UNSCREW THE METAL RING(D) OFF THE SOCKET ASSEMBLY(C),INSERT TYPE G 25W BULB(NOT INCLUDED)IN THE SOCKET THEN ATTACH THE GLASS SPHERE(C) TO THE SOCKET PROPERLY,THEN SCREW THE METAL RING(D)TO SECURE THE GLASS SPHERE TILL TIGHT. REPEAT THE ABOVE OPERATON THE ANOTHER GLASS SPHERE.
6. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (G) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
7. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (G) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
- 8.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (G) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
9. GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX.
- 10.ATTACH THE MOUNTING PLATE (A) TO THE OUTLET BOX USING THE MOUNTING SCREWS(H).TIGHTEN WITH A SCREWDRIVER.
- 11.ATTACH THE BACK PLATE(B) TO THE MOUNTING PLATE(A) USING THE ENCLOSED PLATE SCREWS(F). TIGHTEN SCREWS WITH A SCREWDRIVER(I).
- 12.RESTORE POWER TO THE JUNCTION BOX AND TEST FIXTURE
- 13.INSTALLATION IS COMPLETE.

CARE & MAINTENANCE

DUST WITH A DRY CLOTH.

DISCLAIMERS

FOR CUSTOMER SERVICE QUESTIONS CALL 1.888.488.8866
 ARTERIORS HOME:972.488.9800

WE RECOMMEND THE INSTALLATION OF THIS ELECTIONAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ARTERIORS CONTRACT:972.488.9800 EXT.321

ARTERIORS