

ASSEMBLY INSTRUCTIONS

ITEM #89969 | Roxanne Flush Mount

ITEM DESCRIPTION

MATERIAL TYPE: STEEL FINISH :ANTIQUE BRASS TOP COAT/SEALANT:
 SOCKET TYPE: E12 BAKELITE SOCKET QTY:8
 BULB TYPE: TYPE B BULB WATTAGE: 40W or/CFL 10W or/LED 9W
 ITEM NET WEIGHT: VOLTAGE:110V-120V



UL COMPLIANT
 INSTALLATION ENVIRONMENT: SUITABLE FOR DAMP LOCATIONS


NOTE:

*YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON
 *THIS ITEM MAY REQUIRE PERIODIC TIGHTENING


PARTS

A	MOUNTING PLATE	1 PC
B	CANOPY	1 PC
C	Big Steel Wire Cluster	8 PCS
D	SOCKET ASSEMBLY	8 PCS
E	SML Steel Wire Cluster	16 PCS
F	FINIAL	1 PC
G	THREADING PIPE	1 PC

PRODUCT ASSEMBLY

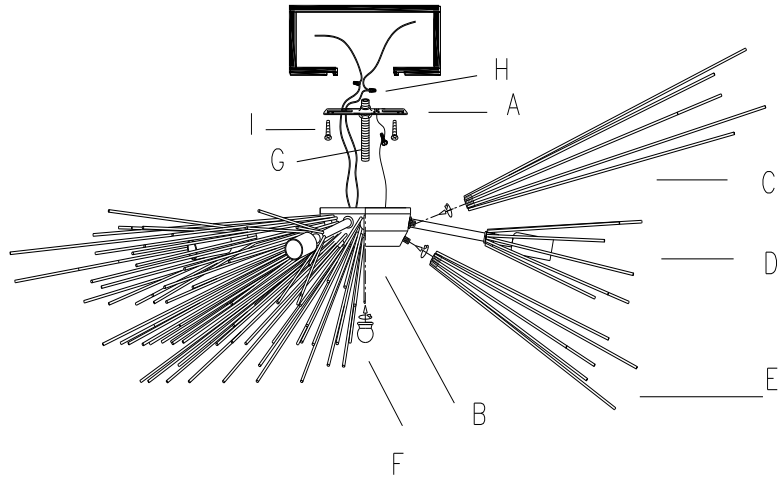

INCLUDED ASSEMBLY HARDWARE

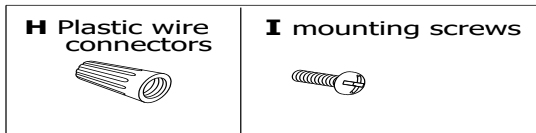

ASSEMBLY INSTRUCTIONS

- 1.REMOVE ALL PACKING CONTENTS AND PARTS FROM THE CARTON(S)CAREFULLY
- 2.PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY
- 3.SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER
4. GENTLY PULL WIRING DOWN FROM CEILING JUNCTION BOX AND ALLOW IT TO HANG.
5. REMOVE THE MOUNTING PLATE (A) FROM THE CANOPY (B) BY LOOSE FINIAL(F)
- 6.SCREW THE BIG STEEL WIRE CLUSTER(C) ONTO THE UPPER DISIRED THREADINGS ON THE CANOPY.
REPEAT THE SAME OPERATION ON THE REMAINING 7PCS.
- 7.SCREW THE SMALL STEEL WIRE CLUSTER(C) ONTO THE LOWER DISIRED THREADINGS ON THE CANOPY.
REPEAT THE SAME OPERATION ON THE REMAINING 15PCS.
- 8.CAREFULLY INSPECT THE FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDEGS MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING.THE BARE SILVER WIRE IS THE GROUNDED WIRE.
9. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (H) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW.
IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
10. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (H) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
- 11.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (H) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
12. GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX.
- 13.ATTACH THE MOUNTING PLATE (A) WITH NIPPLE TO THE CEILING OUTLET BOX USING THE ENCLOSED MOUNTING SCREWS (I) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
14. PUSH MOUNTING PLATE (A) INTO CANOPY (B) , BE SURE PASS THE THREADING PIPE(G) THROUGH THE CANOPY(B)AND TIGHTEN WITH FINIAL(F)
15. INSERT 8 TYPE B 40W BULBS (OR SUITABLE CFL10W/LED 9W ,NOT INCLUDED) INTO THE SOCKETS(D)..
DO NOT EXCEED SPECIFIED WATTAGE

CARE & MAINTENANCE

DUST WITH A DRY CLOTH.

FOR CUSTOMER SERVICE QUESTIONS CALL 1-800-338-2150

ARTERIOS HOME:972.488.9800

ARTERIOS CONTRACT:972.488.9800 EXT.321

DISCLAIMERS

WE RECOMMEND THE INSTALLATION OF THIS ELECTRICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN

ARTERIOS