

ASSEMBLY INSTRUCTIONS

ITEM #89979 | Imogene Large Chandelier

ITEM DESCRIPTION

MATERIAL TYPE: STEEL,CRYSTAL FINISH :BRONZE/VINTAGE BRASS TOP COAT/SEALANT:
 SOCKET TYPE: E12 BAKELITE SOCKET QTY:24
 BULB TYPE: TYPE B BULB WATTAGE: 25W/or CFL 7W/or LED 5W
 ITEM NET WEIGHT: VOLTAGE:110V-120V

UL COMPLIANT
 INSTALLATION ENVIRONMENT:SUITABLE FOR DAMP LOCATIONS



NOTE:

*YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON
 *THIS ITEM MAY REQUIRE PERIODIC TIGHTENING


PARTS

A	MOUNTING PLATE	1 PC
B	CANOPY	1 PC
C	COLLAR LOOP	1 PC
D	RODS	3 PCS
E	CRYSTAL HEAD PIPES	25 PCS
F	SOCKET ASSEMBLY	24 PCS

INCLUDED ASSEMBLY HARDWARE

G Plastic wire connectors 	H mounting screws 	I allen wrench
--------------------------------------	------------------------------	---------------------------

PRODUCT ASSEMBLY

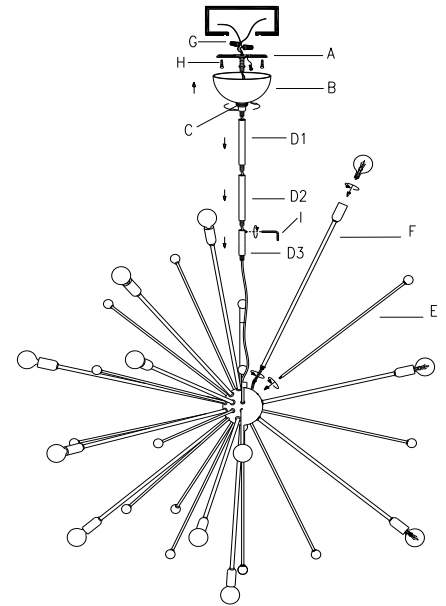

ASSEMBLY INSTRUCTIONS

- 1.REMOVE ALL PACKING CONTENTS AND PARTS FROM THE CARTON(S)CAREFULLY.
- 2.PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY.
- 3.SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
- 4.SCREW THE CRYSTAL HEAD PIPE(E)ONTO THE CENTER SPHERE AND REPEATED FOR THE REMAING 24PCS
- 5.SCREW THE SOCKET ASSEMBLY(F)ONTO THE CENTER SPHERE AND REPEATED FOR THE REMAINING 23PCS.
 BE CAUTION NOT MIX THE WIRE WHEN ABOVE OPERATION.
- 6.SCREW THE ROD(D3) TO THE MAIN BODY ,AND TIGHTEN THE HEXANGULAR SET SCREW IN THE SIDE HOLE WITH AN ALLEN WRENCH(H) .REPEAT THE SAME OPERATION ON THE ROD (D1)AND (D2).
- 7.REMOVE THE MOUNTING PLATE(A)FROM THE CANOPY(B)BY TURNING COLLAR LOOP(C) IN A COUNTER CLOCKWISE DIRECTION.
- 8.CAREFULLY INSPECT THE PENDANT'S FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDEGS MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING.THE BARE SILVER WIRE IS THE GROUND WIRE.
9. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (G) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW.
IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
10. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (G) AND WRAP THE.CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
- 11.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (G) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
12. GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX.
- 13.ATTACH THE MOUNTING PLATE (A) WITH NIPPLE TO THE CEILING OUTLET BOX USING THE ENCLOSED MOUNTING SCREWS (H) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
14. PUSH COLLAR LOOP IN CANOPY (B) AND THREAD ONTO NIPPLE IN MOUNTING PLATE (A) BY TURNING CLOCKWISE.
- 15.SCREW ROD (D1) TO CANOPY (C), USING HEXANGULAR SET SCREW AND ALLEN WRENCH(I)
 BE SURE ALL THE HEXANGULAR SET SCREWS ARE TIGHT.
16. INSERT 24 TYPE B 25W BULB (OR /CFL 7W OR LED 5W BULBS, NOT INCLUDED) INTO THE SOCKETS.
DO NOT EXCEED SPECIFIED WATTAGE.

CARE & MAINTENANCE

DUST WITH A DRY CLOTH.
 FOR CUSTOMER SERVICE QUESTIONS CALL 1-800-338-2150
 ARTERIORS HOME:972.488.9800
 ARTERIORS CONTRACT:972.488.9800 EXT.321

DISCLAIMERS

WE RECOMMEND THE INSTALLATION OF THIS ELECTRICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ARTERIORS