ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION

MATERIAL TYPE: STEEL SOCKET TYPE: F12

FINISH: BLACKEN METAL TOP COAT/SEALANT:

SOCKET OTY:8

BULB WATTAGE: 60W VOLTAGE: 110V-120V

BULB TYPE: TYPE B ITEM NET WEIGHT:

UL COMPLIANT


mounting screws↔

INSTALLATION ENVIRONMENT: SUITABLE FOR DAMP LOCATIONS

NOTF:


YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON

*THIS ITEM MAY REQUIRE PERIODIC TIGHTENING

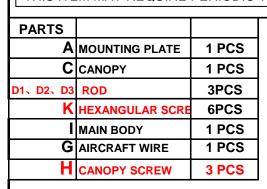

INCLUDED ASSEMBLY HARDWARE

F plastic wire connectors

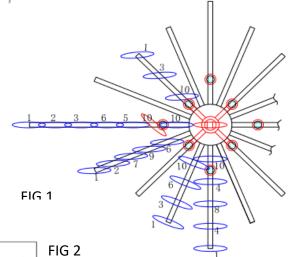

E allen wrench #1-16pcs (8 3/4") #7-4pcs (19 3/4")₽ #2-6pcs (11 1/4") #8-2pcs (20 1/4") #3-10pcs (13 3/4") #9-4pcs(225/8")₽ #4-4pcs (14 3/8") #10-14pcs (24 1/2") #5-2pcs(15 1/4")₽ #11-1pcs (20 1/2")

ASSEMBLY INSTRUCTIONS

1.REMOVE ALL PACKING CONTENTS FROM THE CARTON(S)CAREFULLY

2.REMOVE ALL PARTS FROM THE PACKAGE(S) CAREFULLY

3.PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE PRODUCT BEING ASSEMBLY

4.SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER

DI ALLEN WRENON (E), REFEAT THE SANG OPERATION ON THE ROD (DT) AND (DS).

6.REMOVE THE MOUNTING PLATE(A)FROM THE CANOPY(C)BY LOOSENING CANOPY SCREWS(H)

IN A COUNTER CLOCKWISE DIRECTION.

7.CAREFULLY INSPECT THE PENDANT'S FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDEGS MOLDEI INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING. THE BARE SILVER WIRE IS THE GROU 8. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALL' OR BARE WIRE. FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR(F) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW

INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW.

#6-10pcs (17 3/8")

IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.

9. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (F) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.

10.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER

WITH A PLASTIC WIRE CONNECTOR (F) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS

ARE EXPOSED. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

11.PASS THE AIRCRAFT WIRE (G) THROUGH THE BACK PLATE(A), ATTACH THE AIRCRAFT WIRE (G)ON THE JUNCTION BOX,THEN SECURE THE AIRCRAFT WIRE(G) WITH SCREWS WHICH ARE INCLUDED. THIS FIXTURE IS 32.5KG(71.5BLS), THE AIRCRAFT WIRE(G)INSTALLATION IS REQUESTED FOR SAFETY.

12.GENTLY TRUCK THE WIRE CONNECTIONS(F) NEATLY INTO THE CEILING JUNCTION BOX.

13.ATTACH THE MOUNTING PLATE (A) TO THE CEILING OUTLET BOX BY USING THE ENCLOSED MOUNTING

SCREW(B) AND TIGHTEN SCREWS WITH A SCREWDRIVER.

14. PUSH CANOPY(C) UP OVER THE MOUNTING PLATE(A) UNTIL IT IS FLUSH WITH THE CEILING AND FIX THE CANOPY BY ENCLOSED CONOPY SCREWS(H)

AND TIGHTEN SCREWS WITH A SCREWDRIVER.BE SURE ALL THE SCREWS WERE TIGHT ENOUGH.

15.SCREW ROD (D3) TO THE CANOPY (C) BY USING HEXANGULAR SCREW(K) AND ALLEN WRENCH(E)

16. CLASSIFIED THE GLASSES FROM NUMBER SHOWED ON THE PACKAGE AND REMOVE ALL GLASSES FROM PACKAGE CAREFULLY, AND HANG IT OVER ON THE ARM AS PER FIG 1 & FIG 2 SHOWED.

17. INSERT EIGHT TYPE B 60W BULB (OR CFL 16W/LED 13W BULB, NOT INCLUDED) INTO THE SOCKETS. DO NOT EXCEED SPECIFIED WATTAGE.

18. RESTORE POWER TO JUNCTION BOX AND TEST FIXTUREE.

DUST WITH A DRY CLOTH.DO NOT USE ANY CHEMICAL OR ABRASIVE CLEANERS DISCLAIMERS

FOR CUSTOMER SERVICE QUESTIONS CALL 1.888.488.8866

WE RECOMMEND THE INSTALLATION OF THIS ELECTICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ARTERIORS HOME:972,488,9800

CARE & MAINTENANCE

ARTERIORS CONTRACT:972.488.9800 EXT.321

ARTERIORS



