

# ASSEMBLY INSTRUCTIONS

ITEM #89406 | SML DALLAS CHANDELIER

## ITEM DESCRIPTION

MATERIAL TYPE: STEEL, GLASS FINISH: BROWN NICKEL, CLEAR SMOKE  
 SOCKET TYPE: E12 CERAMIC SOCKET QTY: 12 TOP COAT/SEALANT:  
 BULB TYPE: TYPE G BULB WATTAGE: 25W or CFL 7W or LED 5W  
 ITEM NET WEIGHT: VOLTAGE: 110V-120V

UL COMPLAINT

INSTALLATION ENVIRONMENT: SUITABLE FOR DAMP LOCATIONS



## NOTE:

\*YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON  
 \*THIS ITEM MAY REQUIRE PERIODIC TIGHTENING


## PARTS

<b>A</b>	MOUNTING PLATE	1 PC
<b>B</b>	CANOPY	1 PC
<b>C</b>	COLLAR LOOP	1 PC
<b>D</b>	RODS	3 PCS
<b>E</b>	MAIN BODY	1 PC
<b>F</b>	GLASS SPHERE	12 PCS
<b>G</b>	SOCKET ASSEMBLY	12 PCS
<b>H</b>	METAL CAP	12 PCS

## INCLUDED ASSEMBLY HARDWARE

<b>I</b> Plastic wire connectors	<b>J</b> mounting screws	<b>K</b> allen wrench
----------------------------------	--------------------------	-----------------------

## PRODUCT ASSEMBLY

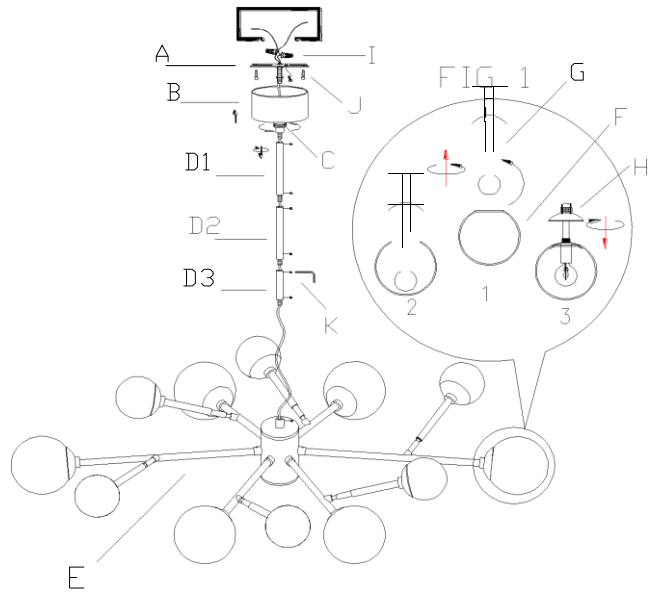

## ASSEMBLY INSTRUCTIONS

1. REMOVE ALL PACKING CONTENTS FROM THE CARTON(S) CAREFULLY
2. REMOVE ALL PARTS FROM THE PACKAGE(S) CAREFULLY
3. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER
4. SCREW THE ROD(D3) TO THE MAIN BODY (E), AND TIGHTEN THE HEXANGULAR SCREW IN THE SIDE HOLE WITH ALLEN WRENCH(K). REPEAT THE SAME OPERATION ON THE ROD (D1) AND (D2).
5. AS FIG 1, UNSCREW THE METAL CAP(H) OFF THE SOCKET ASSEMBLY(G), INSERT TYPE G 25W BULB (OR SUITABLE CFL 7W/LED 5W, NOT INCLUDED) IN THE SOCKET. **DO NOT EXCEED SPECIFIED WATTAGE.** THEN ATTACH THE GLASS SPHERE TO THE SOCKET PROPERLY, THEN SCREW THE METAL CAP(H) TO SECURE THE GLASS SPHERE UNTIL TIGHT. REPEAT THE ABOVE OPERATION ON THE REMAINING 5 BIG GLASS SPHERE AND 6 SMALL GLASS SPHERE  
PLS NOTED BIG SPHERE ARE USED ON THE END MAIN "BRANCHES" AS DRAWING SHOW AND SML SPHERE ON THE SIDE "BRANCHES".
6. REMOVE THE MOUNTING PLATE(A) FROM THE CANOPY(B) BY TURNING COLLAR LOOP(C) IN A COUNTER CLOCKWISE DIRECTION.
7. CAREFULLY INSPECT THE PENDANT'S FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDGES MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING. THE BARE SILVER WIRE IS THE GROUNDED WIRE.
8. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN) OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (I) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
9. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (I) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
10. CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (I) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
11. GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX.
12. ATTACH THE MOUNTING PLATE (A) WITH NIPPLE TO THE CEILING OUTLET BOX USING THE ENCLOSED MOUNTING SCREWS (J) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
13. PUSH COLLAR LOOP IN CANOPY (B) AND THREAD ONTO NIPPLE IN MOUNTING PLATE (A) BY TURNING IN A CLOCKWISE
14. SCREW ROD (D1) TO CANOPY (B), USING HEXANGULAR SCREW AND ALLEN WRENCH(K)  
 BE SURE ALL THE HEXANGULAR SCREWS ARE TIGHT ENOUGH.

## CARE & MAINTENANCE

FOR CUSTOMER SERVICE QUESTION CALL 1-800-338-2150

## DISCLAIMERS

ARTERIORS HOME: 972.488.9800

WE RECOMMEND THE INSTALLATION OF THIS ELECTRICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ARTERIORS CONTRACT: 972.488.9800 EXT. 321

ARTERIORS