

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION

MATERIAL TYPE: STEEL GLASS FINISH : ANTIQUE BRASS, GLASS TOP COAT,
SOCKET TYPE: E12*2 / E26*1 CERAMIC SOCKET QTY:3
BULB TYPE: TYPE B / TYPE T BULB WATTAGE: 60W or/CFL 12W or/LED 10W
ITEM NET WEIGHT:

UL COMPLIANT

INSTALLATION ENVIRONMENT: SUITABLE FOR DAMP LOCATIONS

NOTE:

*YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON
*THIS ITEM MAY REQUIRE PERIODIC TIGHTENING

PARTS


A	MOUNTING PLATE	1 PC
B	CANOPY	1 PC
C	COLLAR LOOP	1 PC
D	CHAIN	1 PC
E	LOOP	1 PC
F	LAMP BODY	1 PC
G	GLASS	63 PCS
H	GLASS SCREW	63 PCS
I	E12 SOCKETS	2 PCS
L	BULB B(NOT INCLUDED)	2 PCS
M	E26 SOCKET	1 PC
N	BULB T(NOT INCLUDED)	1 PC

INCLUDED ASSEMBLY HARDWARE

J mounting screws



K Plastic wire connectors



ASSEMBLY INSTRUCTIONS

1. REMOVE ALL PACKING CONTENTS AND PARTS FROM THE CARTON(S) CAREFULLY
2. PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY
3. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER
4. REMOVE THE MOUNTING PLATE(A) FROM THE CANOPY(B) BY TURNING COLLAR LOOP(C)
5. PULL THE ELECTRICAL CORD OF "J BOX" THROUGH THE EXIT HOLE OF THE MOUNTING PLATE
6. CAREFULLY INSPECT THE FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINELY WRAPPED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING. THE
7. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE (USUALLY WHITE OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE WIRE INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
8. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE) WITH A WIRE CONNECTOR (I) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF THE NEUTRAL WIRE IS NOT AVAILABLE, CONNECT TO THE GROUND WIRE.
9. CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK) WITH A PLASTIC WIRE CONNECTOR (I) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF THE HOT WIRE IS NOT AVAILABLE, CONNECT TO THE NEUTRAL WIRE. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
10. GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX.
11. ATTACH THE MOUNTING PLATE (A) WITH NIPPLE TO THE CEILING OUTLET BOX USING ELECTRICAL TAPE
12. PUSH COLLAR LOOP (C) IN CANOPY (B) AND THREAD ONTO NIPPLE IN MOUNTING PLATE (A)
13. CONNECT THE CANOPY(B) AND COLLAR LOOP(C) WITH CHAIN(D) THROUGH THE LOOP (E)
14. INSERT 2 TYPE B 60W BULB(OR CFL 12W OR LED 10W, NOT INCLUDED) INTO THE TOP OF THE LAMP BODY (F). **DO NOT EXCEED SPECIFIED WATTAGE**
15. ATTACH THE GLASS (G) THROUGH THE PIPE AND THREAD THE GLASS SCREW(H) THROUGH THE GLASS
16. RESTORE POWER TO THE JUNCTION BOX AND TEST FIXTURE.

CARE & MAINTENANCE

Wipe with a DRY CLOTH.

FOR CUSTOMER SERVICE QUESTIONS CALL 1.888.488.8866

ARTERIOS HOME: 972.488.9800

ARTERIOS CONTRACT: 972.488.9800 EXT.321

DISCLAIMER

WE RECOMMEND

ARTERIO


ITEM # 89453 | PENDANT

/SEALANT:

/ VOLTAGE:110V-120V



PRODUCT ASSEMBLY

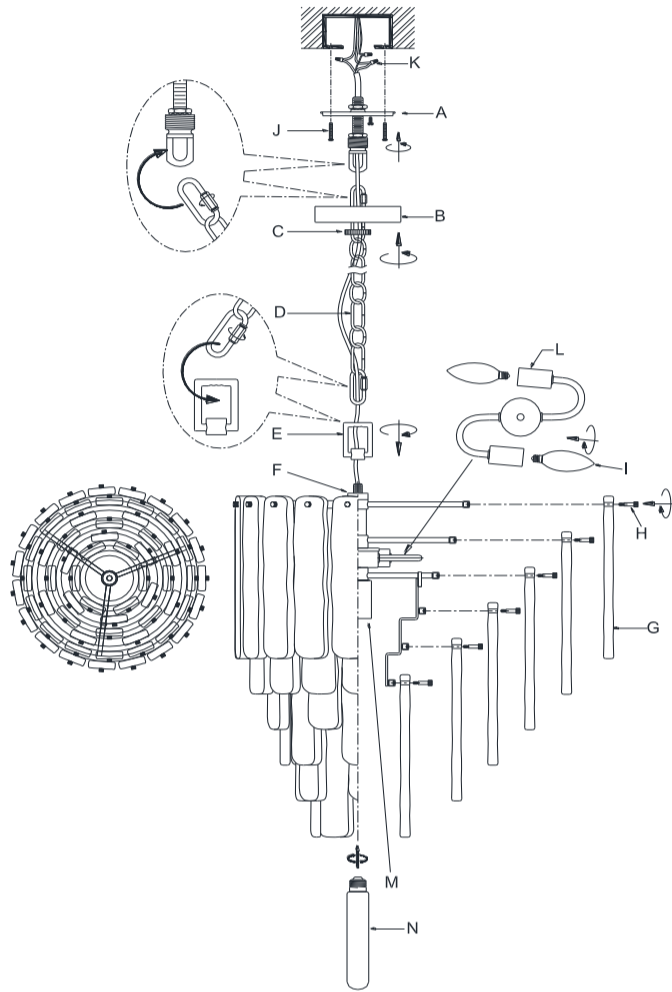

ER.
) IN A COUNTER CLOCKWISE DIRECTION.
i PLATE
NE RIDEGS MOLDED
BARE SILVER WIRE IS THE GROUNDED WIRE.
RE FROM THE OUTLET (USUALLY GREEN
) WRAP THE CONNECTION WITH
HE GREEN GROUND SCREW(H)
JND WIRE AROUND THE GROUND SCREW.

ALLY WHITE). FASTEN EACH TOGETHER
BE SURE NO STRANDS ARE EXPOSED.
(). FASTEN EACH TOGETHER
AL TAPE. BE SURE NO WIRE STRANDS
Y WILL BE COMPROMISED.

THE ENCLOSED MOUNTING SCREWS (J) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
ATE (A) BY TURNING IN A CLOCKWISE.
P(E)
S SOCKETS(I) AND 1 TYPE T 60W BULB(NOT INCLUDED) INTO THE BOTTOM SOCKET(M).

TO TIGHT TO SECURE THE GLASS SHADE.**NOTE:STARTING AT THE BOTTOM OF THE GLASS.**

ERS

) THE INSTALLATION OF THIS ELECTICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ORS