


ASSEMBLY INSTRUCTIONS

ITEM #89438 | JALEN 2-TIERED CHANDELIER

ITEM DESCRIPTION

MATERIAL TYPE: STEEL, GLASS FINISH: ANTIQUE BRASS/ORB. ETCHED
 SOCKET TYPE: E12 BAKELITE SOCKET QTY: 18 TOP COAT/SEALANT:
 BULB TYPE: TYPE B BULB WATTAGE: 40W OR CFL 10W or LED 9W
 ITEM NET WEIGHT: VOLTAGE: 110V-120V

UL COMPLAINT
 INSTALLATION ENVIRONMENT: SUITABLE FOR DAMP LOCATIONS

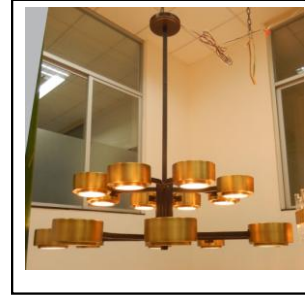





NOTE:
 *YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON
 *THIS ITEM MAY REQUIRE PERIODIC TIGHTENING

PARTS

A	MOUNTING PLATE	1 PC
B	CANOPY	1 PC
C	RODS	3 PCS
D	MAIN BODY	1 PC
E	PLATE SCREW	4 PCS

PRODUCT ASSEMBLY

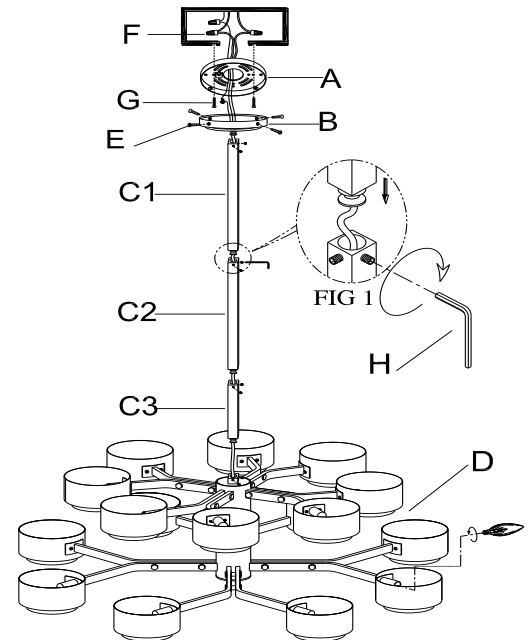

F Plastic wire connectors 	G mounting screws 	H allen wrench 
---	---	--

ASSEMBLY INSTRUCTIONS

1. REMOVE ALL PACKING CONTENTS FROM THE CARTON(S) CAREFULLY
2. REMOVE ALL PARTS FROM THE PACKAGE(S) CAREFULLY
3. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER
4. SCREW THE ROD (C3) TO THE MAIN BODY (E), AND TIGHTEN 2PCS HEXANGULAR SCREW IN THE SIDE HOLE WITH ALLEN WRENCH (H). PLS SEE THE DETAILS AS SHOWN IN FIG 1, REPEAT THE SAME OPERATION ON THE ROD (C1) AND (C2).
5. REMOVE THE MOUNTING PLATE (A) FROM THE CANOPY (B) BY LOOSEN THE PLATE SCREWS (E) WITH A SCREWDRIVER.
6. CAREFULLY INSPECT THE PENDANT'S FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDGES MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING. THE BARE SILVER WIRE IS THE GROUNDED WIRE.
7. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (F) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
8. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (F) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
9. CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (F) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
10. GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX.
11. ATTACH THE MOUNTING PLATE (A) WITH NIPPLE TO THE CEILING OUTLET BOX USING THE ENCLOSED MOUNTING SCREWS (G) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
12. PULL CANOPY (B) UP OVER THE MOUNTING PLATE (A), ALIGN THE HOLE IN THE MOUNTING PLATE WITH THE HOLE IN THE CANOPY BY TIGHTEN PLATE SCREWS (E) WITH A SCREWDRIVER.
13. SCREW ROD (C1) TO CANOPY (B), USING HEXANGULAR SCREW AND ALLEN WRENCH (J). BE SURE ALL THE HEXANGULAR SCREWS ARE TIGHT ENOUGH.
14. INSERT 16 TYPE B 40W BULBS (OR SUITABLE CFL/10W, OR LED 9W, NOT INCLUDED) INTO THE SOCKETS. **DO NOT EXCEED SPECIFIED WATTAGE.**

CARE & MAINTENANCE

FOR CUSTOMER SERVICE QUESTION CALL 1-800-338-2150
 ARTERIORS HOME: 972.488.9800
 ARTERIORS CONTRACT: 972.488.9800 EXT. 321

DISCLAIMERS

WE RECOMMEND THE INSTALLATION OF THIS ELECTRICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ARTERIORS