

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION

MATERIAL TYPE: STEEL FINISH: ANTIQUE BRASS TOP COAT/SEAL
 SOCKET TYPE: E27 CERAMIC SOCKET QTY: 1
 BULB TYPE: TYPE A BULB WATTAGE: 150W/CFL 35W/LED 28W
 ITEM NET WEIGHT: VOLTAGE: 110V-120V

UL COMPLAINT
 INSTALLATION ENVIRONMENT: SUITABLE FOR DAMP LOCATIONS




NOTE:

*YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON
 *THIS ITEM MAY REQUIRE PERIODIC TIGHTENING

PARTS

A	MOUNTING PLATE	1 PC
B	CANOPY	1 PC
C	COLLAR LOOP	1 PC
D	RODS	4 PCS
E	LOCKING RING	1 PC
F	SHADE	1 PC (NOT INCLUDED)
G	SOCKET ASSEMBLY	1 PC

INCLUDED ASSEMBLY HARDWARE

H Plastic wire connectors 	I mounting screws 	J allen wrench 
---	--	--

ASSEMBLY INSTRUCTIONS

1. REMOVE ALL PACKING CONTENTS FROM THE CARTON(S) CAREFULLY
2. REMOVE ALL PARTS FROM THE PACKAGE(S) CAREFULLY
3. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAK
4. AS SHOWN IN FIG, UNSCREW THE LOCKING RING(E) OFF THE SOCKET ASSEMBLY(G), AND INSERT THE SOCKET PROPERLY, THEN SECURE IT BY SCREW THE LOCKING RING(E) TILL IT IS TIGHT.
5. SCREW THE ROD(D4) ONTO THE TOP OF SOCKET ASSEMBLY(G), AND TIGHTEN THE HEAD OF THE ROD WITH ALLEN WRENCH(J). REPEAT THE SAME OPERATION ON THE ROD (D1)
6. REMOVE THE MOUNTING PLATE(A) FROM THE CANOPY(B) BY TURNING COLLAR LOOP(C) TO THE SIDE.
7. CAREFULLY INSPECT THE PENDANT'S FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS A SMOOTH COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING. THE GROUND WIRE IS BARE.
8. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE (USUALLY BLACK OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (H) AND ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GROUND WIRE INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE INTO IT. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
9. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY BLUE) WITH A WIRE CONNECTOR (H) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE.
10. CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK) WITH A PLASTIC WIRE CONNECTOR (H) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. MAKE SURE ALL THE WIRE CONNECTIONS ARE PROPERLY MADE AND NO WIRE IS EXPOSED. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
11. GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX.
12. ATTACH THE MOUNTING PLATE (A) WITH NIPPLE TO THE CEILING OUTLET BOX USING MOUNTING SCREWS (I) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
13. PUSH COLLAR LOOP (C) INTO CANOPY (B) AND THREAD ONTO NIPPLE IN MOUNTING PLATE (A).
14. SCREW ROD (D1) TO CANOPY (B), USING HEXANGULAR SCREW AND ALLEN WRENCH (J). BE SURE ALL THE HEXANGULAR SCREWS ARE TIGHT ENOUGH.
15. INSERT 1 TYPE A 150W BULBS (OR CFL/35W, OR LED 28W BULB, NOT INCLUDED) INTO THE SOCKET.

CARE & MAINTENANCE

FOR CUSTOMER SERVICE QUESTION CALL 1-800-338-2150 **DISCLAIMER**
 ARTERIORS HOME: 972.488.9800 WE RECOMMEND THE USE OF QUALITY ELECTRICAL SUPPLIES.
 ARTERIORS CONTRACT: 972.488.9800 EXT. 321


ARTERIO

ITEM NUMBER#45065

ANT:



PRODUCT ASSEMBLY

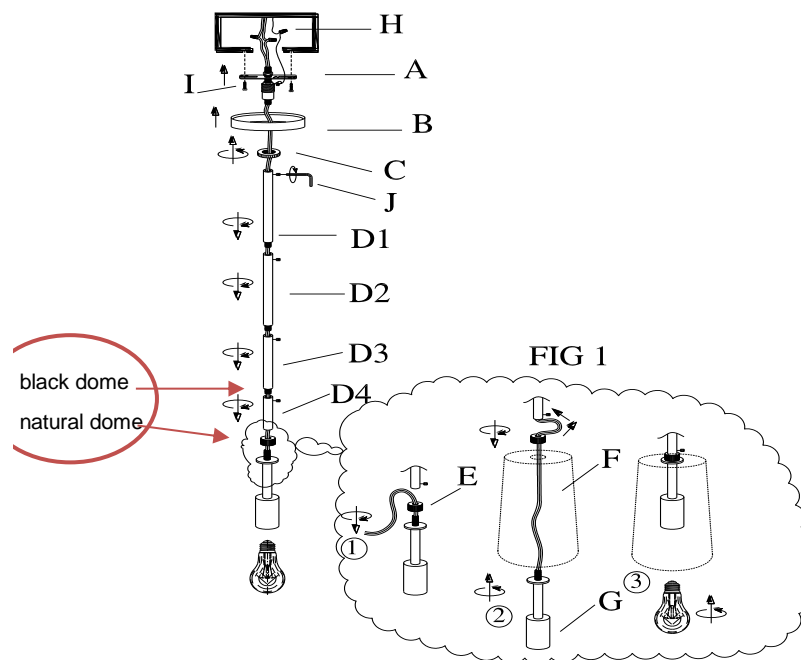

1. ATTACH THE MOUNTING BRACKET (H) TO THE CEILING.
2. ATTACH THE SHADE (F, NOT INCLUDED) FROM THE BOTTOM LIGHT.
3. INSERT THE LIGHT BULB (G) INTO THE SOCKET (E).
4. TIGHTEN THE ANGULAR SCREW IN THE SOCKET (E) AND THE SCREW IN THE ROD (D2) AND (D3).
5. TURN THE ROD (D1) IN A COUNTER CLOCKWISE DIRECTION.
6. THE SHADE (F) HAS VERY FINE RIDGES MOLDED INTO IT.
7. THE BARE SILVER WIRE IS THE GROUNDED WIRE.
8. CONNECT THE GROUNDED WIRE FROM THE OUTLET (USUALLY GREEN) TO THE GREEN GROUND SCREW IN THE SOCKET (E).
9. WRAP THE CONNECTION WITH ELECTRICAL TAPE.
10. BE SURE NO WIRE STRANDS ARE EXPOSED.
11. FASTEN EACH TOGETHER THE SOCKET (E) AND THE ROD (D4).
12. BE SURE NO WIRE STRANDS ARE EXPOSED.
13. FASTEN EACH TOGETHER THE SOCKET (E) AND THE ROD (D4).
14. USE ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED.
15. ANY WIRE STRANDS EXPOSED WILL BE COMPROMISED.
16. ATTACH THE ENCLOSED MOUNTING BRACKET (H) TO THE CEILING.
17. ATTACH THE SHADE (F) TO THE SOCKET (E) BY TURNING IN A CLOCKWISE DIRECTION.
18. TIGHTEN THE SCREW (J) IN THE SOCKET (E).
19. DO NOT EXCEED THE SPECIFIED WATTAGE FOR THE SOCKETS. **DO NOT EXCEED SPECIFIED WATTAGE.**

RS

THE INSTALLATION OF THIS ELECTRICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ORS