

ASSEMBLY INSTRUCTIONS

ITEM #89313 | CHANDELIER

ITEM DESCRIPTION


MATERIAL TYPE: STEEL+BRASS FINISH :ANTIQUE BRASS /SMOKE LUSTER GLASS TOP COAT/SEALANT:
 SOCKET TYPE: E12 SOCKET QTY:7
 BULB TYPE: TYPE B **BULB WATTAGE: 60W/ CEL 16W / LED 13W** VOLTAGE:110V-120V
 ITEM NET WEIGHT:
 UL COMPLIANT
 INSTALLATION ENVIRONMENT:SUITABLE FOR DAMP LOCATIONS






NOTE:
 *YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON
 *THIS ITEM MAY REQUIRE PERIODIC TIGHTENING

PARTS			PARTS		
A	MOUNTING PLATE	1 PCS	F	STRENGTHEN SCREW	2PCS
B	CANOPY	1 PCS	E	ANCHOR	2PCS
H1,H2,H3	ROD	3 PCS	G	BULB(NOT INCLUDE)	7 PCS
C	COLLAR LOOP	1PCS	I	HEX NUT	2PCS
D	MAIN BODY	6PCS	J	GLASS SHADE	7PCS

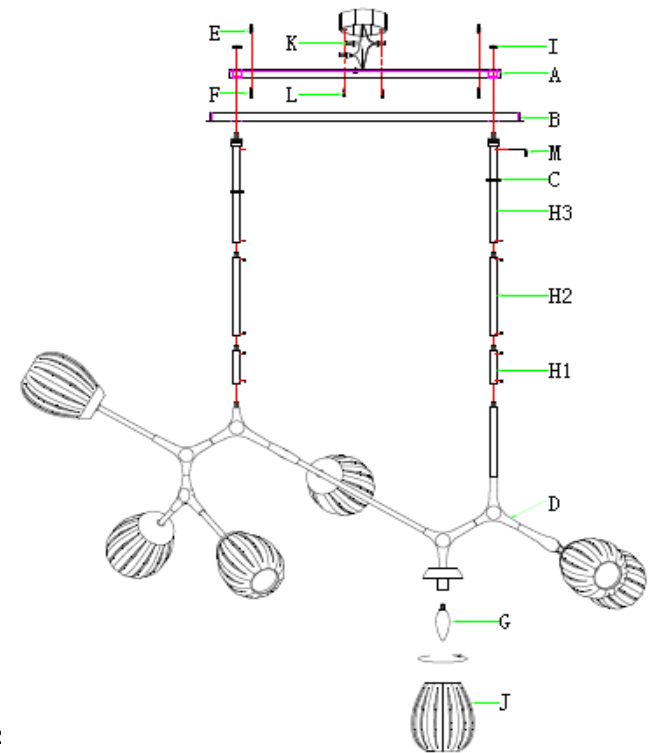PRODUCT ASSEMBLY



INCLUDED ASSEMBLY HARDWARE

K Plastic wire connectors 	L mounting screws 	M allen wrench 
---	---	--

ASSEMBLY INSTRUCTIONS

- 1.REMOVE ALL PACKING CONTENTS FROM THE CARTON(S)CAREFULLY
- 2.REMOVE ALL PARTS FROM THE PACKAGE(S) CAREFULLY
- 3.PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE PRODUCT BEING ASSEMBLY
- 4.SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER
- 5.REMOVE THE MOUNTING PLATE(A)FROM THE CANOPY(B)BY TURNING COLLAR LOOP(C) IN A COUNTER CLOCKWISE DIR
- 6.SCREW THE ROD(H1) TO THE MAIN BODY ,BE SURE TIGHTEN THE HEXANGULAR SCREW IN THE SIDE HOLE BY ALLEN WRENCH, REPEAT THE SAME OPERATION ON THE OTHER THREE RODS (H2)(H3).
- 7.CAREFULLY INSPECT THE PENDANT'S FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDEGS MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING.THE BARE SILVER WIRE IS THE GROUNDED WIRE.
8. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN) OR BARE WIRE. FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR(F) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
9. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
- 10.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
- 11.GENTLY TRUCK THE WIRE CONNECTIONS(K) NEATLY INTO THE CEILING JUNCTION BOX.
12. ATTACH THE MOUNTING PLATE (A) WITH NIPPLE TO THE CEILING OUTLET BOX USING THE ENCLOSED MOUNTING SCREWS (L) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
- 13.IF ATTACH TO CEMENT CEILING, USE ANCHOR(E) FIRST THEN SCREW STRENGTHENED SCREWS(F)INTO THE ANCHOR
- 14.IF ATTACH TO WOOD CEILING,THREAD STRENGTHENED SCREW(F)DIRECTLY INTO CEILING
- 15.PUSH COLLAR LOOP(C) IN CANOPY (B) AND THREAD ONTO NIPPLE IN MOUNTING PLATE (A) BY TURNING IN A CLOCKWISE
16. **INSERT ONE TYPE B 60W OR CEL 16W OR LED 13W BULB (NOT INCLUDED) INTO THE SOCKETS. DO NOT EXCEED SPECIFIED WATTAGE.**
- 17.ATTACHED THE GLASS SHADE(J) ON THE MAIN BODY(D) AND TIGHTEN GLASS IN A COUNTER CLOCKWISE DIRECTION.
- 18.RESTORE POWER TO THE JUNCTION BOX AND TEST FIXTURE.

CARE & MAINTENANCE

DUST WITH A DRY CLOTH.DO NOT USE ANY CHEMICAL OR ABRASIVE CLEANERS
 FOR CUSTOMER SERVICE QUESTIONS CALL 1.888.488.8866
 ARTERIORS HOME:972.488.9800
 ARTERIORS CONTRACT:972.488.9800 EXT.321

DISCLAIMERS

WE RECOMMEND THE INSTALLATION OF THIS ELECTICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ARTERIORS