

ASSEMBLY INSTRUCTIONS

ITEM #DS49025| Mercury Sconce

ITEM DESCRIPTION

MATERIAL TYPE: STEEL.MARBLE FINISH :ANTIQUE BRASS.ONYX MATTE
SOCKET TYPE: E12 BAKELITE SOCKET QTY:1 TOP COAT/SEALANT:
BULB TYPE: TYPE T BULB WATTAGE: 40W/CFL 10W/LED 9W
ITEM NET WEIGHT: VOLTAGE:110V-120V

UL COMPLIANT

INSTALLATION ENVIRONMENT:SUITABLE FOR DAMP LOCATIONS




NOTE:

- *YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON
- *THIS ITEM MAY REQUIRE PERIODIC TIGHTENING

PARTS


A	MOUNTING PLATE	1 PC
B	BACK PLATE	1 PC
C	CANOPY SCREW	3 PCS
D	GREEN GROUND SCREW	1 PC

INCLUDED ASSEMBLY HARDWARE


E Plastic wire connectors 	F mounting screws 	G allen wrench 
H anchor 	I strengthened screw 	

TOOLS NEEDED(NOT INCLUDED)

J SCREWDRIVER



PRODUCT ASSEMBLY

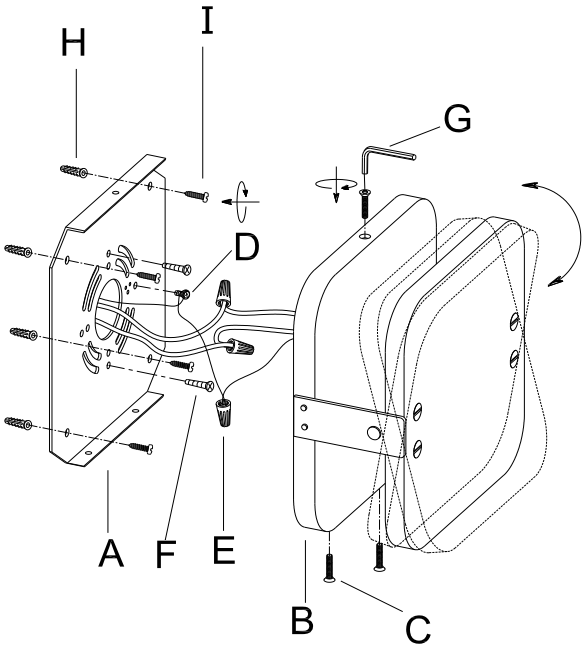

ASSEMBLY INSTRUCTIONS

- 1.REMOVE ALL PACKING CONTENTS AND PARTS FROM THE CARTON(S)CAREFULLY.
- 2.PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY.
- 3.TURN OFF POWER TO THE JUNCTION BOX WHERE THE LAMP WILL BE INSTALLED.
- 4.PULL THE ELECTRICAL CORD OF "J BOX"THROUGH THE EXIT HOLE OF THE MOUNTING PLATE(A).
5. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (E) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW(D) INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW.
IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
6. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (E) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
- 7.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (G) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
8. GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX.
- 9.DRILL THE ANCHOR(K) TO THE WALL FIRST, ATTACH THE MOUNTING PLATE (A) TO THE OUTLET BOX USING THE MOUNTING SCREWS(F). TIGHTEN WITH A SCREWDRIVER(J).THEN SCREW STRENGTHENED SCREWS(I)INTO THE ANCHORS.
- 10.ATTACH THE BACK PLATE(B) TO THE MOUNTING PLATE(A) USING THE ENCLOSED PLATE SCREWS(C). TIGHTEN SCREWS WITH ALLEN WRENCH(G).
- 11.INSTALL 1 TYPE T 40W BULB(OR CFL/10W,OR LED 9W BULB, NOT INCLUDED)INTO THREADED SOCKET.
DO NOT EXCEED SPECIFIED WATTAGE.
- 12.RESTORE POWER TO THE JUNCTION BOX AND TEST FIXTURE.

CARE & MAINTENANCE

DUST WITH A DRY CLOTH.

FOR CUSTOMER SERVICE QUESTIONS CALL 1-800-338-2150

ARTERIORS HOME:972.488.9800

ARTERIORS CONTRACT:972.488.9800 EXT.321

DISCLAIMERS

WE RECOMMEND THE INSTALLATION OF THIS ELECTRICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ARTERIORS