

ASSEMBLY INSTRUCTIONS

ITEM #49392|WALL SCONCE

ITEM DESCRIPTION

MATERIAL TYPE: STEEL/LINEN-COTTON FINISH :ANTIQU BRASS&OIL RUBBER BRONZE.WHITE
 SOCKET TYPE: E26 CERAMIC SOCKET QTY:1 TOP COAT/SEALANT:
 BULB TYPE: TYPE A BULB WATTAGE: 60W or/CFL 16W or/LED 13W
 ITEM NET WEIGHT: VOLTAGE:110V-120V

UL COMPLIANT

INSTALLATION ENVIRONMENT:SUITABLE FOR DAMP LOCATIONS




NOTE:

- *YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON
- *THIS ITEM MAY REQUIRE PERIODIC TIGHTENING


PARTS

A	MOUNTING PLATE	1 PC
B	BACKPLATE	1 PC
C	SCREW NUT	3 PCS
D	HOOK ROD	3 PCS
E	METAL PLATE	1 PC
F	SHADE	1 PC
G	METAL LOOP	3 PCS
H	PLATE SCREW	4 PCS

INCLUDED ASSEMBLY HARDWARE

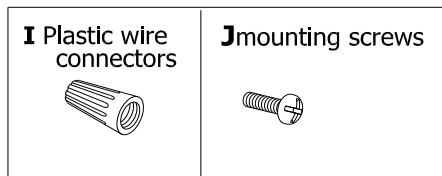

PRODUCT ASSEMBLY

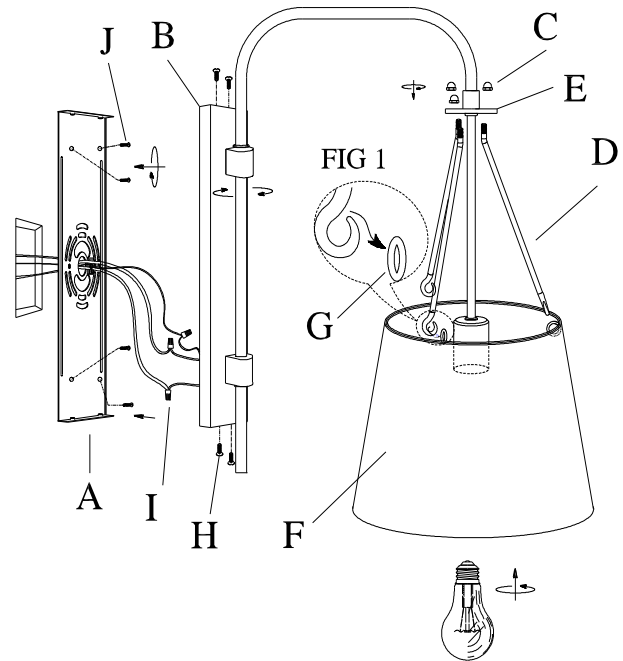

ASSEMBLY INSTRUCTIONS

- 1.REMOVE ALL PACKING CONTENTS AND PARTS FROM THE CARTON(S)CAREFULLY
- 2.PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY
- 3.SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER
4. GENTLY PULL WIRING DOWN FROM CEILING JUNCTION BOX AND ALLOW IT TO HANG.
5. REMOVE THE BACK PLATE (A) FROM THE CANOPY (B) BY LOOSE PLATE SCREWS(H)
- 6.CAREFULLY INSPECT THE FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDEGS MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING.THE BARE SILVER WIRE IS THE GROUNDED WIRE.
7. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (I) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
- 8.CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (I) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
- 9.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (I) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
- 10.AS FIG1, MAKE HOOK ROD(D) TO CONNECT METAL LOOP(G) ON THE TOP SHADE(E) ,THEN CAREFULLY PASS HOOK ROD ANOTHER END THROUGH THE PLATE AND THEN TIGHT SCREW NUT(C) TILL SECURE. REPEAT THE SAME OPERATION ON THE REMAINING 2PCS HOOK ROD.
11. GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX.
- 12.ATTACH THE BACK PLATE(B) TO THE MOUNTING PLATE(A) USING THE ENCLOSED 4PCS MOUNTING SCREWS(J). TIGHTEN SCREWS WITH A SCREWDRIVER.
- 13.PUSH BACK PLATE(B) UP OVER THE MOUNTING PLATE (A) UNTIL IT IS FLUSH WITH THE CEILING AND FIX THE BACK PLATE BY USING 4 PCS PLATE SCREWS(H)
14. INSERT 1 TYPE A 60W BULB (OR SUITABLE CFL16W/LED 13W ,NOT INCLUDED) INTO THE SOCKETS(D).DO NOT EXCEED SPECIFIED WATTAGE.

CARE & MAINTENANCE

DUST WITH A DRY CLOTH.

FOR CUSTOMER SERVICE QUESTIONS CALL 1-800-338-2150

ARTERIOS HOME:972.488.9800

ARTERIOS CONTRACT:972.488.9800 EXT.321

DISCLAIMERS

WE RECOMMEND THE INSTALLATION OF THIS ELECTRICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN

ARTERIOS