

ASSEMBLY INSTRUCTIONS

ITEM #DW49001| Natural reed with linen shade pendant

ITEM DESCRIPTION

MATERIAL TYPE: STEEL,LINEN,RATTAN FINISH :POLISHED NICKELM,IVORY LINE, NATURAL RATTAN TOP COAT/SE
SOCKET TYPE: E12 CERAMIC SOCKET QTY: 4PCS
BULB TYPE: TYPE B BULB WATTAGE: 60W or/CFL 13W or/LED 8W VOLTAGE:110V-120V
ITEM NET WEIGHT:
UL COMPLIANT
INSTALLATION ENVIRONMENT:SUITABLE FOR DAMP LOCATIONS




NOTE:

*YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON


PARTS

A	MOUNTING PLATE	1 PC
B	CANOPY	1 PC
C	COLLAR LOOP	1 PC
U1,2,3	ROD	2 PCS
E	HEX SCREWS	4 PCS
F	NATURAL REED PLATE	1 PC
G	NATURAL REED ROD	1 PC
H	LAMP BODY	1 PC
I	SOCKET	4 PCS
L	BULB G(NOT INCLUDED)	4 PCS
M	FABRIC DIFFUSER	1 PC
N	FINIAL	1 PC


INCLUDED ASSEMBLY HARDWARE

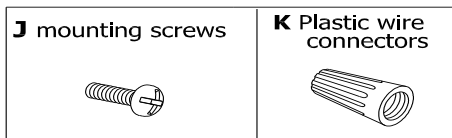

TOOLS NEEDED(INCLUDED)



PRODUCT ASSEMBLY

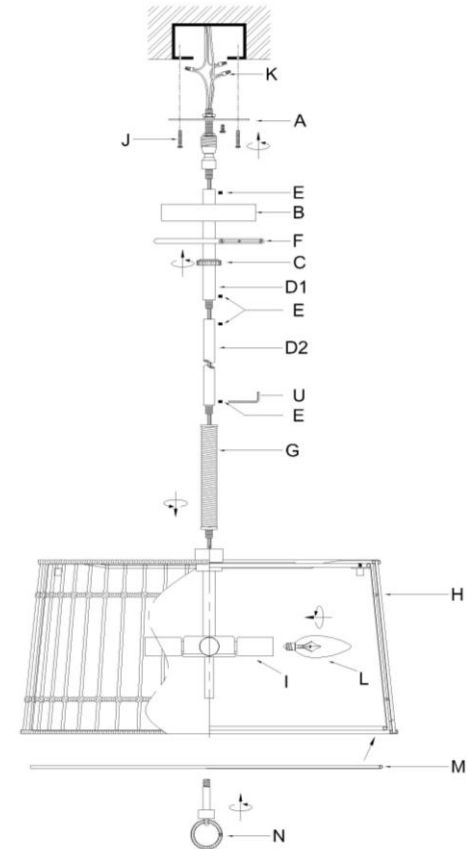

ASSEMBLY INSTRUCTIONS

- 1.REMOVE ALL PACKING CONTENTS AND PARTS FROM THE CARTON(S)CAREFULLY.
- 2.PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY.
- 3.SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
CONNECT THE WIRE ROD (G) AND CANOPY (B) WITH ROD (U1,2,3) FIRST YOU CONNECT THE RODS,LOCATE THE SINGLE HEX SCREWS (E) FIRST THEN TIGHTEN WITH ALLEN WRENCH(U) AFTER ALL RODS ARE CONNECTED. **BE SURE ALL THE HEXANGULAR SCREWS ARE TIGHT ENOUGH.**
- 5.CONNECT LAMP BODY(H) AND NATURAL REED ROD(G) BY TRUNING IN ANTICLOCKWISE UNTIL TIGHTEN.
- 6.CAREFULLY INSPECT THE FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDEGS MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING.THE BARE SILVER WIRE IS THE GROUNDED WIRE.
- 7.ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
- 8.CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
- 9.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
10. GENTLY TUCK THE WIRE CONNECTIONS(K) NEATLY INTO THE CEILING JUNCTION BOX.
- 11.ATTACH THE MOUNTING PLATE (A) TO THE OUTLET BOX USING THE MOUNTING SCREWS(J) AND TIGHTEN SCREWS(J) WITH A SCREWDRIVER.
- 12.PUSH COLLAR LOOP(C) ALONG WITH NATURAL REED PLATE(F)INTO THE CANOPY (B) AND TIGHTEN ONTO NIPPLE IN MOUNTING PLATE (A) BY TURNING IN A CLOCKWISE T
- 13.INSERT 4 TYPE B 60W BULB(or/CFL 13W or/LED 8W ,NOT INCLUDED)INTO THE SOCKET(I).**DO NOT EXCEED SPECIFIED WATTAGE**
- 14.FIX FABRIC DIFFUSER(M) TO THE LAMP BODY(H) WITH FINIAL(N) BY TURNING IN A CLOCKWISE TILL TIGHT.
- 15.RESTORE POWER TO THE JUNCTION BOX AND TEST FIXTURE.

CARE & MAINTENANCE

DUST WITH A DRY CLOTH.

FOR CUSTOMER SERVICE QUESTIONS CALL 1.888.488.8866

ARTERIOS HOME:972.488.9800

ARTERIOS CONTRACT:972.488.9800 EXT.321

DISCLAIMERS

WE RECOMMEND THE INSTALLATION OF THIS ELECTRICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ARTERIOS

