

ASSEMBLY INSTRUCTIONS

ITEM # 49370| Sconce

ITEM DESCRIPTION

MATERIAL TYPE: STEEL,CRYSTAL FINISH :ANTIQUE BRASS ,**CHAMPAGNE** CRYSTAL TOP COAT/SEALANT:
SOCKET TYPE: E12 CERAMIC SOCKET QTY: 1PC
BULB TYPE: TYPE B BULB WATTAGE: 60W or/CFL 13W or/LED 8W VOLTAGE:110V-120V
ITEM NET WEIGHT:

UL COMPLIANT

INSTALLATION ENVIRONMENT:SUITABLE FOR DAMP LOCATIONS

NOTE:

*YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON
*THIS ITEM MAY REQUIRE PERIODIC TIGHTENING




PARTS


| | | |
|----------|---------------------------|--------------|
| A | MOUNTING PLATE | 1 PC |
| B | SET SCREWS | 2 PCS |
| C | LAMP BODY | 1 PC |
| D | ROD | 1 PC |
| E | SOCKET | 1 PC |
| F | CRYSTAL SHADE | 1 PC |
| G | SOCKET RING | 1 PC |
| H | BULB(NOT INCLUDED) | 1 PC |
| I | BULB CLAMP | 1 PC |

INCLUDED ASSEMBLY HARDWARE


J mounting screws



K Plastic wire connectors



PRODUCT ASSEMBLY

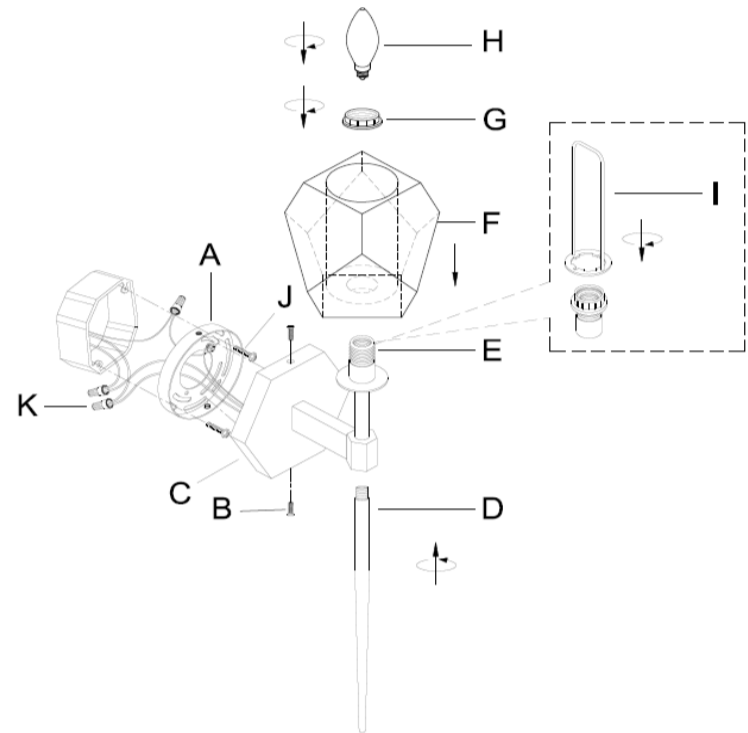

ASSEMBLY INSTRUCTIONS

- 1.REMOVE ALL PACKING CONTENTS AND PARTS FROM THE CARTON(S)CAREFULLY.
- 2.PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY.
- 3.SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
- 4.GENTLY PULL THE ELECTRICAL CORD FROM JUNCTION BOX, THEN PULL THE ELECTRICAL CORD FROM BACK PLATE THROUGH THE EXIT HOLE OF THE MOUNTING PLATE(A).
- 5.ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW.
IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
- 6.CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
- 7.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
- 8.GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE JUNCTION BOX.
- 9.ATTACH THE MOUNTING PLATE (A) TO THE OUTLET BOX BY USING THE MOUNTING SCREWS(J).**TIGHTEN SCREWS WITH SCREWDRIVER.**
- 10.ATTACH THE LAMP BODY(C) TO THE MOUNTING PLATE(A) BY USING THE ENCLOSED SET SCREWS(B).TIGHTEN SCREWS WITH SCREWDRIVER.
- 11.**PUT THE CRYSTAL SHADE(F) ONTO THE SOCKET(E) AND THEN TIGHTEN THE SOCKET RING(G) BY BULB CLAMP(I)TO SECURE THE CRYSTAL SHADE(F).**
- 12.ATTACHE THE ROD(D) TO THE LAMP BODY(C) AND TIGHTEN IN A CLOCKWISE DIRECTION.
- 13.INSERT 1 TYPE B **60W or/CFL 13W or/LED 8W** (NOT INCLUDED) INTO THE SOCKET(E).**DO NOT EXCEED SPECIFIED WATTAGE**
- 14.RESTORE POWER TO THE JUNCTION BOX AND TEST FIXTURE.

CARE & MAINTENANCE

DUST WITH A DRY CLOTH.

FOR CUSTOMER SERVICE QUESTIONS CALL 1.888.488.8866

ARTERIOS HOME:972.488.9800

ARTERIOS CONTRACT:972.488.9800 EXT.321

DISCLAIMERS

WE RECOMMEND THE INSTALLATION OF THIS ELECTICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ARTERIOS