# ASSEMBLY INSTRUCTIONS

#### ITEM DESCRIPTION

MATERIAL TYPE: STEEL.GLASS.K9 CRYSTAL FINISH: ANTIQUE BRASS.WHITE SWIRL.CLEAR

SOCKET QTY:12 SOCKET TYPE: E12 CERAMIC TOP COAT/SEALANT: BULB TYPE: TYPE B BULB WATTAGE: 25W or/CFL 7W or/LED 5W

ITEM NET WEIGHT: VOLTAGE:110V-120V

**UL COMPLAINT** 


INSTALLATION ENVIRONMENT: SUITABLE FOR DAMP LOCATIONS

\*YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON

\*THIS ITEM MAY REQUIRE PERIODIC TIGHTENING



#### **PRODUCT ASSEMBLY**

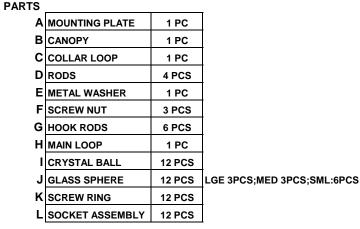

#### **INCLUDED ASSEMBLY HARDWARE**



## ASSEMBLY INSTRUCTIONS

1.REMOVE ALL PACKING CONTENTS FROM THE CARTON(S)CAREFULLY

2.REMOVE ALL PARTS FROM THE PACKAGE(S) CAREFULLY

3.PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEING ASSEMBLY

4.SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER

5.REMOVE THE MOUNTING PLATE(A)FROM THE CANOPY(B)BY TURNING COLLAR LOOP(C) IN A COUNTER CLOCKWISE DIRECTION.

6. SCREW THE ROD(C3) TO THE METAL WASHER(E) ,AND TIGHTEN THE HEXANGULAR SCREW IN THE SIDE DESIRE HOLE BY ALLEN WRENCH(O) AND SCREW THE ROD (C1) AND (C2). IF THE CEILING IS HIGH ENOUGH , PLS ASSEMBLE THE ROD(D4)IF NEED.

7.AS FIG 2,UNSCREW THE SCREW RING (K) OFF THE SOCKET ASSEMBLY(L),INSERT TYPE G 25W BULB(OR SUITABLE CFL 7W/LED 5W ,NOT INCLUDED)IN THE SOCKET, THEN ATTACH THE GLASS SPHERE(J) TO THE SOCKET PROPERLY, THEN SCREW THE SCREW RING (K) TO SECURE THE GLASS SPHERE TILL TIGHT. REPEAT THE ABOVE OPERATON THE REMAING 5PCS SML GLASS SPHERE(J1),3PCS MED GLASS SPHERE(J2) AND 3PCS LGE GLASS SPHERE(J3) DO NOT EXCEED SPECIFIED WATTAGE.

#### PLS NOTE INSTALL THE GLASS SPHERE SIZE LGE, MED AND SML BASED ON THE STICKERS ON THE LABEL ON THE SOCKET ASSEMBLY(L)

8.SCREW CRYSTAL BALL(I) ON THE MAIN LOOP(H)TILL TIGHT.REPEAT THE SAME OPERATION ON THE REMAINING 11PCS CRYSTAL BALL.

9. CONNECT THE HOOK ROD (G2)ON THE MAIN LOOP AS FIG 4,AND CONNECT HOOK ROD(G1) AS FIG 3, THEN INSERT THE OTHER END OF HOOK ROD(G1)TO THE METAL WASHER(E), AND THEN USE SCREW NUT(F) TO TIGHT IT AS FIG 1. REPEAT THE ABOVE OPERATIONS ON THE REMAINING 2 SIDE RODS.

10.CAREFULLY INSPECT THE PENDANT'S FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDEGS MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING. THE BARE SILVER WIRE IS THE GROUNDED WIRE.

1. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN)

OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (M) AND WRAP THE CONNECTION WITH

ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW

INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.

I2. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (M) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.

I3.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (M) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

4. GENTLY TRUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX.

15.ATTACH THE MOUNTING PLATE (A) WITH NIPPLE TO THE CEILING OUTLET BOX USING THE ENCLOSED MOUNTING SCREWS (N) AND TIGHTEN SCREWS WITH A SCREWDRIVER.

16. PUSH COLLAR LOOP IN CANOPY (B) AND THREAD ONTO NIPPLE IN MOUNTING PLATE (A) BY TURNING IN A CLOCKWISE

17.SCREW ROD (D1) TO THE CANOPY (B)BY USING HEXANGULAR SCREW AND ALLEN WRENCH(O)

BE SURE ALL THE HEXANGULAR SCREWS ARE TIGHT ENOUGH.

### CARE & MAINTENANCE

FOR CUSTOMER SERVICE QUESTION CALL 1-800-338-2150 ARTERIORS HOME:972.488.9800

DISCLAIMERS

WE RECOMMEND THE INSTALLATION OF THIS ELECTICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ARTERIORS CONTRACT:972.488.9800 EXT.321



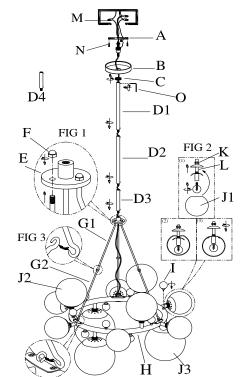


FIG 4