

ASSEMBLY INSTRUCTIONS

ITEM #49254 | Underwood Pendant

ITEM DESCRIPTION

MATERIAL TYPE: STEEL, GLASS FINISH: OIL RUBBER BORNZE .OPAL TOP COAT/SEALANT:
 SOCKET TYPE: E12 CERAMIC SOCKET QTY: 3
 BULB TYPE: TYPE B BULB WATTAGE: 60W or/CFL 16W or/LED 13W
 ITEM NET WEIGHT: TOP COAT/SEALANT:

UL COMPLAINT

INSTALLATION ENVIRONMENT: SUITABLE FOR DAMP LOCATIONS



NOTE:

- *YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON
- *THIS ITEM MAY REQUIRE PERIODIC TIGHTENING


PARTS

A	MOUNTING PLATE	1 PC
B	CANOPY	1 PC
C	COLLAR LOOP	1 PC
D	RODS	3 PCS
E	SET SCREW	1 PC
F	WASHER	1 PC
G	TOP BIG GLASS	1 PC
H	BOTTOM SML GLASS	1 PC
I	SOCKET ASSEMBLY	1 PC
J	SUPPORT PIPE	3 PCS

INCLUDED ASSEMBLY HARDWARE

K Plastic wire connectors 	L mounting screws 	M allen wrench
--------------------------------------	------------------------------	---------------------------

PRODUCT ASSEMBLY

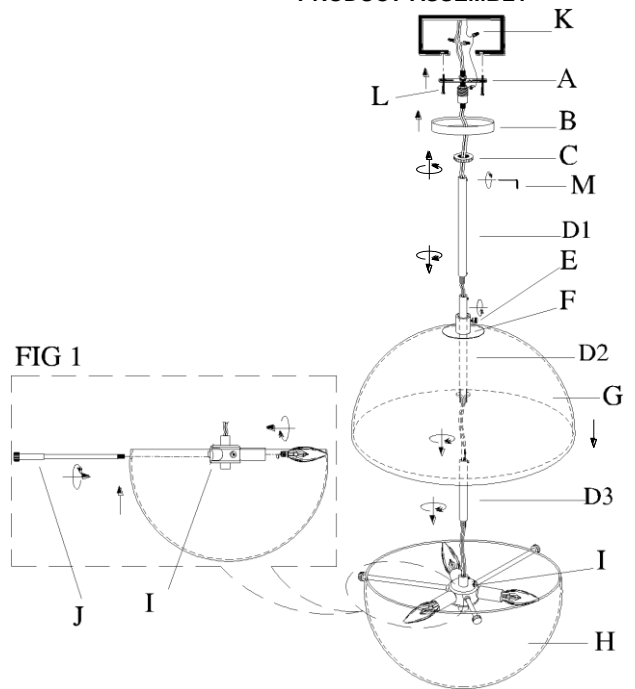

ASSEMBLY INSTRUCTIONS

1. REMOVE ALL PACKING CONTENTS FROM THE CARTON(S) CAREFULLY
2. REMOVE ALL PARTS FROM THE PACKAGE(S) CAREFULLY
3. PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY
4. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER
5. REMOVE THE MOUNTING PLATE(A) FROM THE CANOPY(B) BY TURNING COLLAR LOOP(C) IN A COUNTER CLOCKWISE DIRECTION.
6. SCREW THE ROD(D2) TO THE ROD(D1), ATTACH THE TOP BIG GLASS (G) UNDER THE WASHER(F), PLS ADJUST THE WASHER (F) IN A CERTAIN POSITION BY USING THE SET SCREW(E). PLS TIGHT THE HEXANGULAR SCREW IN THE SIDE DESIRE HOLE BY ALLEN WRENCH(M).
7. SCREW THE ROD(D3) TO THE ROD (D2), AND THEN THREAD THE SOCKET ASSEMBLY(I) TO THE ROD(D3) TILL TIGHT.
8. INSERT 3 TYPE B 60W BULBS (OR SUITABLE /CFL 16W OR/LED 10W BULBS ,NOT INCLUDED) IN THE SOCKETS. **DO NOT EXCEED SPECIFIED WATTAGE .**
9. LIFT THE BOTTOM SML GLASS(I) TO THE SAME LEVEL AS SOCKET ASSEMBLY, AS SHOWN IN FIG 1, PASS 3PCS SUPPORT PIPE(J) CAREFULLY THROUGH THE SIDE HOLE ON THE GLASS AND SCREW ONTO THE CETNER SOCKET SOCKET ASSMELBY (I) TILL TIGHT.
10. CAREFULLY INSPECT THE PENDANT'S FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDEGS MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING. THE BARE SILVER WIRE IS THE GROUND WIRE.
11. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN) OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
12. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
13. CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
14. GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX.
15. ATTACH THE MOUNTING PLATE (A) WITH NIPPLE TO THE CEILING OUTLET BOX USING THE ENCLOSED MOUNTING SCREWS (L) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
16. PUSH COLLAR LOOP IN CANOPY (B) AND THREAD ONTO NIPPLE IN MOUNTING PLATE (A) BY TURNING IN A CLOCKWISE
17. SCREW ROD (D1) TO CANOPY (B), USING HEXANGULAR SCREW AND ALLEN WRENCH(M) BE SURE ALL THE HEXANGULAR SCREWS ARE TIGHT ENOUGH.

CARE & MAINTENANCE

FOR CUSTOMER SERVICE QUESTION CALL 1-800-338-2150

DISCLAIMERS

ARTERIORS HOME: 972.488.9800

WE RECOMMEND THE INSTALLATION OF THIS ELECTRICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ARTERIORS CONTRACT: 972.488.9800 EXT 221

ARTERIORS