

ASSEMBLY INSTRUCTIONS

ITEM #49330 | Volta Pendant



ITEM DESCRIPTION

MATERIAL TYPE: STEEL, GLASS FINISH: PALE BRASS, OPAL WHITE
 SOCKET TYPE: E26 CERAMIC SOCKET QTY: 1 TOP COAT/SEALANT:
 BULB TYPE: TYPE A BULB WATTAGE: 60W/CFL 16W/LED 13W
 ITEM NET WEIGHT: VOLTAGE: 110V-120V


UL COMPLAINT
 INSTALLATION ENVIRONMENT: SUITABLE FOR DAMP LOCATIONS

NOTE:
 *YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON
 *THIS ITEM MAY REQUIRE PERIODIC TIGHTENING


PARTS

A	MOUNTING PLATE	1 PC
B	CANOPY	1 PC
C	COLLAR LOOP	1 PC
D	RODS	4 PCS
E	MAIN BODY	1 PC
F	FINIAL	1 PC
G	SET RING	1 PC
H	SOCKET ASSEMBLY	1 PC
I	GLASS SHADE	1 PC

INCLUDED ASSEMBLY HARDWARE

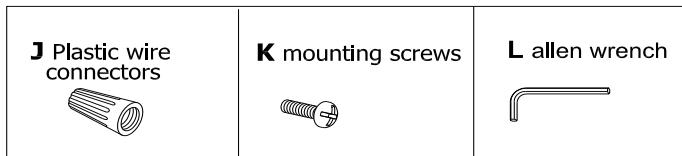

PRODUCT ASSEMBLY

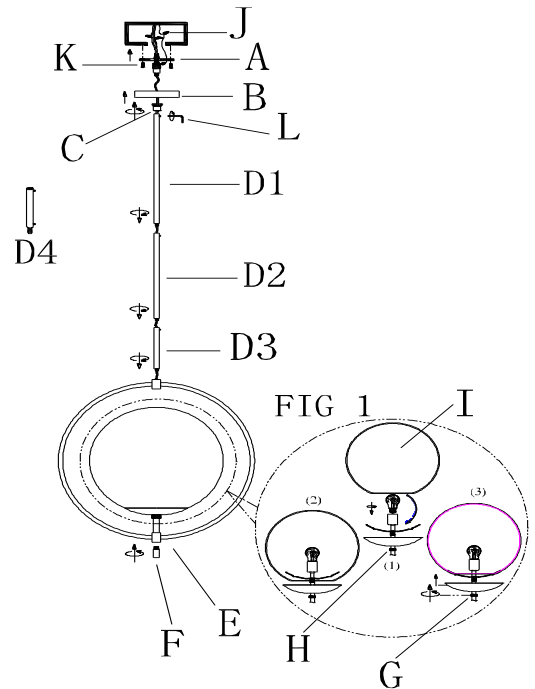

ASSEMBLY INSTRUCTIONS

1. REMOVE ALL PACKING CONTENTS FROM THE CARTON(S) CAREFULLY
2. REMOVE ALL PARTS FROM THE PACKAGE(S) CAREFULLY
3. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER
4. REMOVE THE MOUNTING PLATE (A) FROM THE CANOPY (B) BY TURNING COLLAR LOOP (C) IN A COUNTER CLOCKWISE DIRECTION.
5. SCREW THE ROD (D3) ONTO THE TOP OF MAIN BODY (E), AND TIGHTEN THE HEXANGULAR SCREW IN THE SIDE HOLE WITH ALLEN WRENCH (L). REPEAT THE SAME OPERATION ON THE ROD (D1) AND (D2).
IF THE CEILING IS HIGH ENOUGH, PLS ASSEMBLE THE ROD (D4) IF NEEDED.
6. AS FIG 1, UNSCREW THE SET RING (G) OFF THE SOCKET ASSEMBLY (H). INSERT ONE TYPE A 60W BULB (OR SUITABLE CFL 16W/LED 13W, NOT INCLUDED) IN THE SOCKET. **DO NOT EXCEED SPECIFIED WATTAGE.** THEN ATTACH THE GLASS SHADE (I) TO THE SOCKET PROPERLY, AND THEN SCREW THE SET RING (G) TO SECURE THE GLASS SHADE UNTIL TIGHT.
7. REMOVE THE MOUNTING PLATE (A) FROM THE CANOPY (B) BY TURNING COLLAR LOOP (C) IN A COUNTER CLOCKWISE DIRECTION.
8. CAREFULLY INSPECT THE PENDANT'S FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDGES MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING. THE BARE SILVER WIRE IS THE GROUNDED WIRE.
9. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN) OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (J) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
10. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (J) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
11. CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (J) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
12. GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX.
13. ATTACH THE MOUNTING PLATE (A) WITH NIPPLE TO THE CEILING OUTLET BOX USING THE ENCLOSED MOUNTING SCREWS (K) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
14. PUSH COLLAR LOOP IN CANOPY (B) AND THREAD ONTO NIPPLE IN MOUNTING PLATE (A) BY TURNING IN A CLOCKWISE
15. SCREW ROD (D1) TO CANOPY (B), USING HEXANGULAR SCREW AND ALLEN WRENCH (L)
BE SURE ALL THE HEXANGULAR SCREWS ARE TIGHT ENOUGH.
16. SCREW THE FINIAL (F) ONTO THE MAIN BODY (E) TILL TIGHT.

CARE & MAINTENANCE

FOR CUSTOMER SERVICE QUESTION CALL 1-800-338-2150
 ARTERIORS HOME: 972.488.9800
 ARTERIORS CONTRACT: 972.488.9800 EXT.321

DISCLAIMERS

WE RECOMMEND THE INSTALLATION OF THIS ELECTRICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ARTERIORS