

ASSEMBLY INSTRUCTIONS

ITEM # 49098 | **NALA PENDANT**

ITEM DESCRIPTION

MATERIAL TYPE: STEEL,GLASS FINISH :ANTIQUE BRASS + OPAL & CLEAR CRYSTAL TOP COAT/SEALANT:
 SOCKET TYPE: E26 CERAMIC SOCKET QTY:1
 BULB TYPE: TYPE A BULB WATTAGE: 60W or/CFL 12W or/LED 10W VOLTAGE:110V-120V
 ITEM NET WEIGHT:
 UL COMPLIANT
 INSTALLATION ENVIRONMENT:SUITABLE FOR DAMP LOCATIONS



NOTE:
 *YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON
 *THIS ITEM MAY REQUIRE PERIODIC TIGHTENING

PARTS


A	MOUNTING PLATE	1 PC
B	CANOPY	1 PC
C	COLLAR LOOP	1 PC
D	ROD	4 PCS
E	HEX SCREWS	8 PCS
G	LAMP BODY	1 PC
H	SOCKET	1 PC
I	GLASS	1 PC
L	SOCKET RING	1 PC
M	BULB(NOT INCLUDED)	1 PC

INCLUDED ASSEMBLY HARDWARE

J mounting screws



K Plastic wire connectors




TOOLS NEEDED(INCLUDED)

P Allen wrench



PRODUCT ASSEMBLY

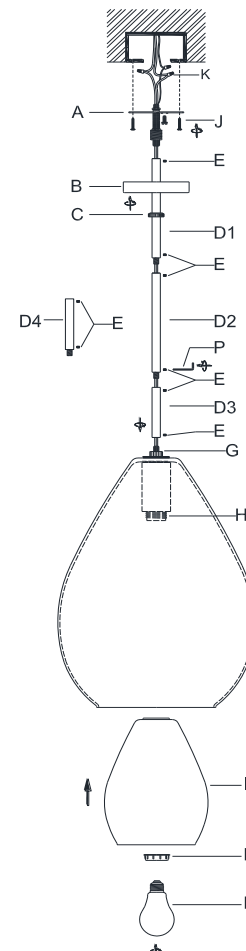

ASSEMBLY INSTRUCTIONS

- 1.REMOVE ALL PACKING CONTENTS AND PARTS FROM THE CARTON(S)CAREFULLY.
- 2.PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY.
- 3.SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
- 4.CONNECT LAMP BODY(G) AND CANOPY(B)WITH ROD(D1,D2,D3,D4),WHEN YOU CONNECT THE RODS,LOOSEN THE SMALL HEX SCREWS(E) FIRST THEN TIGHTEN WITH ALLEN WRENCH(P) AFTER ALL RODS ARE CONNECTED. BE SURE ALL THE HEXANGULAR SCREWS ARE TIGHT ENOUGH.
NOTE: IF YOU WANT THE FIXTURE TO BE SEMI-FLUSH MOUNT, YOU ONLY NEED CONNECT LAMP BODY(G) AND CANOPY(B) WITH ROD(D4).
- 5.CAREFULLY INSPECT THE FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDEGS MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING.THE BARE SILVER WIRE IS THE GROUNDED WIRE.
- 6.ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
- 7.CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
- 8.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
9. GENTLY TUCK THE WIRE CONNECTIONS(K) NEATLY INTO THE CEILING JUNCTION BOX.
- 10.ATTACH THE MOUNTING PLATE (A) TO THE OUTLET BOX USING THE MOUNTING SCREWS(J) AND TIGHTEN SCREWS(J) WITH A SCREWDRIVER.
- 11.PUSH COLLAR LOOP(C) IN CANOPY (B) AND TIGHTEN ONTO NIPPLE IN MOUNTING PLATE (A) BY TURNING IN A CLOCKWISE.
- 12.ATTACH THE OPAL GLASS(I) ONTO THE SOCKET(H) AND THEN TIGHTEN BY THE SOCKET RING (L)
- 13.INSERT 1 TYPE A 60W BULB(or/CFL 12W or/LED 10W ,NOT INCLUDED)INTO THE SOCKET(H).**DO NOT EXCEED SPECIFIED WATTAGE**
- 14.RESTORE POWER TO THE JUNCTION BOX AND TEST FIXTURE.

CARE & MAINTENANCE

DUST WITH A DRY CLOTH.

FOR CUSTOMER SERVICE QUESTIONS CALL 1.888.488.8866

ARTERIORS HOME:972.488.9800

ARTERIORS CONTRACT:972.488.9800 EXT.321

DISCLAIMERS

WE RECOMMEND THE INSTALLATION OF THIS ELECTRICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ARTERIORS