

ASSEMBLY INSTRUCTIONS

ITEM #49386| Donley Flush Mount

ITEM DESCRIPTION

MATERIAL TYPE: STEEL.GLASS FINISH:OIL RUBBER BRONZE.OPAL WHITE TOP COAT/SEALANT:
 SOCKET TYPE: E26 CERAMIC SOCKET QTY:1
 BULB TYPE: TYPE A BULB WATTAGE: 60W or/CFL 16W or/LED 13W
 ITEM NET WEIGHT: TOP COAT/SEALANT:



UL COMPLAINT
 INSTALLATION ENVIRONMENT: SUITABLE FOR DAMP LOCATIONS



NOTE:

- *YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON
- *THIS ITEM MAY REQUIRE PERIODIC TIGHTENING

PARTS

A	MOUNTING PLATE	1 PC
B	CANOPY	1 PC
C	CANOPY SCREW	3 PCS
D	GLASS SHADE	1 PC
E	SOCKET RING	1 PC

INCLUDED ASSEMBLY HARDWARE

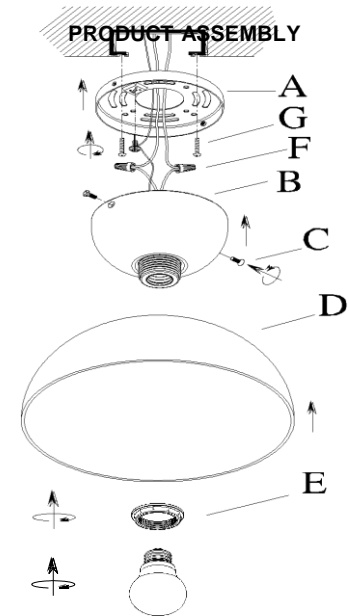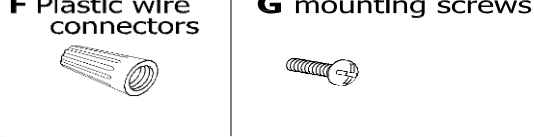

ASSEMBLY INSTRUCTIONS

- 1.REMOVE ALL PACKING CONTENTS FROM THE CARTON(S)CAREFULLY
- 2.REMOVE ALL PARTS FROM THE PACKAGE(S) CAREFULLY
- 3.PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY
- 4.SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER
- 5.REMOVE THE MOUNTING PLATE(A)FROM THE CANOPY(B)BY LOOSEN CANOPY SCREW(C) IN A COUNTER CLOCKWISE DIRECTION.
- 6.UNSCREW THE SOCKET RING(E) OFF THE SOCKET.
- 7.ATTACH THE GLASS SHADE (D)TO THE SOCKET,THEN USE SOCKET RING(E) TO SECURE IT TILL TIGHT.
- 8.CAREFULLY INSPECT THE PENDANT'S FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDEGS MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING.THE BARE SILVER WIRE IS THE GROUNDED WIRE.
- 9.ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN) OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (F) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
10. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (F) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
- 11.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (F) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
12. GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX.
- 13.ATTACH THE MOUNTING PLATE (A) WITH NIPPLE TO THE CEILING OUTLET BOX USING THE ENCLOSED MOUNTING SCREWS (G) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
14. PUSH MOUNTING PLATE IN CANOPY (B) AND THREAD 3PCS CANOPY SCREWS TILL TIGHT.
- 15.INSERT ONE TYPE A 60W BULB(OR SUITABLE /CFL 16W OR/LED 13W BULB ,NOT INCLUDED) IN THE SOCKET.
DO NOT EXCEED SPECIFIED WATTAGE .

CAUTION:

**PLS BE ENSURE THE INSULATION IN CANOPY PROPERLY POSITIONED AND COVERED BY MOUNTING PLATE IN ASSMBLING.
 DO NOT TOUCH THE INSULATION BY HAND.**

CARE & MAINTENANCE

FOR CUSTOMER SERVICE QUESTION CALL 1-800-338-2150 **DISCLAIMERS**

ARTERIORS HOME:972.488.9800

WE RECOMMEND THE INSTALLATION OF THIS ELECTIONAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ARTERIORS CONTRACT:972.488.9800 EXT.321

ARTERIORS