

ASSEMBLY INSTRUCTIONS

ITEM# 89485 | Griff Chandelier

ITEM DESCRIPTION

MATERIAL TYPE: STEEL FINISH: TEXTURE AB TOP COAT/SEALANT
 SOCKET TYPE: E12 CERAMIC SOCKET QTY: 8PCS
 BULB TYPE: TYPE B BULB WATTAGE: 60W OR/CFL 12W OR/LED 10W VOLTAGE: 110V-120V
 ITEM NET WEIGHT:
 UL COMPLIANT
 INSTALLATION ENVIRONMENT: SUITABLE FOR DAMP LOCATIONS




NOTE:

*YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON
 *THIS ITEM MAY REQUIRE PERIODIC TIGHTENING
 *MIN 90°C SUPPLY CONDUCTORS

PARTS



A	MOUNTING PLATE	1 PC
B	CANOPY	1 PC
C	COLLAR LOOP	1 PC
D1,D2,D3	RODS	1 PC
E	HEX SCREWS	6 PCS
F	BULB (NOT INCLUDED)	8PCS
G	LAMP BODY	1 PC
H	SOCKETS	8 PCS

PRODUCT ASSEMBLY

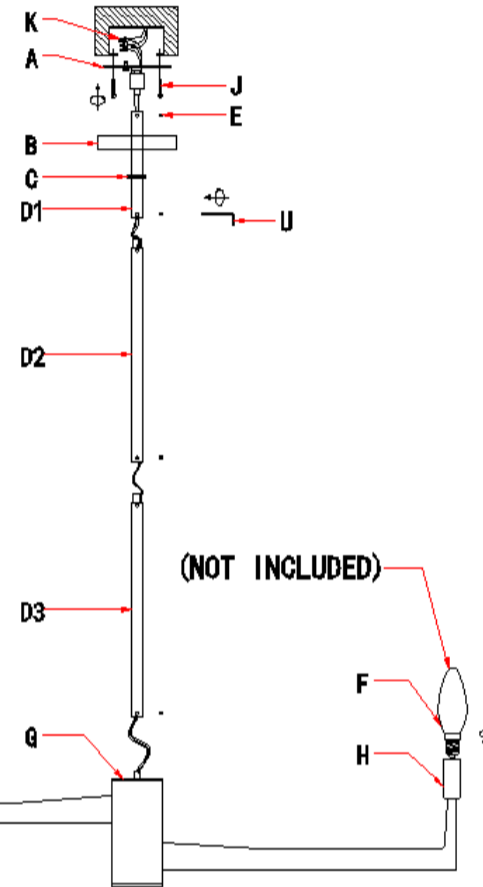

INCLUDED ASSEMBLY HARDWARE

TOOLS NEEDED (INCLUDED)

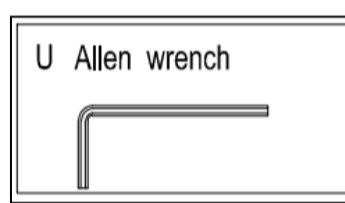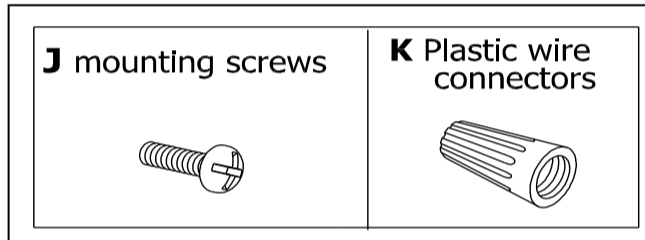

ASSEMBLY INSTRUCTIONS

1. REMOVE ALL PACKING CONTENTS AND PARTS FROM THE CARTON(S) CAREFULLY.
2. PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY.
3. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
4. PASS THE WIRE THROUGH THE ROD (D3), SCREW THE ROD (D3) TO THE LAMP BODY (G), AND SIDE HOLE WITH ALLEN WRENCH (U). REPEAT THE SAME OPERATION ON THE ROD (D1) AND (D2).
BE SURE TIGHTEN THE HEXANGULAR SCREW IN THE SIDE HOLE WITH ALLEN WRENCH (U).
5. CONNECT ROD (D1), COLLAR LOOP (C), CANOPY (B) & MOUNTING PLATE (A) WITH NIPPLE ON MOUNTING PLATE (A).
6. CAREFULLY INSPECT THE FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDGES MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING. THE BARE WIRE IS THE GROUNDED WIRE.
7. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
8. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
9. CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
10. GENTLY TUCK THE WIRE CONNECTIONS (K) NEATLY INTO THE CEILING JUNCTION BOX.
11. ATTACH THE MOUNTING PLATE (A) TO THE OUTLET BOX USING THE MOUNTING SCREWS (J) AND TIGHTEN SCREWS (J) WITH A SCREWDRIVER.
12. PUSH COLLAR LOOP (C) IN CANOPY (B) AND TIGHTEN ONTO NIPPLE IN MOUNTING PLATE (A) BY TURNING IN A CLOCKWISE.
13. INSERT 8 TYPE B 60W BULB (or/CFL 12W or/LED 10W ,NOT INCLUDED) INTO THE SOCKET (H). **DO NOT EXCEED SPECIFIED WATTAGE**
14. RESTORE POWER TO THE JUNCTION BOX AND TEST FIXTURE.

CARE & MAINTENANCE

DUST WITH A DRY CLOTH.

DISCLAIMERS

FOR CUSTOMER SERVICE QUESTIONS CALL 1.888.488.8866 WE RECOMMEND THE INSTALLATION OF THIS ELECTRICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ARTERIOS HOME: 972.488.9800

ARTERIOS CONTRACT: 972.488.9800 EXT.321

ARTERIOS