

# ASSEMBLY INSTRUCTIONS

ITEM #49788 | Norfolk Pendant

## ITEM DESCRIPTION

MATERIAL TYPE: STEEL.LINEN-COTTON FINISH:ANTIQUE BRASS.PURE WHITE  
 SOCKET TYPE: E26 CERAMIC SOCKET QTY:1 TOP COAT/SEALANT:  
 BULB TYPE: TYPE A BULB WATTAGE: 100W/CFL 26W/LED 20W  
 ITEM NET WEIGHT: VOLTAGE:110V-120V

UL COMPLAINT  
 INSTALLATION ENVIRONMENT:SUITABLE FOR DAMP LOCATIONS




NOTE:  
 \*YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON  
 \*THIS ITEM MAY REQUIRE PERIODIC TIGHTENING


## PARTS

<b>A</b>	<b>MOUNTING PLATE</b>	<b>1 PC</b>
<b>B</b>	<b>CANOPY</b>	<b>1 PC</b>
<b>C</b>	<b>CANOPY SCREW</b>	<b>4 PCS</b>
<b>D</b>	<b>HANDLE</b>	<b>1 PC</b>
<b>E</b>	<b>SOCKET ASSEMBLY</b>	<b>1 PC</b>
<b>F</b>	<b>SHADE</b>	<b>1 PC</b>
<b>G</b>	<b>SOCKET RING</b>	<b>1 PC</b>

## INCLUDED ASSEMBLY HARDWARE

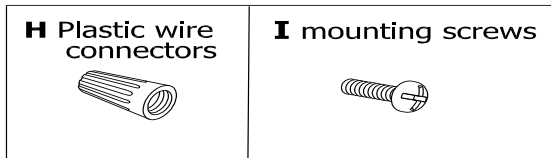

## PRODUCT ASSEMBLY

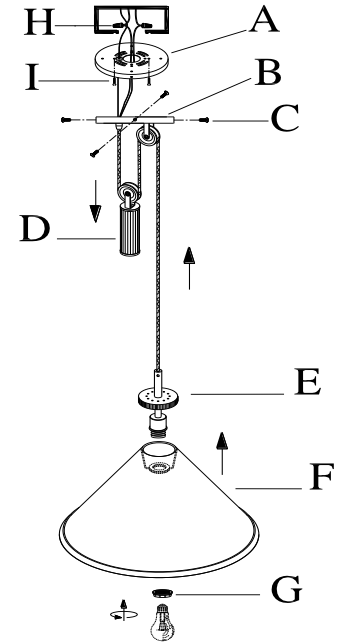

## ASSEMBLY INSTRUCTIONS

- 1.REMOVE ALL PACKING CONTENTS FROM THE CARTON(S)CAREFULLY.
- 2.REMOVE ALL PARTS FROM THE PACKAGE(S) CAREFULLY.
- 3.SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
- 4.REMOVE THE MOUNTING PLATE(A)FROM THE CANOPY(B)BY LOOSE 4PCS CANOPY SCREWS(C).
- 5.UNSCREW THE SOCKET RING(G)OFF SOCKET,ATTACH SHADE(F) TO SOCKET ASSEMBLY(E), AND THEN USE SOCKET RING(G)TO SECURE SHADE TILL TIGHT. PLS BE ENSURE THE SHADE IS ASSEMBLED PROPERLY.
- 7.INSERT ONE TYPE A 100W BULB(OR SUITABLE CFL/26W,OR LED 20W BULB, NOT INCLUDED)S) INTO THE SOCKET. E.  
**DO NOT EXCEED SPECIFIED WATTAG**
- 8.CAREFULLY INSPECT THE PENDANT'S FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDEGS MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING.THE BARE SILVER WIRE IS THE GROUNDED WIRE.
- 9.ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (H) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
- 10.CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (H) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
- 11.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (H) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
- 12.GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX.
- 13.ATTACH THE MOUNTING PLATE (A) WITH NIPPLE TO THE CEILING OUTLET BOX USING THE ENCLOSED MOUNTING SCREWS (I) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
- 14.PUSH MOUNTING PLATE(A) IN CANOPY (B) AND THREAD THE CANOPY SCREWS(C) TO SECURE IT TILL TIGHT.
- 15.GENTLY LOWER THE PENDANT UNTIL THE CORD IS FULLY EXTENDED.

**\*CAUTION: IF ADJUST THE SHADE, PLS HOLD THE HANDLE(D) AND PULL THE CORD GENTLY. BE SURE THE CORD IN PULLEY PROPERLY.**

## CARE & MAINTENANCE

FOR CUSTOMER SERVICE QUESTION CALL 1-800-338-2150  
 ARTERIORS HOME:972.488.9800  
 ARTERIORS CONTRACT:972.488.9800 EXT.321

## DISCLAIMERS

WE RECOMMEND THE INSTALLATION OF THIS ELECTIONAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

# ARTERIORS