

ASSEMBLY INSTRUCTIONS

ITEM #89494 | Oberon Pendant

ITEM DESCRIPTION

MATERIAL TYPE: STEEL, GLASS, CRYSTAL FINISH: ANTIQUE BRASS, OPAL WHITE, CLEAR
 SOCKET TYPE: E12 CERAMIC SOCKET QTY: 3 TOP COAT/SEALANT:
 BULB TYPE: TYPE G BULB WATTAGE: 40W or/CFL 10W or/LED 9W
 ITEM NET WEIGHT: VOLTAGE: 110V-120V

UL COMPLAINT

INSTALLATION ENVIRONMENT: SUITABLE FOR DAMP LOCATIONS






NOTE:

*YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON
 *THIS ITEM MAY REQUIRE PERIODIC TIGHTENING

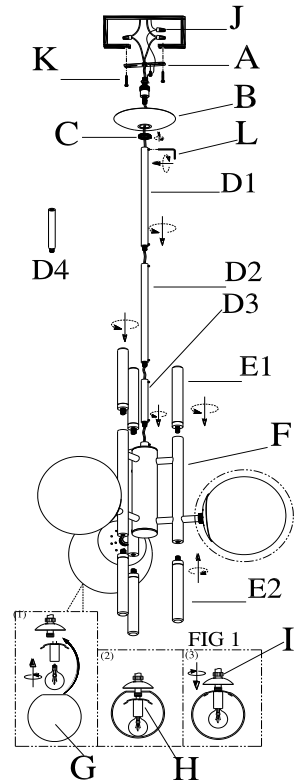
PARTS

A	MOUNTING PLATE	1 PC
B	CANOPY	1 PC
C	COLLAR LOOP	1 PC
D	RODS	4 PCS
E	CRYSTAL RODS	6 PCS
F	MAIN BODY	1 PC
G	GLASS SPHERE	3 PCS
H	SOCKET ASSEMBLY	3 PCS
I	METAL CAP	3 PCS

INCLUDED ASSEMBLY HARDWARE

J Plastic wire connectors	K mounting screws	L allen wrench
		

PRODUCT ASSEMBLY



ASSEMBLY INSTRUCTIONS

1. REMOVE ALL PACKING CONTENTS FROM THE CARTON(S) CAREFULLY.
2. REMOVE ALL PARTS FROM THE PACKAGE(S) CAREFULLY.
3. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER
4. REMOVE THE MOUNTING PLATE (A) FROM THE CANOPY (B) BY TURNING COLLAR LOOP (C) IN A COUNTER CLOCKWISE DIRECTION.
5. SCREW THE ROD (D3) TO THE MAIN BODY (F), AND TIGHTEN THE HEXANGULAR SCREW IN THE SIDE HOLE WITH ALLEN WRENCH (L). REPEAT THE SAME OPERATION ON THE ROD (D1) AND (D2). IF THE CEILING IS HIGH ENOUGH, PLS ASSEMBLE THE ROD (D4) IF NEED.
6. AS FIG 1, UNSCREW THE METAL CAP (I) OFF THE SOCKET ASSEMBLY (H), INSERT TYPE G 40W BULB (OR SUITABLE CFL 10W/LED 9W, NOT INCLUDED) IN THE SOCKET. **DO NOT EXCEED SPECIFIED WATTAGE.** THEN ATTACH THE GLASS SPHERE (G) TO THE SOCKET PROPERLY, AND THEN SCREW THE METAL CAP (I) TO SECURE THE GLASS SPHERE UNTIL TIGHT. REPEAT THE ABOVE OPERATIONS ON THE REMAINING 2PCS GLASS SPHERE.
7. SCREW 6PCS CRYSTAL ROD (E1) AND (E2) ONE BY ONE ON THE MAIN BODY TILL TIGHT, BE ENSURE ADJUST STRAIGHT.
8. CAREFULLY INSPECT THE PENDANT'S FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDGES MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING. THE BARE SILVER WIRE IS THE GROUNDED WIRE.
9. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN) OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (J) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
10. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (J) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
11. CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (J) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
12. GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX.
13. ATTACH THE MOUNTING PLATE (A) WITH NIPPLE TO THE CEILING OUTLET BOX USING THE ENCLOSED MOUNTING SCREWS (K) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
14. PUSH COLLAR LOOP IN CANOPY (B) AND THREAD ONTO NIPPLE IN MOUNTING PLATE (A) BY TURNING IN A CLOCKWISE
15. SCREW ROD (D1) TO CANOPY (B), USING HEXANGULAR SCREW AND ALLEN WRENCH (L) BE SURE ALL THE HEXANGULAR SCREWS ARE TIGHT ENOUGH.

CARE & MAINTENANCE

FOR CUSTOMER SERVICE QUESTION CALL 1-800-338-2150

ARTERIORS HOME: 972.488.9800

ARTERIORS CONTRACT: 972.488.9800 EXT. 321

DISCLAIMERS

WE RECOMMEND THE INSTALLATION OF THIS ELECTRICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ARTERIORS