

ASSEMBLY INSTRUCTIONS

ITEM #49749 |Heloise Pendant

ITEM DESCRIPTION

MATERIAL TYPE: STEEL,LINEN-COTTON FINISH :OIL RUBBER BRONZE,PURE WHITE
 SOCKET TYPE: E26 CERAMIC SOCKET QTY:1 TOP COAT/SEALANT:
 BULB TYPE: TYPE A BULB WATTAGE: 100W or/CFL 26W or/LED 20W
 ITEM NET WEIGHT: VOLTAGE:110V-120V

UL COMPLAINT

INSTALLATION ENVIRONMENT:SUITABLE FOR DAMP LOCATIONS





NOTE:

- *YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON
- *THIS ITEM MAY REQUIRE PERIODIC TIGHTENING


PARTS

A	MOUNTING PLATE	1 PC
B	CANOPY	1 PC
C	COLLAR LOOP	1 PC
D	PIPES	4 PCS
E	METAL ROD	2 PCS
F	SHADE	1 PC
G	C WASHER	1 PC
H	SCREW RING	1 PC
I	SOCKET PIPE	1 PC
J	METAL PLATE	1 PC
K	METAL NUT	4 PCS

INCLUDED ASSEMBLY HARDWARE

L Plastic wire connectors 	M mounting screws 	N allen wrench 
---	---	--

PRODUCT ASSEMBLY

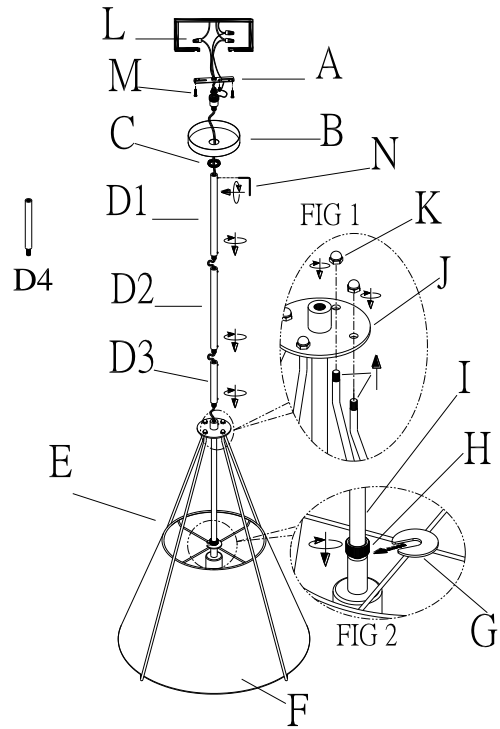

ASSEMBLY INSTRUCTIONS

- 1.REMOVE ALL PACKING CONTENTS FROM THE CARTON(S)CAREFULLY
- 2.REMOVE ALL PARTS FROM THE PACKAGE(S) CAREFULLY
- 3.PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY
- 4.SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER
- 5.REMOVE THE MOUNTING PLATE(A)FROM THE CANOPY(B)BY TURNING COLLAR LOOP(C) IN A COUNTER CLOCKWISE DIRECTION.
6. SCREW THE PIPE(C3) TO THE METAL PLATE(I) ,AND TIGHTEN THE HEXANGULAR SCREW IN THE SIDE DESIRE HOLE BY ALLEN WRENCH(N) AND SCREW THE PIPE (C1) AND (C2). IF THE CEILING IS HIGH ENOUGH , PLS ASSEMBLE THE PIPE(D4)IF NEED.
- 7.INSTALL 1 TYPE A 100W BULB(OR SUITABLE CFL 26W/LED 20W BULB,NOT INCLUDED)INTO THREADED SOCKET.**DO NOT EXCEED SPECIFIED WATTAGE.**
- 8.AS FIG 2,ATTACH THE SHADE(F) TO THE SOCKET PIPE(I),GENTLY INSERT C WASHER(G) PASS THE PIPE AND THEN SECURE THE SCREW RING(H) TILL TIGHT.
- 9.BE CAREFUL USE 2PCS METAL ROD(E) TO HOLD THE SHADE EVENLY AND SCREW 4PCS METAL NUTS(K) TO SECURE THE RODS TILL TIGHT AS FIG 1.
- 10.CAREFULLY INSPECT THE PENDANT'S FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDEGS MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING.THE BARE SILVER WIRE IS THE GROUNDED WIRE.
11. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN) OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (L) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
12. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (L) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
- 13.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (L) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
14. GENTLY TRUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX.
- 15.ATTACH THE MOUNTING PLATE (A) WITH NIPPLE TO THE CEILING OUTLET BOX USING THE ENCLOSED MOUNTING SCREWS (M) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
16. PUSH COLLAR LOOP IN CANOPY (B) AND THREAD ONTO NIPPLE IN MOUNTING PLATE (A) BY TURNING IN A CLOCKWISE
- 17.SCREW PIPE (D1) TO THE CANOPY (B)BY USING HEXANGULAR SCREW AND ALLEN WRENCH(N) BE SURE ALL THE HEXANGULAR SCREWS ARE TIGHT ENOUGH.

CARE & MAINTENANCE

FOR CUSTOMER SERVICE QUESTION CALL 1-800-338-2150
 ARTERIORS HOME:972.488.9800
 ARTERIORS CONTRACT:972.488.9800 EXT.321

DISCLAIMERS

WE RECOMMEND THE INSTALLATION OF THIS ELECTRICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ARTERIORS