

# ASSEMBLY INSTRUCTIONS

ITEM #89473 |Hilliard Chandelier


## ITEM DESCRIPTION

MATERIAL TYPE: STEEL.GLASS FINISH :ORB&ANTIQUE BRASS.OPAL WHITE  
SOCKET TYPE: E12 CERAMIC &E26 CERAMIC SOCKET QTY:10& TOP COAT/SEALANT:  
BULB TYPE: TYPE G,TYPE A BULB WATTAGE: 40W or/CFL 10W or/LED 9W  
AND 25W or/CFL 7W or/ LED 5W

ITEM NET WEIGHT: TOP COAT/SEALANT:

UL COMPLAINT

INSTALLATION ENVIRONMENT:SUITABLE FOR DAMP LOCATIONS

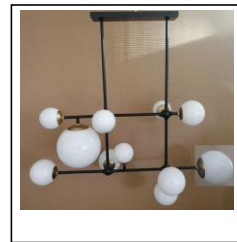

## NOTE:

\*YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON






\*THIS ITEM MAY REQUIRE PERIODIC TIGHTENING

## PARTS


<b>A</b>	<b>MOUNTING PLATE</b>	<b>1 PC</b>
<b>B</b>	<b>CANOPY</b>	<b>1 PC</b>
<b>C</b>	<b>METAL RING</b>	<b>2 PCS</b>
<b>D</b>	<b>RODS</b>	<b>8 PCS</b>
<b>E</b>	<b>MAIN BODY</b>	<b>1 PC</b>
<b>F</b>	<b>SOCKET ASSEMBLY</b>	<b>11 PCS</b>
<b>G</b>	<b>GLASS SPHERE</b>	<b>11 PCS</b>
<b>H</b>	<b>SCREW RING</b>	<b>11 PCS</b>
<b>I</b>	<b>SET RING</b>	<b>2 PCS</b>
<b>J</b>	<b>CANOPY SCREW</b>	<b>4 PCS</b>

XL:1, L:1, M:5, S:4

## INCLUDED ASSEMBLY HARDWARE

<b>K</b> Plastic wire connectors 	<b>L</b> mounting screws 	<b>M</b> allen wrench 
<b>N</b> anchor 	<b>O</b> strengthened screw 	

## PRODUCT ASSEMBLY

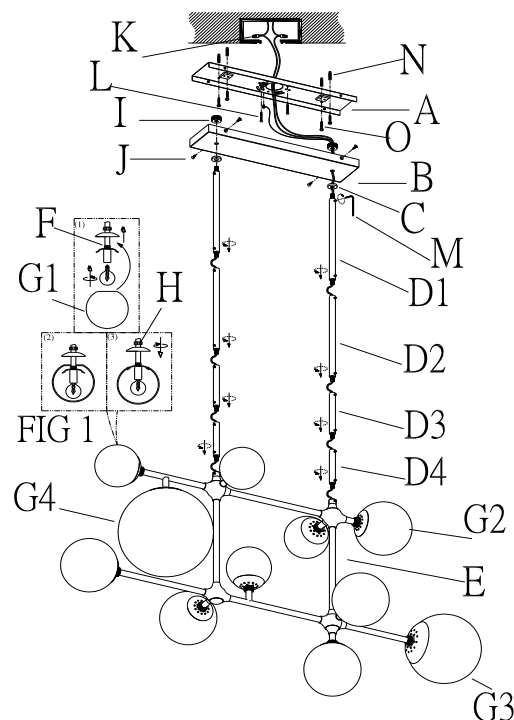

## ASSEMBLY INSTRUCTIONS

- 1.REMOVE ALL PACKING CONTENTS FROM THE CARTON(S)CAREFULLY
- 2.REMOVE ALL PARTS FROM THE PACKAGE(S) CAREFULLY
- 3.PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEING ASSEMBLY
- 4.SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER
- 5.REMOVE THE MOUNTING PLATE(A)FROM THE CANOPY(B)BY LOOSE 4PCS CANOPY SCREWS(J)
- 6.SCREW THE ROD(D4) TO THE MAIN BODY(E) ,AND TIGHTEN THE HEXANGULAR SCREW IN THE SIDE DESIRE HOLE BY ALLEN WRENCH(M)  
REPEAT THE SAME OPERATION ON THE ROD (C1),(C2) AND (C3).
- 7.PASS THE ROD(D1)THROUGH METAL RING(C ) AND CANOPY(B), AND TIGHTEN IT BY USING SET RING(I).PASS THROUGH THE CORD AS DRAWING SHOW.  
REPEAT THE ABOVER OPERATIONS(7) AND (8) ON ANOTHER SIDE.
- 8.AS FIG 1,UNSCREW THE SCREW RING(H) OFF THE SOCKET ASSEMBLY(F),INSERT TYPE G 25W BULB(OR SUITABLE CFL 7W/LED 5W ,NOT INCLUDED)  
IN THE SOCKET. THEN ATTACH THE GLASS SPHERE(G1) TO THE SOCKET PROPERLY,THEN TIGHEN SCREW RING(H)TO SECURE THE GLASS SPHERE TILL TIGHT.  
REPEAT THE ABOVE OPERATION THE REMAING 3PCS SML GLASS SPHERE(G1),5PCS MED GLASS SPHERE(G2). 1PC LGE GLASS SPHERE(G3),
- 9.REPEAT STEP 8. PLS INSTALL TYPE A 40W BULB (OR SUITABLE CFL 10W/LED 9W ,NOT INCLUDED)ON THE LABLED XL SOCKET. **DO NOT EXCEED SPECIFIED WATTAGE.**  
**PLS NOTE INSTALL THE GLASS SPHERE SIZE XL, L, M,S BASED ON THE STICKERS ON THE LABEL ON THE SOCKET ASSEMBLY(F) .**
- 10.CAREFULLY INSPECT THE PENDANT'S FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDEGS MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING.THE BARE SILVER WIRE IS THE GROUNDED WIRE.
11. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN) OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
- 12.CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
- 13.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
14. GENTLY TRUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX.
- 15.ATTACH THE MOUNTING PLATE (A) WITH NIPPLE TO THE CEILING OUTLET BOX USING THE ENCLOSED MOUNTING SCREWS (L) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
- 16.IF ATTACH TO CEMENT CEILING, USE ANCHOR(N) FIRST THEN SCREW STRENGTHENED SCREWS(O)INTO THE ANCHOR.
- 17.IF ATTACH TO WOOD CEILING,THREAD STRENGTHENED SCREW(O)DIRECTLY INTO CEILING
18. PUSH MOUNTING PLATE(A) IN CANOPY (B) AND THREAD THE CANOPY SCREWS(J) TO SECURE IT TILL TIGHT.

## CARE & MAINTENANCE

FOR CUSTOMER SERVICE QUESTION CALL 1-800-338-2150

## DISCLAIMERS

ARTERIORES HOME:972.488.9800

WE RECOMMEND THE INSTALLATION OF THIS ELECTRICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ARTERIORES CONTRACT:972.488.9800 EXT.321

# ARTERIORES