


# ASSEMBLY INSTRUCTIONS

ITEM # 89480 | Harriet Chandelier

## ITEM DESCRIPTION

MATERIAL TYPE: STEEL, GLASS FINISH : ANTIQUE BRASS, ORGANIC FROSTED GLASS TOP COAT/SEALANT  
 SOCKET TYPE: E12 CERAMIC SOCKET QTY: 8 PCS  
 BULB TYPE: TYPE B BULB WATTAGE: 60W or CFL 13W or LED 8W VOLTAGE: 110V-120V  
 ITEM NET WEIGHT:  
 UL COMPLIANT  
 INSTALLATION ENVIRONMENT: SUITABLE FOR DAMP LOCATIONS

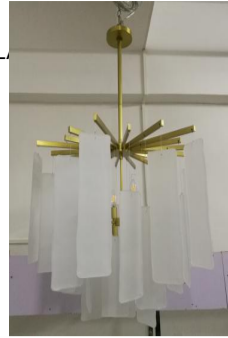


NOTE:  
 \*YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON


## PARTS

A	MOUNTING PLATE	1 PC
B	CANOPY	1 PC
C	COLLAR LOOP	1 PC
D1,D2,D3	RODS	3 PCS
E	LAMP BODY	1 PC
F	HEX SCREWS	8 PCS
G	LATHE PART	1 PC
H	BEADED PIPE	1 PC
I	JUNCTION BOX	1 PC
L	SOCKETS	8 PCS
N	STEEL ROPE	1 PC
O	COUPLING	1 PC
P	STRENGTHEN SCREWS	1 PC
Q	BRACKET	1 PC
S	BULB (NOT INCLUDED)	8 PCS
T	GLASS1	1 PC
U	GLASS2	3 PCS
V	GLASS3	3 PCS
W	GLASS4	6 PCS
X	GLASS5	6 PCS
Y	GLASS6	6 PCS
Z	GLASS7	8 PCS

## PRODUCT ASSEMBLY

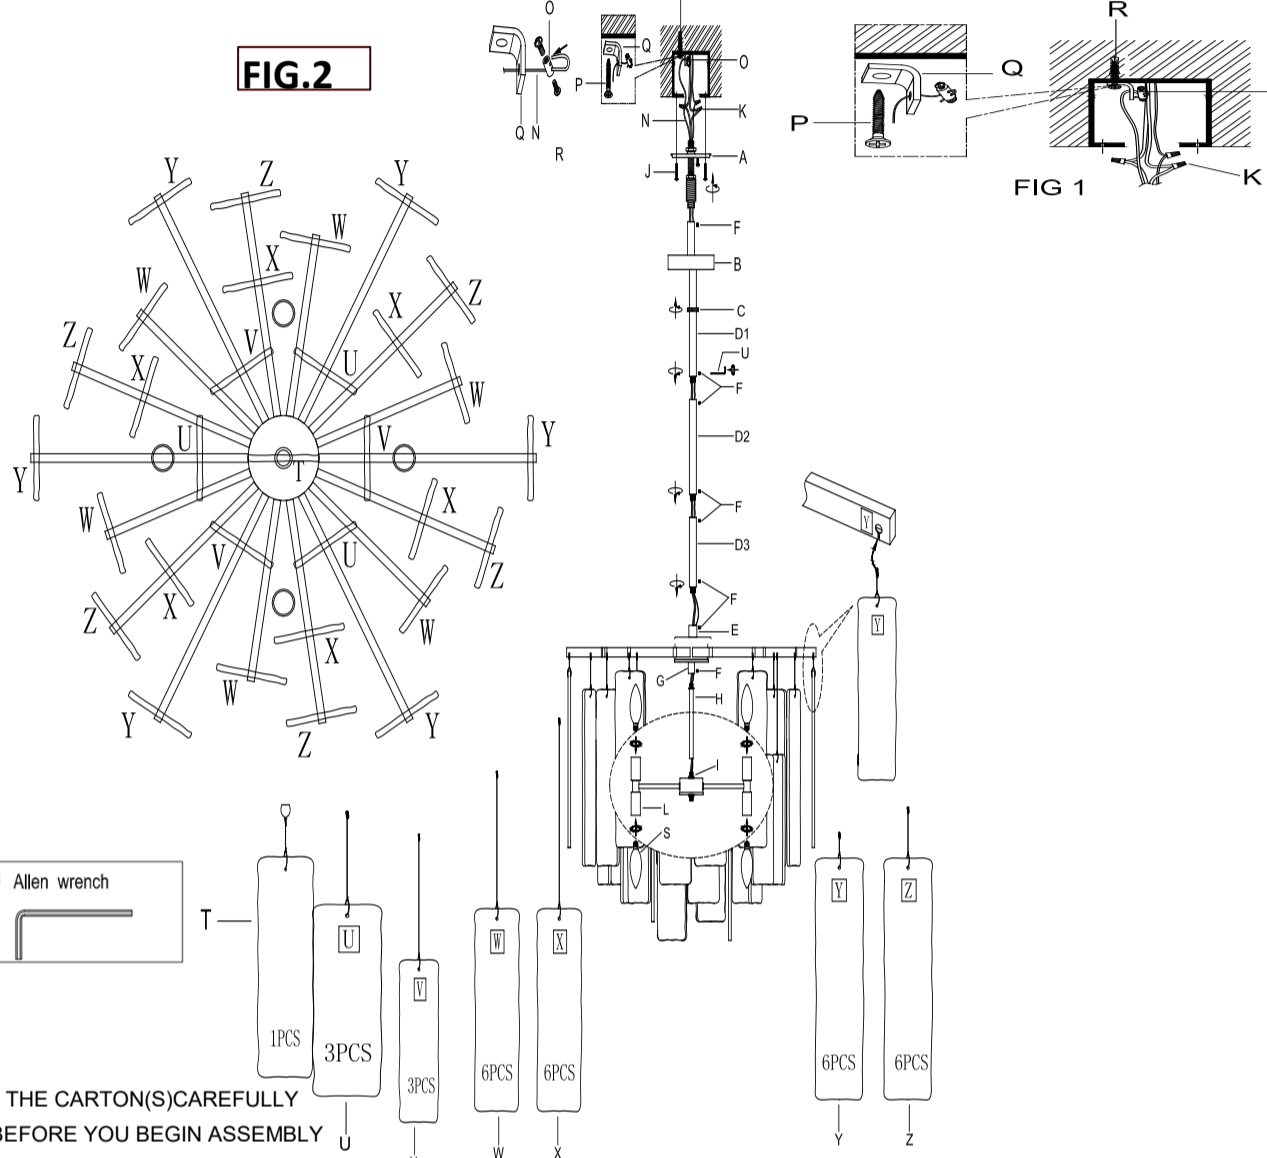

## INCLUDED ASSEMBLY HARDWARE



## ASSEMBLY INSTRUCTIONS

- REMOVE ALL PACKING CONTENTS AND PARTS FROM THE CARTON(S) CAREFULLY
- PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY
- SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
- CONNECT THE JUNCTION BOX (I) TO THE LATHE PART (G) BY TIGHTEN BOTH ENDS OF THE BEADED PIPE (H) IN A CLOCKWISE DIRECTION, AND THEN TIGHTEN HEX SCREWS (F) WITH AN ALLEN WRENCH (U) AFTER ALL RODS ARE CONNECTED. **BE SURE ALL THE HEXANGULAR SCREWS ARE TIGHT ENOUGH.**
- CONNECT LAMP BODY (E) AND CANOPY (B) WITH RODS (D1, D2, D3,). WHEN YOU CONNECT THE RODS, LOOSEN THE SMALL HEX SCREWS (F) FIRST THEN TIGHTEN WITH ALLEN WRENCH (U) AFTER ALL RODS ARE CONNECTED. **BE SURE ALL THE HEXANGULAR SCREWS ARE TIGHT ENOUGH.**
- REMOVE THE MOUNTING PLATE (A) FROM THE CANOPY (B) BY TURNING COLLAR LOOP (C) IN A COUNTER CLOCKWISE DIRECTION.
- ATTACHED THE STEEL ROPE (N) TO THE JUNCTION BOX ON THE CEILING WITH THE BRACKET (Q), AND FIX WITH THE STRENGTHEN SCREW (P) AS FIG. (IF THE CEILING IS WALL, YOU NEED DRILL A HOLE AND INSERT THE ANCHOR (R) TO THE WALL FIRST; THEN REPEAT ABOVE STEP 7.)  
 BE SURE TO TIGHTEN TWO SCREWS ATTACHED ON THE COUPLING (O).
- PULL THE ELECTRICAL CORD OF "J BOX" THROUGH THE EXIT HOLE OF THE MOUNTING PLATE
- CAREFULLY INSPECT THE PENDANT'S FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDEGS MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING. THE BARE SILVER WIRE IS THE GROUNDED WIRE.
- ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW (H) INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
- CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
- CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
- GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX.
- ATTACH THE MOUNTING PLATE (A) WITH NIPPLE TO THE CEILING OUTLET BOX USING THE ENCLOSED MOUNTING SCREWS (J) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
- PUSH COLLAR LOOP UP TO CANOPY (B) AND TIGHTEN ONTO NIPPLE IN MOUNTING PLATE (A) BY TURNING IN A CLOCKWISE TO SECURE CANOPY.
- INSERT 8 TYPE T 60W BULB (OR CFL 13W OR LED 8W, NOT INCLUDED) INTO THE SOCKETS (L). DO NOT EXCEED SPECIFIED WATTAGE
- ATTACH THE GLASS (T) ON THE BOTTOM OF THE JUNCTION BOX (I), THEN ATTACH GLASS (U, V, W, X, Y, Z) INTO THE HOLES OF THE ARM AS FIG. 2. **PLS START FROM INSIDE TO OUTSIDE. NOTE: WHEN THE ASSEMBLY IS COMPLETED, REMOVE ALL STICKER ON THE GLASS.**
- RESTORE POWER TO THE JUNCTION BOX AND TEST FIXTURE.

## CARE & MAINTENANCE

DUST WITH A DRY CLOTH.

FOR CUSTOMER SERVICE QUESTIONS CALL 1.888.488.8866  
 ARTERIORS HOME: 972.488.9800  
 ARTERIORS CONTRACT: 972.488.9800 EXT.321

## DISCLAIMERS

WE RECOMMEND THE INSTALLATION OF THIS ELECTRICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

# ARTERIORS