

ASSEMBLY INSTRUCTIONS

ITEM #89637 | Berlin Chandelier

ITEM DESCRIPTION

MATERIAL TYPE: STEEL FINISH :ANTIQUE BRASS TOP COAT/SEALANT:
 SOCKET TYPE: E12 BAKELITE SOCKET QTY:10
 BULB TYPE: TYPE G BULB WATTAGE: 40W or/CFL 10W or/LED 9W
 ITEM NET WEIGHT: TOP COAT/SEALANT:
 UL COMPLAINT
 INSTALLATION ENVIRONMENT:SUITABLE FOR DAMP LOCATIONS






NOTE:

*YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON
 *THIS ITEM MAY REQUIRE PERIODIC TIGHTENING

PARTS

A	MOUNTING PLATE	1 PC
B	CANOPY	1 PC
C	COLLAR LOOP	1 PC
D	PIPES	3 PCS
E	METAL PLATE	1 PC
F	HOOK ROD	6 PCS
G	MAIN BODY	1 PC
H	SOCKET ASSEMBLY	10 PCS


INCLUDED ASSEMBLY HARDWARE

I Plastic wire connectors 	J mounting screws 	K allen wrench 
---	---	--

ASSEMBLY INSTRUCTIONS

- 1.REMOVE ALL PACKING CONTENTS FROM THE CARTON(S)CAREFULLY.
- 2.REMOVE ALL PARTS FROM THE PACKAGE(S) CAREFULLY.
- 3.PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY.
- 4.SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
- 5.REMOVE THE MOUNTING PLATE(A)FROM THE CANOPY(B)BY TURNING COLLAR LOOP(C) IN A COUNTER CLOCKWISE DIRECTION.
- 6.AS FIG 2, ROTATE THE SOCKET ASSEMBLY (H) 10PCS VERTICALLY AND BE ENSURE THEM EVEN DISTRIBUTED.
- 7.SCREW THE PIPE(D3)ON THE TOP OF METAL PLATE , AND TIGHTEN 2PCS HEXANGULAR SCREWS IN THE DESIRED HOLE BY ALLEN WRENCH(K) TILL TIGHT. PLS BE ENSURE THE SCREWS ARE TIGHT ENOUGH.
- 8.AS FIG 1 SHOWN, CONNECT THE HOOK ROD(F1) AND HOOK ROD(F2) TILL SECURE. REPEAT THIS OPERATION ON THE ANOTHER 2 SIDES.
- 9.CAREFULLY INSPECT THE PENDANT'S FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDEGS MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING.THE BARE SILVER WIRE IS THE GROUNDED WIRE.
10. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN) OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (I) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
11. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (I) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
- 12.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (I) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
13. GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX.
- 14.ATTACH THE MOUNTING PLATE (A) WITH NIPPLE TO THE CEILING OUTLET BOX USING THE ENCLOSED MOUNTING SCREWS (J) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
15. PUSH COLLAR LOOP IN CANOPY (B) AND THREAD ONTO NIPPLE IN MOUNTING PLATE (A) BY TURNING IN A CLOCKWISE
16. INSERT 10 TYPE G 40W BULBS(OR SUITABLE CFL/10W,OR LED 9W BULBS, NOT INCLUDED) INTO THE SOCKETS.
DO NOT EXCEED SPECIFIED WATTAGE.
17. PLS BE ENSURE THE CHANDELIER IS HORIZONTALY. OR YOU MAN NEED ADUST THE HOOK RODS.

PRODUCT ASSEMBLY

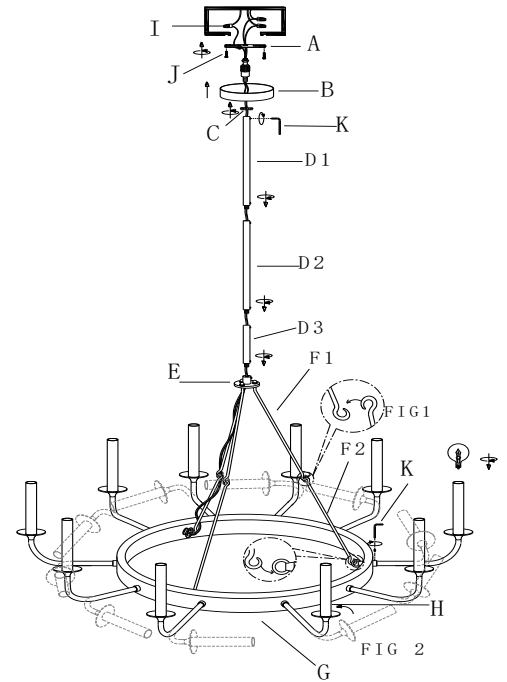

CARE & MAINTENANCE

FOR CUSTOMER SERVICE QUESTION CALL 1-800-338-2150
 ARTERIORS HOME:972.488.9800
 ARTERIORS CONTRACT:972.488.9800 EXT.321

DISCLAIMERS

WE RECOMMEND THE INSTALLATION OF THIS ELECTRICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ARTERIORS