

ASSEMBLY INSTRUCTIONS

ITEM #DC49019 | FLUSH MOUNT

ITEM DESCRIPTION

MATERIAL TYPE: STEEL.GLASS.K9 CRYSTAL FINISH :ANTIQUE BRASS.OPAL WHITE.CLEAR
SOCKET TYPE: E26 CERAMIC SOCKET QTY:2 TOP COAT/SEALANT:
BULB TYPE: TYPE B BULB WATTAGE: 40W or/CFL 10W or/LED 9W
ITEM NET WEIGHT: TOP COAT/SEALANT:

UL COMPLAINT

INSTALLATION ENVIRONMENT: SUITABLE FOR DAMP LOCATIONS



NOTE:


- *YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON
- *THIS ITEM MAY REQUIRE PERIODIC TIGHTENING

PARTS

A	MOUNTING BAR	1 PC
B	CANOPY	1 PC
C	THREADED SCREW	2 PCS
D	HEAT INSULATION COTTON	1 PC
E	METAL RING	1 PC
F	MOUNTING BEAD	2 PCS
G	PIPE	1 PC
H	GLASS SHADE	1 PC
I	WASHER	1 PC
J	FINIAL	1 PC

INCLUDED ASSEMBLY HARDWARE

K Plastic wire connectors 	L mounting screws 	M allen wrench
--------------------------------------	------------------------------	---------------------------

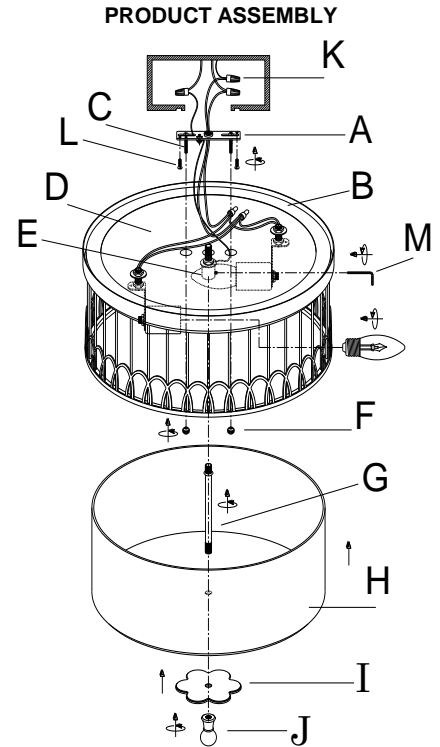

ASSEMBLY INSTRUCTIONS

- 1.REMOVE ALL PACKING CONTENTS FROM THE CARTON(S)CAREFULLY
- 2.REMOVE ALL PARTS FROM THE PACKAGE(S) CAREFULLY
- 3.PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY
- 4.SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER
- 5.LOOSEN THE MOUNTING BAR(A)FROM THE CANOPY(B) IN A COUNTER CLOCKWISE DIRECTION.
- 6.CAREFULLY INSPECT THE PENDANT'S FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDEGS MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING.THE BARE SILVER WIRE IS THE GROUNDED WIRE.
- 7.ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN) OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
8. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
- 9.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
10. GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX.
- 11.ATTACH THE MOUNTING BAR (A) WITH NIPPLE TO THE CEILING OUTLET BOX USING THE ENCLOSED MOUNTING SCREWS (L) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
12. PLS BE ENSURE 2PCS THREADED SCREWS(C)PASS THROUGH HEAT INSULATION COTTON(D,GLUED IN THE CANOPY TOGETHER) AND THEN TIGHTEN WITH 2PCS MOUNTING BEADS(F).
13. SCREW THE PIPE ONTO THE METAL RING(E),BE SURE TIGHTEN THE HEXANGULAR SCREW IN THE SIDE DESIRE HOLE BY ALLEN WRENCH(M).
14. INSERT 2PCS TYPE B 40W BULBS(OR SUITABLE /CFL 10W OR/LED 9W BULBS ,NOT INCLUDED) IN THE SOCKET
DO NOT EXCEED SPECIFIED WATTAGE .
- 15.ATTACH THE GLASS SHADE(H)TO THE CANOPY(B), BE SURE THE PIPE PASS THROUGH THE BOTTOM HOLE ,THEN USE WASHER(I) AND FINIAL(J) TO SCREW TIGHT ENOUGH TO HOLD THE GLASS SHADE(H).
- 16.RESTORE POWER TO THE JUNCTION BOX AND TEST FIXTURE

CARE & MAINTENANCE

FOR CUSTOMER SERVICE QUESTION CALL 1-800-338-2150

ARTERIOS HOME:972.488.9800

ARTERIOS CONTRACT:972.488.9800 EXT.321

DISCLAIMERS

WE RECOMMEND THE INSTALLATION OF THIS ELECTRICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ARTERIOS