

ASSEMBLY INSTRUCTIONS

ITEM #49369 /PENDANT

MATERIAL TYPE: METAL+ ACRYLIC

FINISH :EBN+ANTIQUE BRASS

TOP COAT/SEALANT

SOCKET TYPE:LED

SOCKET QTY:

BULB TYPE:

BULB WATTAGE: **LED 40W**

VOLTAGE:100V-120V

ITEM NET WEIGHT:

UL COMPLIANT

INSTALLATION ENVIRONMENT:SUITABLE FOR DAMP LOCATIONS





NOTE:

- *YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON
- *THIS ITEM MAY REQUIRE PERIODIC TIGHTENING
- *MIN 75°C SUPPLY CONDUCTORS


PARTS

A	MOUNTING PLATE	1PC
B	CANOPY	1PC
C	COLLAR LOOP	1 PC
D	POST	1PC
E	HEX SCREW	2 PCS
F	LAMP BODY	1PC
G1.2.3.4	RODS	1 PC
H	FINIAL	1PC
P	2-WIRE TERMINAL	1 PC
O	POWER CABLE	1 PC


PRODUCT ASSEMBLY

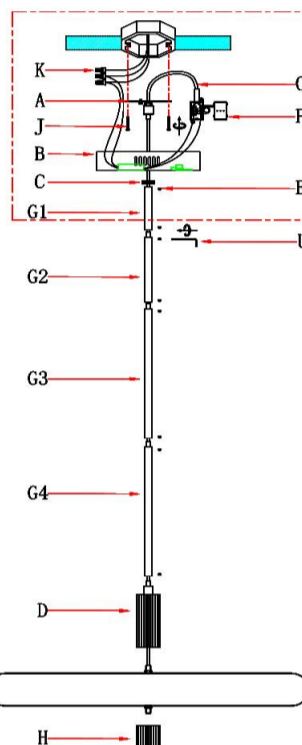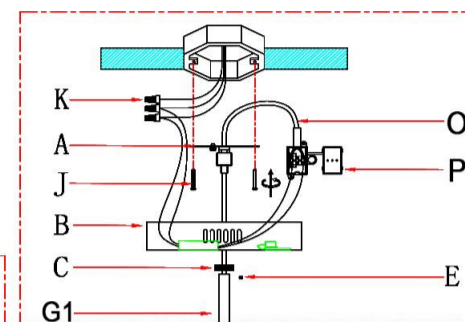


INCLUDED ASSEMBLY HARDWARE

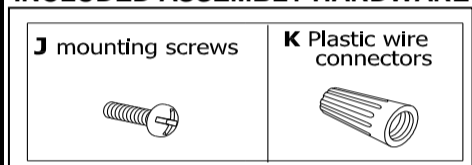

TOOLS NEEDED(INCLUDED)

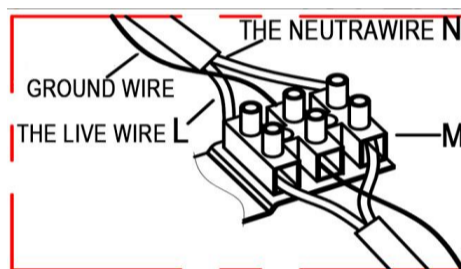

TOOLS NEEDED(INCLUDED)

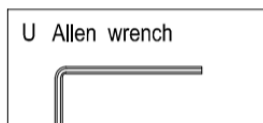

PLEASE IGNORE THIS DEVICE IN THE CANOPY

ASSEMBLY INSTRUCTIONS

- 1.REMOVE ALL PACKING CONTENTS AND PARTS FROM THE CARTON(S)CAREFULLY.
- 2.PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY.
- 3.SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
- 4.INSERT THE POST(D) TO LAMP BODY(F) AND THEN TIGHTEN CLOCKWISE DIRECTION,REPEAT THE SAME OPERATION ON THE ROD(G4)、 ROD(G3)、 ROD(G2) AND ROD(G1) WHEN YOU CONNECT THE RODS,LOOSEN THE SMALL HEX SCREWS(E) IN THE SIDE HOLE FIRST, THEN TIGHTEN WITH ALLEN WRENCH(U) AFTER ALL RODS ARE CONNECTED. BE SURE ALL THE HEXANGULAR SCREWS ARE TIGHT ENOUGH.
5. CONNECT ROD(G1),COLLAR LOOP(C), CANOPY(B) & MOUNTING PLATE(A) WITH NIPPLE ON MOUNTING PLATE(A).
- 6.PULL THE ELECTRICAL CORD OF "J BOX"THROUGH THE EXIT HOLE OF THE MOUNTING PLATE(A)
- 7.**PLEASE PAY SPECIAL ATTENTION THAT YOU DO NOT NEED TO CONNECT THE WIRE CONNECT DEVICE(M).**
IT IS USED FOR THE WIRE CONNECTION FOR EURO-MARKET.
- 8.CAREFULLY INSPECT THE FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDEGS MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING.THE BARE SILVER WIRE IS THE GROUNDED WIRE.
- 9.ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
- 10.CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
- 11.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
12. CONNECT THE LAMP INPUT POWER CABLE(O) USUALLY BLACK AND WHITE WIRE, ACCORDING TO THE PRINCIPLE OF CONNECTING THE BLACK WIRE TO THE + POLE AND THE WHITE WIRE TO THE -POLE TO THE 2-WIRE TERMINAL (P), AND THEN COVER THE 2-WIRE TERMINAL (P) CAP.
- 13.GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE JUNCTION BOX.
14. ATTACH THE MOUNTING PLATE (A) WITH NIPPLE TO THE CEILING OUTLET BOX USING THE ENCLOSED MOUNTING SCREWS (J) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
- 15.PUSH COLLAR LOOP(C) IN CANOPY (B) AND THREAD ONTO THE NIPPLE IN MOUNTING PLATE (A) BY TURNING IN A CLOCKWISE DIRECTION.
16. PUSH FINIAL(H) ONTO THE LAMP BODY (F) BY TURNING IN A CLOCKWISE DIRECTION.
- 17.RESTORE POWER TO THE JUNCTION BOX AND TEST FIXTURE.

CARE & MAINTENANCE

DUST WITH A DRY CLOTH.

FOR CUSTOMER SERVICE QUESTIONS CALL 1.888.488.8866

ARTERIOS HOME:972.488.9800

ARTERIOS CONTRACT:972.488.9800 EXT.321

DISCLAIMERS

WE RECOMMEND THE INSTALLATION OF THIS ELECTRICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN