

ASSEMBLY INSTRUCTIONS

ITEM #49517 | ALABASTER TOTEM PENDANT

ITEM DESCRIPTION

MATERIAL TYPE: STEEL, GLASS, ALABAS FINISH: EBN, MATTE SWIRL GLASS TOP COAT/SEALANT:
 SOCKET TYPE: E26 CERAMIC SOCKET QTY: 1PC
 BULB TYPE: TYPE A BULB WATTAGE: **60W or/CFL 13W or/LED 8W** VOLTAGE: 110V-120V
 ITEM NET WEIGHT: 9.39KGS
 UL COMPLIANT
 INSTALLATION ENVIRONMENT: SUITABLE FOR DAMP LOCATIONS



NOTE:

*YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON
 *THIS ITEM MAY REQUIRE PERIODIC TIGHTENING

PARTS

A	MOUNTING PLATE	1 PC
B	CANOPY	1 PC
C	COLLAR LOOP	1 PC
D	LAMP BODY	1 PC
E	SOCKET	1 PC
F	BULB(not included bulb)	1 PC
G	ROUND GLASS SHADE	1 PC

INCLUDED ASSEMBLY HARDWARE

J MOUNTING SCREWS	K PLASTIC WIRE CONNECTORS

ASSEMBLY INSTRUCTIONS

1. REMOVE ALL PACKING CONTENTS AND PARTS FROM THE CARTON(S) CAREFULLY.
2. PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY.
3. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
4. CONNECT THE CANOPY(B) TO THE LAMP BODY(D) BY USING CHAIN THROUGH THE CANOPY(B), ROTATE THE FIXING ON THE CHAIN IN THE COUNTER CLOCKWISE DIRECTION AND HOOK THE UPPER AND LOWER RING RESPECTIVELY. THEN ROTATE THE FIXING PART IN CLOCKWISE DIRECTION AFTER HOOKING.
5. PULL THE ELECTRICAL CORD OF "J BOX" THROUGH THE EXIT HOLE OF THE MOUNTING PLATE(A).
6. CAREFULLY INSPECT THE FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDGES MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING. THE BARE WIRE IS THE GROUND.
7. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROOVE. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
8. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
9. CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
10. GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE JUNCTION BOX.
11. ATTACH THE MOUNTING PLATE (A) TO THE OUTLET BOX BY USING THE MOUNTING SCREWS(J) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
12. PUSH COLLAR LOOP(C) IN CANOPY (B) AND TIGHTEN ONTO NIPPLE IN MOUNTING PLATE (A) BY TURNING IN A CLOCKWISE DIRECTION.
13. ATTACH THE BULB(F) TO SOCKET(E) IN A CLOCKWISE DIRECTION, THEN INSTALL THE ROUND GLASS SHADE(G) IN A CLOCKWISE DIRECTION AS WELL.
14. RESTORE POWER TO THE JUNCTION BOX AND TEST FIXTURE.
15. **FOR NON-USER REPLACEABLE LIGHT SOURCES: THE LIGHT SOURCE CONTAINED IN THIS LUMINAIRE SHALL ONLY BE REPLACE BY THE MANUFACTURER OR HIS SERVICE AGENT OR A SIMILAR QUALIFIED PERSON.**

CLEANING INSTRUCTIONS:

TO CLEAN, USE SOFT CLOTH ONLY. DO NOT USE ANY CHEMICAL OR ABRASIVE CLEANERS.

CARE & MAINTENANCE

DUST WITH A DRY CLOTH.

FOR CUSTOMER SERVICE QUESTIONS CALL 1.888.488.8866


ARTERIORS HOME: 972.488.9800

ARTERIORS CONTRACT: 972.488.9800 EXT.321

DISCLAIMERS

WE RECOMMEND THE INSTALLATION OF THIS ELECTRICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICAL CONTRACTOR.

PRODUCT ASSEMBLY

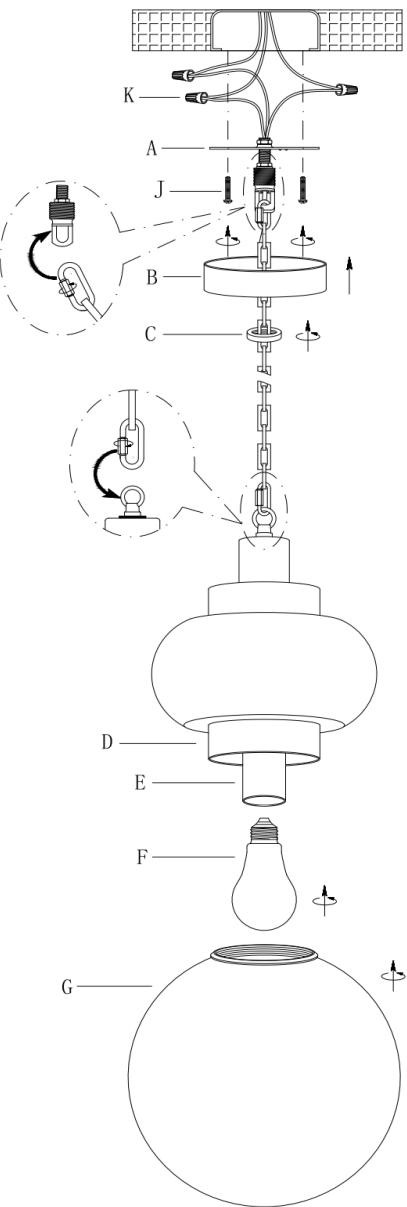

ARTERIORS