ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION

MATERIAL TYPE: STEEL, GLASS FINISH: FOIL BRONZE.FOIL COFFEE.OPAL GLASS TOP COAT/SEALANT:

SOCKET TYPE: LED SOCKET QTY: 1PC


BULB TYPE: LED BULB WATTAGE: 13W / 3000K / 90+CRI **VOLTAGE: 100V-130V**

ITEM NET WEIGHT: 14.21KGS

UL COMPLIANT


INSTALLATION ENVIRONMENT: SUITABLE FOR DAMP LOCATIONS

*YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON

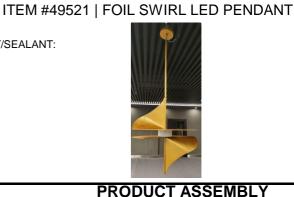


PARTS A MOUNTING PLATE 1 PC **B** CANOPY 1 PC C COLLAR LOOP 1 PC D1,D2,D3,D4 ROD 4 PCS E HEX SCREW 9 PCS Q LAMP BODY 1 PC O PIPE 1 PC **H** BOTTOM METAL PART 1 PC FINIAL 1 PC

P THREADED NIPPLE **INCLUDED ASSEMBLY HARDWARE**



GROUND WIRE PLEASE IGNORE THIS **DEVICE IN THE CANOPY**

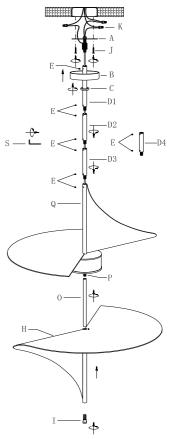

ASSEMBLY INSTRUCTIONS

1.REMOVE ALL PACKING CONTENTS AND PARTS FROM THE CARTON(S) CAREFULLY.

2.PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY.

3.SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.

4.CONNECT THE LAMP BODY(Q) AND CANOPY(B) WITH ROD(D1,D2,D3,D4), WHEN YOU CONNECT THE RODS, LOOSEN

1 PC

THE SMALL HEX SCREWS(E) FIRST, THEN TIGHTEN WITH ALLEN WRENCH(S) AFTER ALL RODS ARE CONNECTED.

BE SURE ALL THE HEX SCREWS(E) ARE TIGHT ENOUGH.

NOTE: IF YOU WANT THE FIXTURE TO BE SEMI-FLUSH MOUNT, YOU ONLY NEED TO CONNECT THE LAMP BODY(Q) AND CANOPY(B) WITH ROD(D4).

5.PLEASE PAY SPECIAL ATTENTION THAT YOU DO NOT NEED TO CONNECT THE TERMINAL BLOCK (M)

IN THE CANOPY. IT IS USED FOR THE WIRE CONNECTION FOR EURO-MARKET.

6.CAREFULLY INSPECT THE FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDEGS MOLDED

INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING. THE BARE WIRE IS THE GROUNDED WIRE.

7.ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN

OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH

ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW

INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW.

IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.

8. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.

9.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER

WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS

ARE EXPOSED. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

10.GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE JUNCTION BOX.

11.ATTACH THE MOUNTING PLATE (A) TO THE OUTLET BOX BY USING THE MOUNTING SCREWS(J) AND TIGHTEN SCREWS WITH A SCREWDRIVER.

12.PUSH COLLAR LOOP(C) IN CANOPY (B) AND TIGHTEN ONTO NIPPLE IN MOUNTING PLATE (A) BY TURNING IN A CLOCKWISE DIRECTION.

13.ATTACH THE PIPE(O) TO THE THREADED NIPPLE(P) IN A CLOCKWISE DIRECTION. THEN ALIGN THE HOLE OF CENTER

TUBE OF THE BOTTOM METAL PART(H) AND INSERT THE PIPE(O) UNTIL IT IS COMPLETELY COVERED.

14.ATTACH THE FINIAL(I) INTO THE BOTTOM OF THE BOTTOM METAL PART(H) AND FIX IN A CLOCKWISE DIRECTION.

15.RESTORE POWER TO THE JUNCTION BOX AND TEST FIXTURE.

CLEANING INSTRUCTIONS:

TO CLEAN, USE SOFT CLOTH ONLY. DO NOT USE ANY CHEMICAL OR ABRASIVE CLEANERS.

CARE & MAINTENANCE

DUST WITH A DRY CLOTH.

FOR CUSTOMER SERVICE QUESTIONS CALL 1.888.488.8866

ARTERIORS HOME:972.488.9800

ARTERIORS CONTRACT:972.488.9800 EXT.321

DISCLAIMERS

WE RECOMMEND THE INSTALLATION OF THIS ELECTICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

