

ASSEMBLY INSTRUCTIONS

ITEM # 49539| Riri Sconce

ITEM DESCRIPTION

MATERIAL TYPE: STEEL,ALABASTER,TASSEL FINISH: **ANTIQUÉ BRASS,ALABASTER, CHARCOAL GRAY TASSEL** TOP COAT/SEALANT
 SOCKET TYPE: E12 CERAMIC SOCKET QTY: 1PC
 BULB TYPE: TYPE G BULB WATTAGE: **8W LED BULB ONLY** VOLTAGE: 110V-120V
 ITEM NET WEIGHT: 2.14KGS
 UL COMPLIANT
 INSTALLATION ENVIRONMENT:SUITABLE FOR DAMP LOCATIONS




NOTE:

*YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON
 *THIS ITEM MAY REQUIRE PERIODIC TIGHTENING


PARTS

A	MOUNTING PLATE	1 PC
B	FLAT SCREW	2 PCS
C	LAMP BASE	1 PC
D	SOCKET	1 PC
E	BULB(not included)	1 PC
F	COMB	1 PC

INCLUDED ASSEMBLY HARDWARE

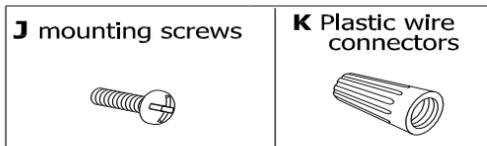

PRODUCT ASSEMBLY

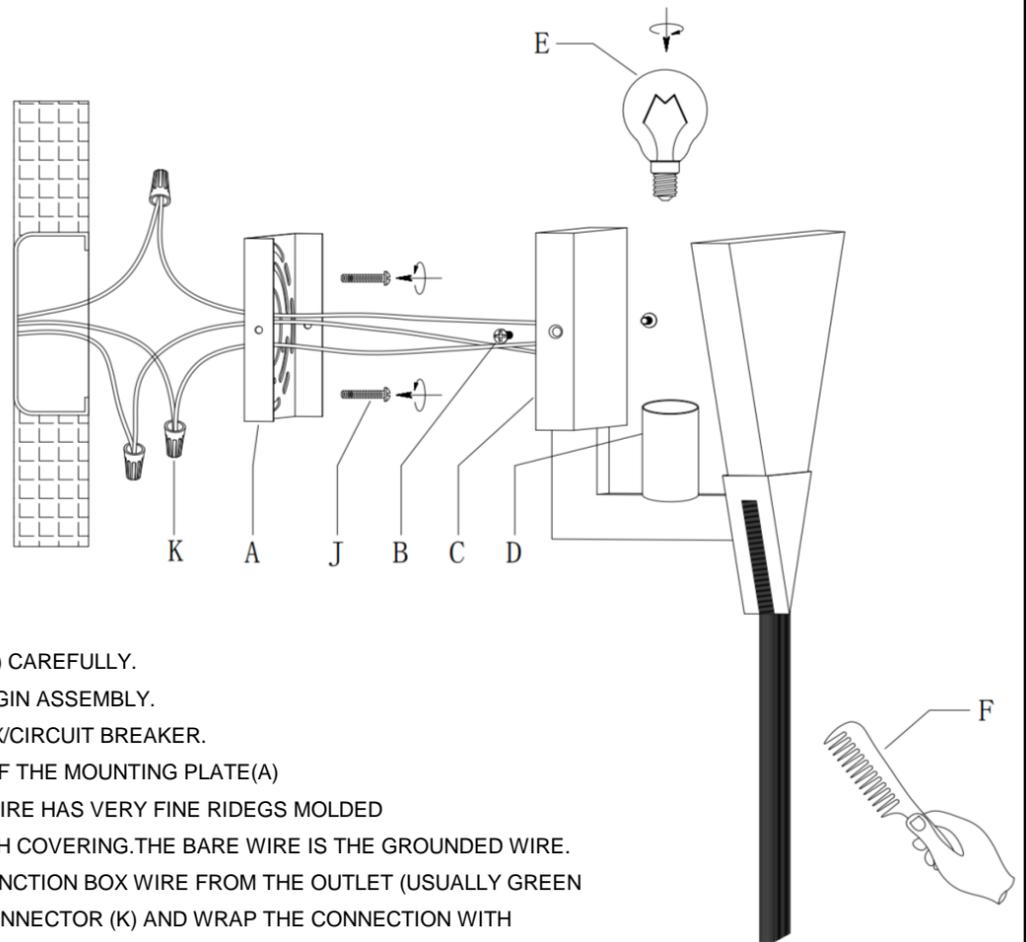

ASSEMBLY INSTRUCTIONS

- 1.REMOVE ALL PACKING CONTENTS AND PARTS FROM THE CARTON(S) CAREFULLY.
- 2.PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY.
- 3.SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
- 4.PULL THE ELECTRICAL CORD OF "J BOX" THROUGH THE EXIT HOLE OF THE MOUNTING PLATE(A)
- 5.CAREFULLY INSPECT THE FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDEGS MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING.THE BARE WIRE IS THE GROUNDED WIRE.
- 6.ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
- 7.CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
- 8.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
- 9.GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE JUNCTION BOX.
- 10.ATTACH THE MOUNTING PLATE (A) TO THE OUTLET BOX BY USING THE MOUNTING SCREWS(J) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
- 11.ATTACH THE LAMP BASE(C) TO THE MOUNTING PLATE(A) AND SECURE THE LAMP BASE(C) BY TIGHTENING 2 FLAT SCREWS(B) ON BOTH LEFT AND RIGHT SIDES.
- 12.**INSERT 1 TYPE B 8W LED(ONLY) BULB(NOT INCLUDED) INTO THE SOCKET(D) .DO NOT EXCEED SPECIFIED WATTAGE.**
- 13.RESTORE POWER TO THE JUNCTION BOX AND TEST FIXTURE.
- 14.WHEN TASSEL IS MESSY, USE THE INCLUDED COMB(F) TO GENTLY STRAIGHTEN IT.

CLEANING INSTRUCTIONS:

TO CLEAN,USE SOFT CLOTH ONLY.DO NOT USE ANY CHEMICAL OR ABRASIVE CLEANERS.

CARE & MAINTENANCE

DUST WITH A DRY CLOTH.

FOR CUSTOMER SERVICE QUESTIONS CALL 1.888.488.8866

ARTERIORES HOME:972.488.9800

ARTERIORES CONTRACT:972.488.9800 EXT.321

DISCLAIMERS

WE RECOMMEND THE INSTALLATION OF THIS ELECTRICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ARTERIORES