ASSEMBLY INSTRUCTIONS

ITEM #89661 | EBN ALABASTER SLICES CHANDELIER

ITEM DESCRIPTION

MATERIAL TYPE: STEEL, ALABASTER FINISH: ENGLISH BRONZE, ALABASTER TOP COAT/SEALANT: SOCKET TYPE: E12 CERAMIC SOCKET QTY: 9PCS

BULB TYPE: E12 CERAMIC SOCKET QTY: 9PCS
BULB TYPE: TYPE B BULB WATTAGE: **8W LED BULB ONLY** VOLTAGE: 110V-120V

ITEM NET WEIGHT: 17.1KGS

UL COMPLIANT

INSTALLATION ENVIRONMENT: SUITABLE FOR DAMP LOCATIONS

NOTE:

*YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON *THIS ITEM MAY REQUIRE PERIODIC TIGHTENING




PRODUCT ASSEMBLY

PARTS		
Α	MOUNTING PLATE	1 PC
В	CANOPY	1 PC
C	COLLAR LOOP	1 PC
D1,D2,D3,D4	ROD	4 PCS
E	HEX SCREW	9 PCS
F	LAMP BODY	1 PC
G	BULB(not included)	9 PCS
н	ALABASTER SLICE	18 PCS
ı	KNURLED NUT	36 PCS
K	WASHER	36 PCS
	HANGING HOOK	3 PCS
	METAL LOOP	3 PCS
O	METAL PLATE	9 PCS
	SOCKET	9 PCS
	DOMED CAP NUT	3 PCS
S	HEXAGON NUT	3 PCS
Х	STEEL ROPE	1 PC

INCLUDED ASSEMBLY HARDWARE

J MOUNTING SCREWS	K PLASTIC WIRE CONNECTORS	L ALLEN WRENCH
T PLASTIC ANCHOR	U BRACKET	W COUPLING
V SET SCREW	Y STRENGTHEN SCREW	

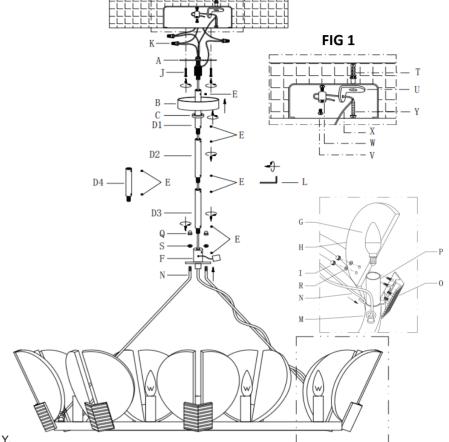

ASSEMBLY INSTRUCTIONS

1.REMOVE ALL PACKING CONTENTS AND PARTS FROM THE CARTON(S) CAREFULLY.

2.PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY.

3.SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.

4.CONNECT LAMP BODY(F) AND CANOPY(B) WITH ROD(D1,D2,D3,D4),WHEN YOU CONNECT THE RODS,LOOSEN THE SMALL HEX SCREWS(E) FIRST,

THEN TIGHTEN IT WITH ALLEN WRENCH(L). AFTER ALL RODS ARE CONNECTED. BE SURE ALL THE HEX SCREWS(E) ARE TIGHT ENOUGH.

NOTE: IF YOU WANT THE FIXTURE TO BE SEMI-FLUSH MOUNT, YOU ONLY NEED CONNECT LAMP BODY(F) AND CANOPY(B) WITH ROD(D4).

5.CAREFULLY INSPECT THE FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDEGS MOLDED

INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING. THE BARE WIRE IS THE GROUNDED WIRE.

6. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH

ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW.

IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.

7. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.

8.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER

WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS

ARE EXPOSED. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

ARE EXPOSED. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

9.DRILL 1 HOLE INSIDE THE JUNCTION BOX AND FASTEN THE BRACKET (U) TO WALL BY SCREWING THE STRENGTHEN SCREW (Y) ON DRILLED HOLE AS FIG 1.

IF ATTACH TO CEMENT CEILING, USE ANCHOR (T) FIRST THEN SCREW STRENGHTHENED SCREW (Y) INTO THE ANCHOR (T).

IF ATTACH TO WOOD CEILING, THREAD STRENGTHENED SCREW (Y) DIRECTLY INTO CEILING.

PASS THE STEEL ROPE (X) THROUGH THE HOLE OF BRACKET (U), AND PASS THE STEEL ROPE (X) THROUGH THE 2 HOLES OF COUPLING (W), THEN FIX
WITH 2PCS SET SCREWS (V) PROVIDED IN THE COUPLING (W) AS FIG.1. BE SURE TO TIGHTEN THESE TWO SET SCREWS (V) ATTACHED IN THE COUPLING (W).
10.GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE JUNCTION BOX.

11.ATTACH THE MOUNTING PLATE (A) TO THE OUTLET BOX BY USING THE MOUNTING SCREWS(J) AND TIGHTEN SCREWS WITH A SCREWDRIVER.

12.PUSH COLLAR LOOP(C) IN CANOPY (B) AND TIGHTEN ONTO NIPPLE IN MOUNTING PLATE (A) BY TURNING IN A CLOCKWISE DIRECTION.

13. INSERT THE THREADED SIDE OF THE HANGING HOOK(N) INTO THE METAL PLATE OF THE LAMP BODY(F), AND FIX THE HANGING HOOK(N) WITH HEXAGON NUT(S) AND DOMED CAP NUT(Q). REPEAT THE SAME OPERATION ON THE OTHER TWO PIECES OF HANGING HOOKS(N), THEN ATTACH THE BOTTOM OF THE HANGING HOOK(N) TO THE METAL LOOP(M) RESPECTIVELY.

14.ATTACH THE ALABASTER SLICE(H) ON THE THREADED PIPE OF THE METAL PLATE(O) AND TIGHTEN IT WITH WASHER(R) AND KNURLED NUT (I).

REPEAT THE SAME OPRATION ON THE OTHER ALABASTER SLICES(H)

15.INSERT 9 TYPE B 8W LED(ONLY) BULB(NOT INCLUDED) INTO THE SOCKET(P) .DO NOT EXCEED SPECIFIED WATTAGE.

16.RESTORE POWER TO THE JUNCTION BOX AND TEST FIXTURE.

CLEANING INSTRUCTIONS:

TO CLEAN,USE SOFT CLOTH ONLY.DO NOT USE ANY CHEMICAL OR ABRASIVE CLEANERS.

CARE & MAINTENANCE

DUST WITH A DRY CLOTH.

DISCLAIMERS

FOR CUSTOMER SERVICE QUESTIONS CALL 1.888.488.8866 ARTERIORS HOME:972.488.9800

ARTERIORS CONTRACT:972.488.9800 EXT.321

WE RECOMMEND THE INSTALLATION OF THIS ELECTICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICAL