

ASSEMBLY INSTRUCTIONS

ITEM # 89662 | Glass Teardrop Chandelier

ITEM DESCRIPTION

MATERIAL TYPE: STEEL, GLASS FINISH : ANTIQUE BRASS, SMOKE SLUMP SEEDY GLASS TOP COAT/SEALANT:
 SOCKET TYPE: E12 CERAMIC SOCKET QTY: 7 PCS
 BULB TYPE: TYPE B BULB WATTAGE: 60W or/CFL 13W or/LED 8W VOLTAGE: 110V-120V
 ITEM NET WEIGHT:
 UL COMPLIANT
 INSTALLATION ENVIRONMENT: SUITABLE FOR DAMP LOCATIONS



NOTE:

*YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON
 *THIS ITEM MAY REQUIRE PERIODIC TIGHTENING

PARTS

A	MOUNTING PLATE	1 PC
B	CANOPY	1 PC
C	COLLAR LOOP	1 PC
D1, D2, D3, D4	RODS	4 PCS
E	HEX SCREWS	9 PCS
F	LAMP BODY	1 PC
G	TOP IRON RING	1 PC
H	MEDIUM IRON RING	1 PC
I	BOTTOM IRON RING	1 PC
L	SOCKETS	7 PCS
M	STEEL ROPE	1 PC
N	COUPLING	1 PC
O	STRENGTHEN SCREW	1 PC
P	BRACKET	1 PC
Q	BULB (NOT INCLUDED)	7 PCS
S	LARGE GLASS	31 PCS
U	MEDIUM GLASS	31 PCS
V	SMALL GLASS	31 PCS

INCLUDED ASSEMBLY HARDWARE

J	mounting screws	K	Plastic wire connectors	R	ANCHOR	T	Allen wrench
---	-----------------	---	-------------------------	---	--------	---	--------------

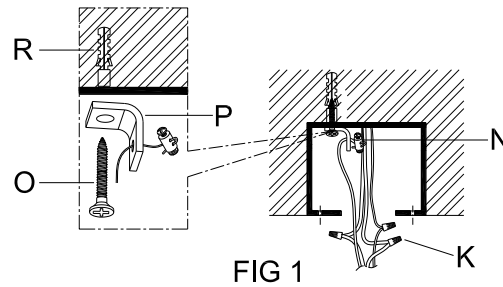


FIG. 1

PRODUCT ASSEMBLY

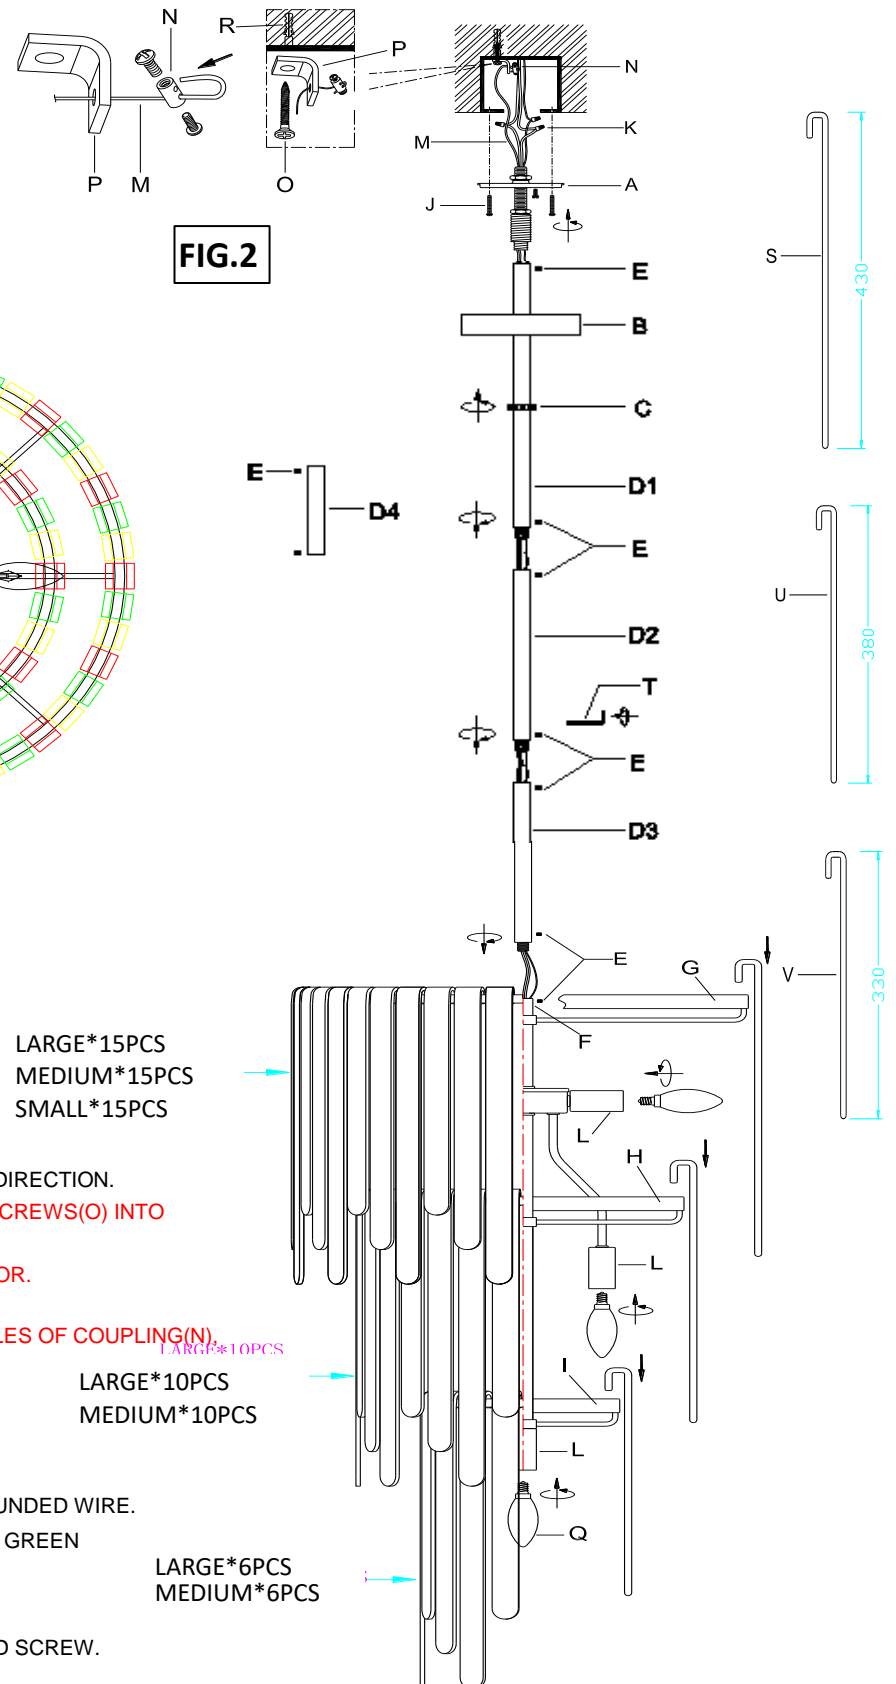


FIG. 2

ASSEMBLY INSTRUCTIONS

- REMOVE ALL PACKING CONTENTS AND PARTS FROM THE CARTON(S) CAREFULLY.
- PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY.
- SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
- CONNECT LAMP BODY (F) AND CANOPY (B) WITH RODS (D1, D2, D3, D4) WHEN YOU CONNECT THE RODS, LOOSEN THE SMALL HEX SCREWS (E) FIRST THEN TIGHTEN WITH ALLEN WRENCH (T) AFTER ALL RODS ARE CONNECTED. BE SURE ALL THE HEXANGULAR SCREWS ARE TIGHT ENOUGH.
- REMOVE THE MOUNTING PLATE (A) FROM THE CANOPY (B) BY TURNING COLLAR LOOP (C) IN A COUNTER CLOCKWISE DIRECTION.
- DRILL 1 HOLE INSIDE THE JUNCTION BOX AND FASTEN THE BRACKET (P) TO WALL BY SCREWING THE STRENGTHENED SCREWS (O) INTO DRILLED HOLE AS FIG. 1.
 IF ATTACH TO CEMENT CEILING, USE ANCHOR (R) FIRST THEN SCREW STRENGTHENED SCREWS (O) INTO THE ANCHOR.
 IF ATTACH TO WOOD CEILING, THREAD STRENGTHENED SCREW (O) DIRECTLY INTO CEILING.
 PASS THE STEEL ROPE (M) THROUGH THE HOLE OF BRACKET (P), AND PASS THE STEEL ROPE (M) THROUGH THE 2 HOLES OF COUPLING (N), THEN FIX WITH 2PCS SCREWS PROVIDED IN THE COUPLING (N) AS FIG. 2.
BE SURE TO TIGHTEN TWO SCREWS ATTACHED ON THE COUPLING (N).
- PULL THE ELECTRICAL CORD OF JBOX THROUGH THE HOLE OF THE MOUNTING PLATE.
- CAREFULLY INSPECT THE PENDANT'S FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDGES MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING. THE BARE SILVER WIRE IS THE GROUNDED WIRE.
- ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW (H) INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW.
IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
- CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
- CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
- GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX.
- ATTACH THE MOUNTING PLATE (A) WITH NIPPLE TO THE CEILING OUTLET BOX USING THE ENCLOSED MOUNTING SCREWS (J) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
- PUSH COLLAR LOOP UP TO CANOPY (B) AND TIGHTEN ONTO NIPPLE IN MOUNTING PLATE (A) BY TURNING IN A CLOCKWISE TO SECURE CANOPY.
- INSERT 7 TYPE B 60W BULB (Q) (OR CFL 13W OR LED 8W, NOT INCLUDED) INTO THE SOCKETS (L). **DO NOT EXCEED SPECIFIED WATTAGE.**
- PUT LARGE GLASS (S), MEDIUM GLASS (U) AND SMALL GLASS (V) IN SEQUENCE ONTO TOP IRON RING (G) CAREFULLY, THEN REPEAT THE SAME OPERATION ON THE OTHER GLASSES, ADJUST THE GLASS IN A COMFORTABLE SPACE.
- PUT LARGE GLASS (S), MEDIUM GLASS (U) AND SMALL GLASS (V) IN SEQUENCE ONTO MEDIUM IRON RING (H) CAREFULLY, THEN REPEAT THE SAME OPERATION ON THE OTHER GLASSES, ADJUST THE GLASS IN A COMFORTABLE SPACE.
- PUT LARGE GLASS (S), MEDIUM GLASS (U) AND SMALL GLASS (V) IN SEQUENCE ONTO BOTTOM IRON RING (I) CAREFULLY, THEN REPEAT THE SAME OPERATION ON THE OTHER GLASSES, ADJUST THE GLASS IN A COMFORTABLE SPACE.
- RESTORE POWER TO THE JUNCTION BOX AND TEST FIXTURE.

LARGE*15PCS
 MEDIUM*15PCS
 SMALL*15PCS

LARGE*10PCS
 MEDIUM*10PCS

LARGE*6PCS
 MEDIUM*6PCS

CARE & MAINTENANCE

DUST WITH A DRY CLOTH.

FOR CUSTOMER SERVICE QUESTIONS CALL 1.888.488.8866
 ARTERIOS HOME: 972.488.9800
 ARTERIOS CONTRACT: 972.488.9800 EXT.321

DISCLAIMERS

WE RECOMMEND THE INSTALLATION OF THIS ELECTRICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ARTERIOS