

# ASSEMBLY INSTRUCTIONS ITEM #DLC04 | RATTAN WRAPPED ARMS WITH OPAL GLASS CHANDELIER

## ITEM DESCRIPTION

MATERIAL TYPE:STEEL,GLASS,RATTAN FINISH:ANTIQUE BRASS,**NATURAL** RATTAN,OPAL TOP COAT/SEALANT:  
 SOCKET TYPE: E12 CERAMIC SOCKET QTY: 6PCS  
 BULB TYPE: TYPE B BULB WATTAGE: **60W or/CFL 13W or/LED 8W** VOLTAGE:110V-120V  
 ITEM NET WEIGHT:7.7KGS  
 UL COMPLIANT  
 INSTALLATION ENVIRONMENT:SUITABLE FOR DAMP LOCATIONS

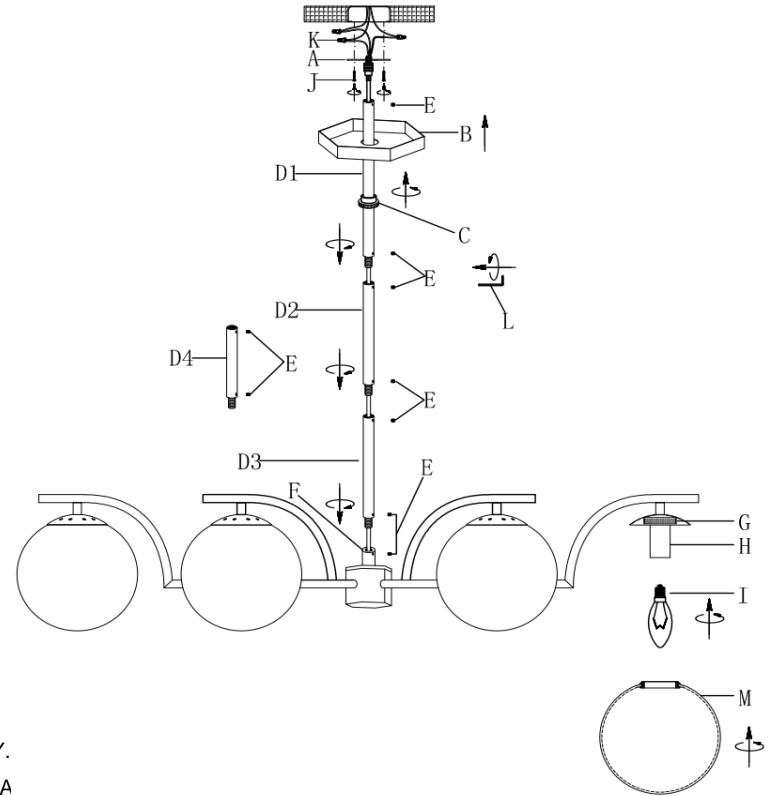


**NOTE:**  
 \*YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON  
 \*THIS ITEM MAY REQUIRE PERIODIC TIGHTENING




## PARTS

<b>A</b>	<b>MOUNTING PLATE</b>	<b>1 PC</b>
<b>B</b>	<b>CANOPY</b>	<b>1 PC</b>
<b>C</b>	<b>COLLAR LOOP</b>	<b>1 PC</b>
<b>D1,D2,D3,D4</b>	<b>ROD</b>	<b>4 PCS</b>
<b>E</b>	<b>HEX SCREW</b>	<b>9 PCS</b>
<b>F</b>	<b>LAMP BODY</b>	<b>1 PC</b>
<b>H</b>	<b>SOCKET</b>	<b>6 PCS</b>
<b>I</b>	<b>BULB(not included)</b>	<b>6 PCS</b>
<b>M</b>	<b>GLASS SHADE</b>	<b>6 PCS</b>

## PRODUCT ASSEMBLY



## INCLUDED ASSEMBLY HARDWARE

J MOUNTING SCREWS 	K PLASTIC WIRE CONNECTORS 
L ALLEN WRENCH 	

## ASSEMBLY INSTRUCTIONS

- 1.REMOVE ALL PACKING CONTENTS AND PARTS FROM THE CARTON(S) CAREFULLY.
- 2.PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY.
- 3.SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREA
- 4.CONNECT LAMP BODY(F) AND CANOPY(B) WITH ROD(D1,D2,D3,D4),WHEN YOU CONNECT THE RODS,LOOSEN THE SMALL HEX SCREWS(E) FIRST THEN TIGHTEN WITH ALLEN WRENCH(L) AFTER ALL RODS ARE CONNECTED. BE SURE ALL THE HEX SCREWS(E) ARE TIGHT ENOUGH.
- 5.CAREFULLY INSPECT THE FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDEGS MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING.THE BARE WIRE IS THE GROUNDED WIRE.
- 6.ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
- 7.CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (K) AND WRAP THE.CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
- 8.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
- 9.GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE JUNCTION BOX.
- 10.ATTACH THE MOUNTING PLATE (A) TO THE OUTLET BOX BY USING THE MOUNTING SCREWS(J) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
- 11.PUSH COLLAR LOOP(C) IN CANOPY (B) AND TIGHTEN ONTO NIPPLE IN MOUNTING PLATE (A) BY TURNING IN A CLOCKWISE DIRECTION.
- 12.INSERT 6 TYPE B 60W or/CFL 13W or/LED 8W BULB(NOT INCLUDED) INTO THE SOCKET(H) .**DO NOT EXCEED SPECIFIED WATTAGE.**
- 13.ATTACHED THE GLASS SHADE(M) TO THE THREADED PIPE (G) OF THE LAMP BODY(F) BY ROTATING IN A CLOCKWISE DIRECTION.
- 14.RESTORE POWER TO THE JUNCTION BOX AND TEST FIXTURE.

## CLEANING INSTRUCTIONS:

TO CLEAN,USE SOFT CLOTH ONLY.DO NOT USE ANY CHEMICAL OR ABRASIVE CLEANERS.

## CARE & MAINTENANCE

DUST WITH A DRY CLOTH.

## DISCLAIMERS

FOR CUSTOMER SERVICE QUESTIONS CALL 1.888.488.8866

WE RECOMMEND THE INSTALLATION OF THIS ELECTICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ARTERIOS HOME:972.488.9800

ARTERIOS CONTRACT:972.488.9800 EXT.321

# ARTERIOS