

ASSEMBLY INSTRUCTIONS

ITEM #DLC07 / TOWNE CHANDELIER

ITEM DESCRIPTION

MATERIAL TYPE:METAL+ GLASS
FINISH :ANTIQUE BRASS+OPAL GLASS+CLEAR SEEDY SLUMP GLASS
TOP COAT/SEALANT
SOCKET TYPE:E12 CERAMIC
SOCKET QTY:8PCS
BULB TYPE:TYPE G
BULB WATTAGE: 60W or/CFL 12W or/LED 10W
VOLTAGE:110V-120V
ITEM NET WEIGHT:
UL COMPLIANT
INSTALLATION ENVIRONMENT:SUITABLE FOR DAMP LOCATIONS




NOTE:

*YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON
*THIS ITEM MAY REQUIRE PERIODIC TIGHTENING
*MIN 75°C SUPPLY CONDUCTORS

PARTS

A	MOUNTING PLATE	1 PC
B	CANOPY	1 PC
C	COLLAR LOOP	2 PCS
D	LAMP BODY	1 PC
E	HEX SCREW	16 PCS
F	TOP OPAL GLASS	4 PCS
G1/G2/G3/G4	ROD	8 PCS
H	SOCKET CUP	8 PCS
I	BOTTOM CLEAR SEEDY GLASS	4 PCS
M	TOP CLEAR SEEDY GLASS	4 PCS
N	BOTTOM OPAL GLASS	4 PCS
L	POWER WIRE	1 PC
P	SOCKET	8 PCS
R	BRACKET	1 PC
S	SCREW	2 PCS
W	AIRCRAFT WIRE	1 PC
Z	COUPLING	1 PC
V	NUT	2 PCS
Y	BULB(NOT INCLUDED)	8 PCS


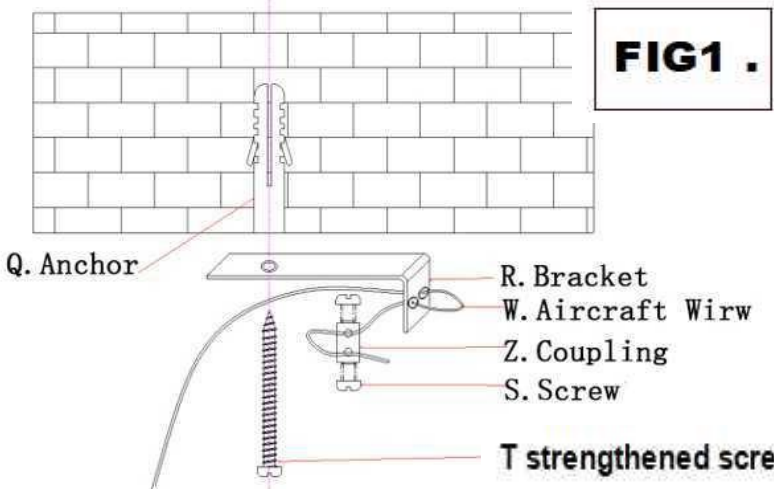


INCLUDED ASSEMBLY HARDWARE

J MOUNTING SCREWS

K PLASTIC WIRE CONNECTORS

O WRENCH





TOOLS NEEDED(INCLUDED)

U ALLEN WRENCH

Q ANCHOR

T STRENGTHENED SCREW

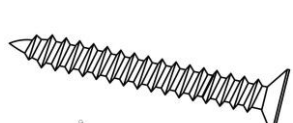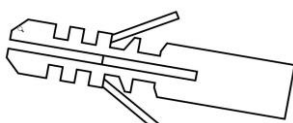

ASSEMBLY INSTRUCTIONS

- 1.REMOVE ALL PACKING CONTENTS AND PARTS FROM THE CARTON(S)CAREFULLY.
- 2.PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY.
3. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
- 4.PASS THE POWER WIRE(L) THROUGH THE ROD (G4),(G3),(G2)&(G1),SCREW THE ROD(G4) TO LAMP BODY(D) TILL TIGHT,REPEAT THE SAME OPERATION ON THE ROD(G3),(G2) AND ROD(G1).WHEN YOU CONNECT THE RODS,LOOSEN THE SMALL HEX SCREWS(E) IN THE SIDE HOLE FIRST THEN TIGHTEN WITH ALLEN WRENCH(U) AFTER ALL RODS ARE CONNECTED. **BE SURE ALL THE HEXANGULAR SCREWS ARE TIGHT ENOUGH.**
- 5.REMOVE THE COUPLING(Z) FROM THE AIRCRAFT WIRE(W) BY LOOSENING (2) SCREWS(S),PASS THE AIRCRAFT WIRE(W) THROUGH THE ROD (G4),(G3),(G2)&(G1),SCREW THE ROD(G4) TO LAMP BODY(D) TILL TIGHT,REPEAT THE SAME OPERATION ON THE ROD(G3)(G2)AND ROD(G1).WHEN YOU CONNECT THE RODS,LOOSEN THE SMALL HEX SCREWS(E) IN THE SIDE HOLE FIRST THEN TIGHTEN WITH ALLEN WRENCH(U) AFTER ALL RODS ARE CONNECTED. **BE SURE ALL THE HEXANGULAR SCREWS ARE TIGHT ENOUGH.**
- 6.PUT THE COLLAR LOOP(C) AND CANOPY(B) INTO THE ROD (G1) IN TURN, THEN PASS THE POWER WIRE(L) THROUGH THE MOUNTING PLATE(A).
FIX THE ROD(G1) AND THE MOUNTING PLATE(A) BY TIGHTEN NUT(V) WITH A WRENCH(O).REPEAT THE SAME OPERATION ON THE OTHER SIDE.
- 7.PULL THE ELECTRICAL CORD OF "J BOX"THROUGH THE EXIT HOLE OF THE MOUNTING PLATE(A).
- 8.DRILL ONE HOLE ON THE CEILING AND INSERT ANCHOR(Q) INTO DRILLED HOLE, THEN FIX BRACKET(R) TO THE CEILING WITH STRENGTHENED SCREW (T) BY SCREWING INTO ANCHOR(Q). REMOVE THE COUPLING(Z) FROM THE AIRCRAFT WIRE(W) BY LOOSENING (2) SCREWS(S). PASS THE AIRCRAFT WIRE(W) THROUGH (2) HOLES ON THE BRACKET(R). THEN PASS THE AIRCRAFT WIRE(W) THROUGH (2) HOLES ON THE COUPLING(Z) AND FIX WITH (2) SCREWS(S) AS FIG1 .
OR YOU CAN FIND MORE DETAILS ON NEXT PAGE. **BE SURE TO TIGHTEN TWO SCREWS ATTACHED ON THE COUPLING(Z).**
- 9.**PLEASE PAY SPECIAL ATTENTION THAT YOU DO NOT NEED TO CONNECT THE WIRE CONNECT DEVICE(M). IT IS USED FOR THE WIRE CONNECTION FOR EURO-MARKET.**
- 10.CAREFULLY INSPECT THE FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDEGS MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING.THE BARE SILVER WIRE IS THE GROUNDED WIRE.
- 11.ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE).
FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
- 12.CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
- 13.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
- 14.GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE JUNCTION BOX.
15. FIRST, DRILL TWO HOLES ON THE CEILING AS PER THE DESIRED HOLES OF THE MOUNTING PLATE(A), THEN INSERT ANCHOR(Q) INTO DRILLED HOLE. ATTACH THE MOUNTING PLATE (A) WITH NIPPLE TO THE CEILING OUTLET BOX USING THE ENCLOSED MOUNTING SCREWS (J) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
ATTACH THE STRENGTHENCD SCREW(T) TO THE ANCHOR(Q)) AND FIX THE MOUNTING PLATE(A) BY TIGHTEN THE STRENGTHENCD SCREW(T) WITH A SCREWDRIVER.
- 16.PUSH COLLAR LOOP (C) IN CANOPY (B) AND THREAD ONTO THE NIPPLE IN MOUNTING PLATE (A) BY TURNING IN A CLOCKWISE DIRECTION.
- 17.ATTACH THE BOTTOM CLEAR SEEDY GLASS(I) ON SOCKET(P), AND THEN TIGHTEN WITH THE SOCKET CUP(H) BY TURNING IN A CLOCKWISE DIRECTION.
- 18.ATTACH THE BOTTOM OPAL GLASS(N) ON SOCKET(P), AND THEN TIGHTEN WITH THE SOCKET CUP(H) BY TURNING IN A CLOCKWISE DIRECTION.
- 19.NSERT 8 TYPEG 60W BULB(or/CFL 12W or/LED 10W ,NOT INCLUDED)INTO THE SOCKET(P).**DO NOT EXCEED SPECIFIED WATTAGE.**
- 20.ATTACH THE TOP OPAL GLASS(F) ON THE LAMP BODY (D) BY TURNING IN A CLOCKWISE DIRECTION.
- 21.ATTACH THETOP CLEAR SEEDY GLASS(M) ON THE LAMP BODY (D) BY TURNING IN A CLOCKWISE DIRECTION.
- 22.RESTORE POWER TO THE JUNCTION BOX AND TEST FIXTURE.

CARE & MAINTENANCE

DUST WITH A DRY CLOTH.
FOR CUSTOMER SERVICE QUESTIONS CALL 1.888.488.8866
ARTERIOS HOME:972.488.9800
ARTERIOS CONTRACT:972.488.9800 EXT.321

DISCLAIMERS

WE RECOMMEND THE INSTALLATION OF THIS ELECTICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

