

ASSEMBLY INSTRUCTIONS

ITEM #DMC09 | Ventura Chandelier

ITEM DESCRIPTION

MATERIAL TYPE:STEEL.RATTAN FINISH :ANTIQUE BRASS +RATTAN TOP COAT/SEALANT:
SOCKET TYPE: E12 CERAMIC SOCKET QTY: 8PCS
BULB TYPE: TYPE G BULB WATTAGE: 60W or/CFL 13W or/LED 8W VOLTAGE:110V-120V
ITEM NET WEIGHT:
UL COMPLIANT
INSTALLATION ENVIRONMENT:SUITABLE FOR DRY LOCATIONS



NOTE:
*YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON
*THIS ITEM MAY REQUIRE PERIODIC TIGHTENING

PARTS

D1,D2,D3,D4	A	MOUNTING PLATE	1 PC
	B	CANOPY	1 PC
	C	COLLAR LOOP	1 PC
		RODS	4 PCS
	E	SET SCREWS	9 PCS
	G	LAMP BODY	1 PC
	H	SOCKETS	8PCS
	I	RATTAN SHADE	8PCS
	L	SOCKET RING	8PCS
	M	BULB (NOT INCLUDED)	8PCS

INCLUDED ASSEMBLY HARDWARE


J mounting screws

K Plastic wire connectors

TOOLS NEEDED(INCLUDED)

F Allen wrench

PRODUCT ASSEMBLY

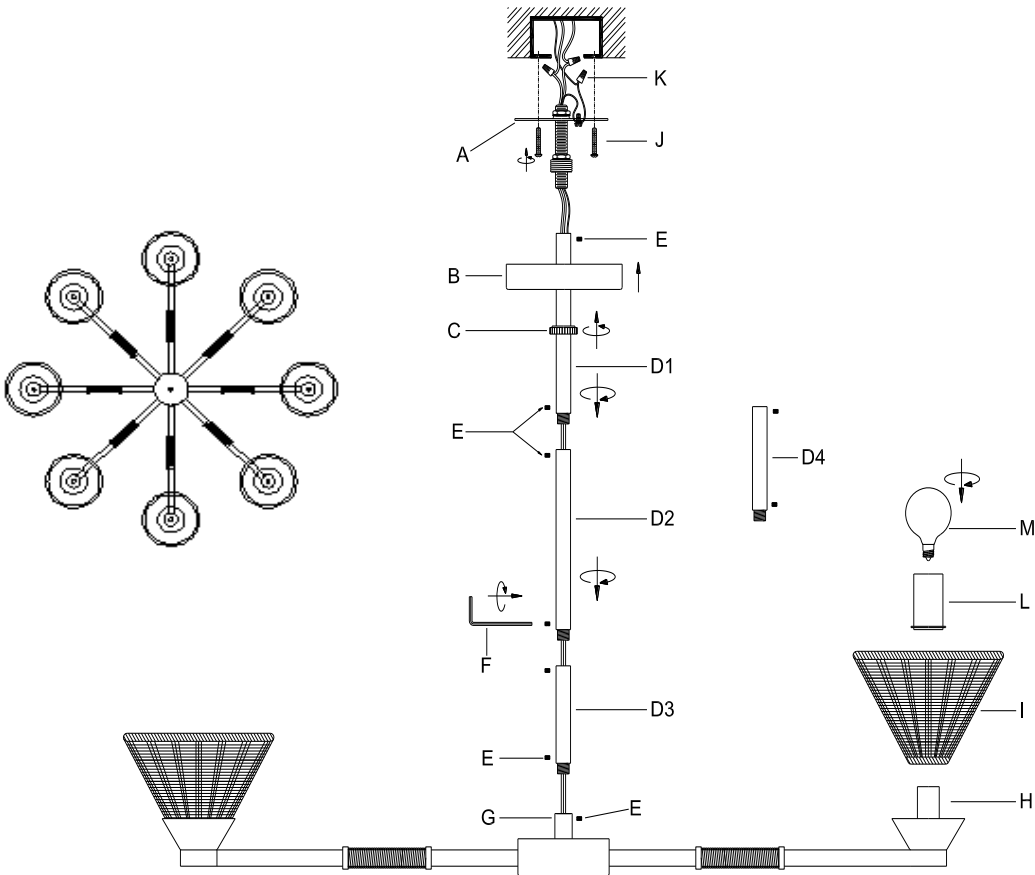

ASSEMBLY INSTRUCTIONS

- 1.REMOVE ALL PACKING CONTENTS AND PARTS FROM THE CARTON(S)CAREFULLY.
- 2.PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY.
- 3.SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
- 4.CONNECT LAMP BODY(G) AND CANOPY(B)WITH ROD(D1,D2,D3,D4),WHEN YOU CONNECT THE RODS,LOOSEN THE SMALL SET SCREWS(E) FIRST THEN TIGHTEN WITH ALLEN WRENCH(D) AFTER ALL RODS ARE CONNECTED. BE SURE ALL THE SET SCREWS ARE TIGHT ENOUGH.
- NOTE: IF YOU WANT THE FIXTURE TO BE SEMI-FLUSH MOUNT,YOU ONLY NEED CONNECT LAMP BODY (G) AND CANOPY(B) WITH ROD(D4).**
- 5.CAREFULLY INSPECT THE FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDEGS MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING.THE BARE WIRE IS THE GROUNDED WIRE.
- 6.ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
- 7.CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
- 8.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
9. GENTLY TUCK THE WIRE CONNECTIONS(K) NEATLY INTO THE CEILING JUNCTION BOX.
- 10.ATTACH THE MOUNTING PLATE (A) TO THE OUTLET BOX USING THE MOUNTING SCREWS(J) AND TIGHTEN SCREWS(J) WITH A SCREWDRIVER.
- 11.PUSH COLLAR LOOP(C) IN CANOPY (B) AND TIGHTEN ONTO NIPPLE IN MOUNTING PLATE (A) BY TURNING IN A CLOCKWISE DIRECTION.
- 12.PUT THE 8PCS RATTAN SHADE (I) ONTO THE SOCKETS(H),AND PUT SOCKET RING(L) INTO THE SOECKT IN TURN.THEN TIGHTEN THE SOCKET RING(L) .
- 13.INSERT 8 TYPE G 60W BULB(or/CFL 13W or/LED 8W ,NOT INCLUDED)INTO THE SOCKET(G).DO NOT EXCEED SPECIFIED WATTAGE.
- 14.RESTORE POWER TO THE JUNCTION BOX AND TEST FIXTURE.

CARE & MAINTENANCE

DUST WITH A DRY CLOTH.
FOR CUSTOMER SERVICE QUESTIONS CALL 1.888.488.8866
ARTERIORS HOME:972.488.9800
ARTERIORS CONTRACT:972.488.9800 EXT.321

DISCLAIMERS
WE RECOMMEND THE INSTALLATION OF THIS ELECTICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ARTERIORS