


# ASSEMBLY INSTRUCTIONS

## ITEM #DRC03 /TENZIN CHANDELIER

### ITEM DESCRIPTION

MATERIAL TYPE: METAL+GLASS FINISH :EBN + MATTE SWIRL GLASS TOP COAT/SEALANT  
 SOCKET TYPE:LED SOCKET QTY: 6PCS  
 BULB TYPE: LED BULB WATTAGE: LED 30W VOLTAGE:100V-120V  
 ITEM NET WEIGHT:  
 UL COMPLIANT  
 INSTALLATION ENVIRONMENT: SUITABLE FOR DAMP LOCATIONS

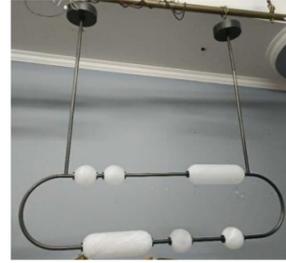


NOTE:  
 \*YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON  
 \*THIS ITEM MAY REQUIRE PERIODIC TIGHTENING  
 \*MIN 75°C SUPPLY CONDUCTORS

### PRODUCT ASSEMBLY


#### PARTS

A	MOUNTING PLATE	2 PCS
B	CANOPY WITH DRIVER	1 PC
B1	CANOPY WITHOUT DRIVER	1 PC
C	COLLAR LOOP	2 PCS
D	LAMP BODY	1 PC
E	HEX SCREW	4 PCS
F	POSITIONING PLATE	1PC
G1,G2,G3,G4	ROD	8 PCS
P	2-WIRE TERMINAL	1 PC
O	POWER WIRE	1 PC



#### INCLUDED ASSEMBLY HARDWARE

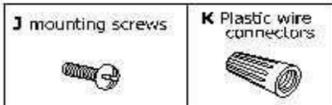

#### TOOLS NEEDED(INCLUDED)

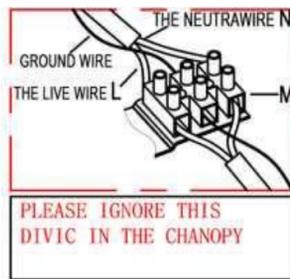

#### TOOLS NEEDED(INCLUDED)

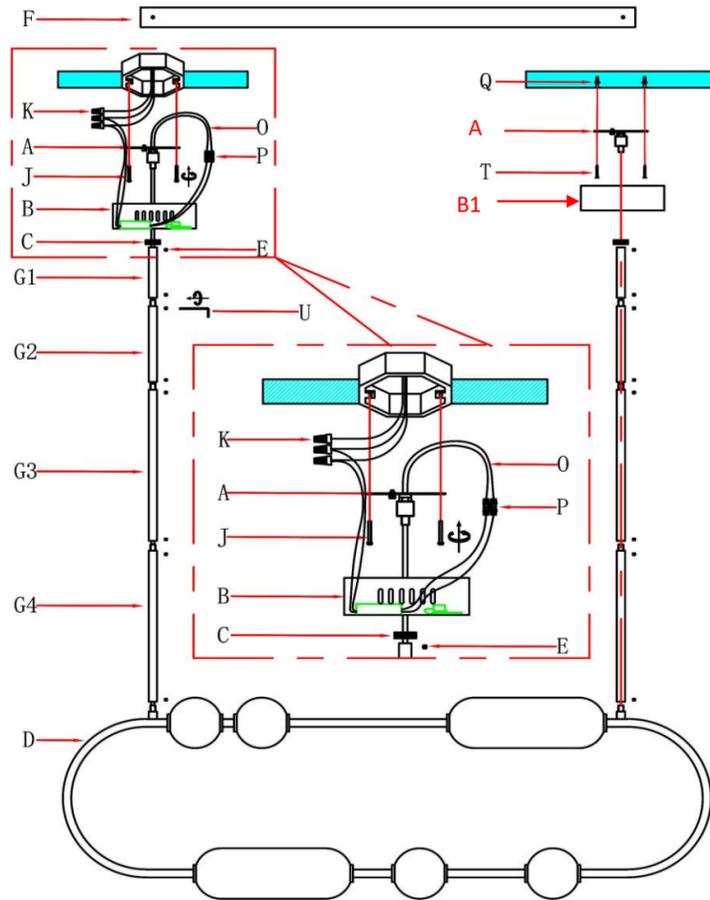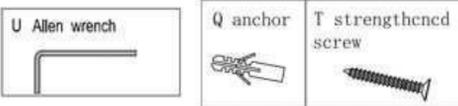

### ASSEMBLY INSTRUCTIONS

- 1.REMOVE ALL PACKING CONTENTS AND PARTS FROM THE CARTON(S)CAREFULLY.
- 2.PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY.
- 3.SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
- 4.POSITION ONE OF THE HOLES ON THE POSITIONING PLATE (F) ON THE CENTER POINT OF "J BOX", AND THEN POSITION ANOTHER HOLE ON THE OTHER END OF THE POSITIONING PLATE (F) IN DESIRED LOCATION ON CEILING. MARK ONE SPOT ON THE CEILING WITH A PENCIL. THEN POSITION THE CENTER POINT OF THE MOUNTING PLATE (A) ON THE MARKED SPOT AND MARK TWO SPOTS ON THE CEILING WITH A PENCIL TO DRILL HOLES AS PER THE HOLES ON THE MOUNTING PLATE(A), INSERT THE PLASTIC ANCHORS (Q) INTO DRILLED HOLES FOR FASTENING THE MOUNTING PLATE(A).
- 5.PASS THE POWER WIRE(O) THROUGH THE ROD (G4),(G3),(G2)&(G1),SCREW THE ROD(G4) TO LAMP BODY(D) TILL TIGHT,REPEAT THE SAME OPERATION ON THE ROD(G3), (G2) AND ROD(G1). THEN SCREW THE ROD(G4),(G3),(G2)&(G1) IN TURN TO THE OTHER SIDE OF THE LAMP BODY(D) TILL TIGHT. WHEN YOU CONNECT THE RODS,LOOSEN THE SMALL HEX SCREWS(E) IN THE SIDE HOLE FIRST THEN TIGHTEN WITH ALLEN WRENCH(U) AFTER ALL RODS ARE CONNECTED.  
**BE SURE ALL THE HEXANGULAR SCREWS ARE TIGHT ENOUGH.**
- 6.PUT THE COLLAR LOOP(C) AND CANOPY WITH DRIVER(B) INTO THE ROD (G1) WITH POWER WIRE IN TURN, THEN PASS THE POWER WIRE(O) THROUGH THE MOUNTING PLATE(A). THEN SCREW THE ROD(G1) TO THE NIPPLE OF MOUNTING PLATE(A) TILL TIGHT. PUT THE COLLAR LOOP(C) AND CANOPY WITHOUT DRIVER(B1) INTO ANOTHER SIDE OF THE ROD (G1) IN TURN. THEN SCREW THE ROD(G1) TO THE NIPPLE OF MOUNTING PLATE(A) TILL TIGHT.
- 7.PULL THE ELECTRICAL CORD OF "J BOX"THROUGH THE EXIT HOLE OF THE MOUNTING PLATE(A)
- 8.PLEASE PAY SPECIAL ATTENTION THAT YOU DO NOT NEED TO CONNECT THE WIRE CONNECT DEVICE(M).  
**IT IS USED FOR THE WIRE CONNECTION FOR EURO-MARKET.**
- 9.CAREFULLY INSPECT THE FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDEGS MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING.THE BARE WIRE IS THE GROUNDED WIRE.
- 10.ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
- 11.CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
- 12.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
- 13.CONNECT THE LAMP POWER WIRES(O) TOGETHER WITH 2-WIRE TERMINAL(P). CONNECTING THE BLACK WIRE TO THE POSITIVE ELECTRODES AND THE WHITE WIRE TO THE NEGATIVE ELECTRODES OF THE 2-WIRE TERMINAL (P).
- 14.GENTLY TUCK THE WIRE CONNECTIONS(K) NEATLY INTO THE JUNCTION BOX.
15. ATTACH THE MOUNTING PLATE (A) WITH NIPPLE TO THE CEILING OUTLET BOX USING THE ENCLOSED MOUNTING SCREWS (J) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
- 16.ATTACH ANOTHER MOUNTING PLATE (A) WITH NIPPLE TO THE CEILING OUTLET USING THE ENCLOSED STRENGTHCNC D SCREW(T) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
- 17.PUSH THE COLLAR LOOP (C) IN THE CANOPY (B) AND THREAD ONTO THE NIPPLE IN MOUNTING PLATE (A) BY TURNING IN A CLOCKWISE DIRECTION.
- 18.RESTORE POWER TO THE JUNCTION BOX AND TEST FIXTURE.

#### CARE & MAINTENANCE

DUST WITH A DRY CLOTH.  
 FOR CUSTOMER SERVICE QUESTIONS CALL 1.888.488.8866  
 ARTERIORS HOME:972.488.9800  
 ARTERIORS CONTRACT:972.488.9800 EXT.321

#### DISCLAIMERS

WE RECOMMEND THE INSTALLATION OF THIS ELECTICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.