

ASSEMBLY INSTRUCTIONS

ITEM # DWC13 / VELASCO SCONCE

ITEM DESCRIPTION

MATERIAL TYPE:IRON+ALABASTER

FINISH :ANTIQUE BRASS+ALABASTER

TOP COAT/SEALANT

SOCKET TYPE:LED

SOCKET QTY: 1PC

BULB TYPE: LED

BULB WATTAGE:6W

VOLTAGE:110V-120V

ITEM NET WEIGHT:

UL COMPLIANT


INSTALLATION ENVIRONMENT:SUITABLE FOR DAMP LOCATIONS

NOTE:
*YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON
*THIS ITEM MAY REQUIRE PERIODIC TIGHTENING
*MIN 90°C SUPPLY CONDUCTORS



PARTS

A	MOUNTING PLATE	1 PC
B	BACK PLATE	1 PC
D	SET SCREW	2 PCS
F	ALABASTER	1 PC


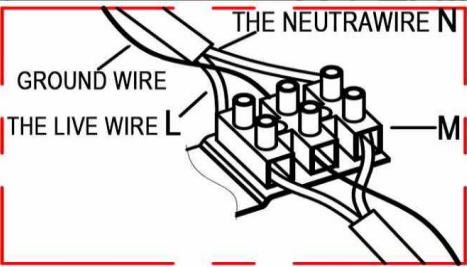


PLEASE IGNORE THIS
DEVICE IN THE CANOPY

INCLUDED ASSEMBLY HARDWARE

J MOUNTING SCREWS


K PLASTIC WIRE CONNECTORS




TOOLS NEEDED(INCLUDED)

C ANCHOR

E STRENGTHENED SCREW



PRODUCT ASSEMBLY

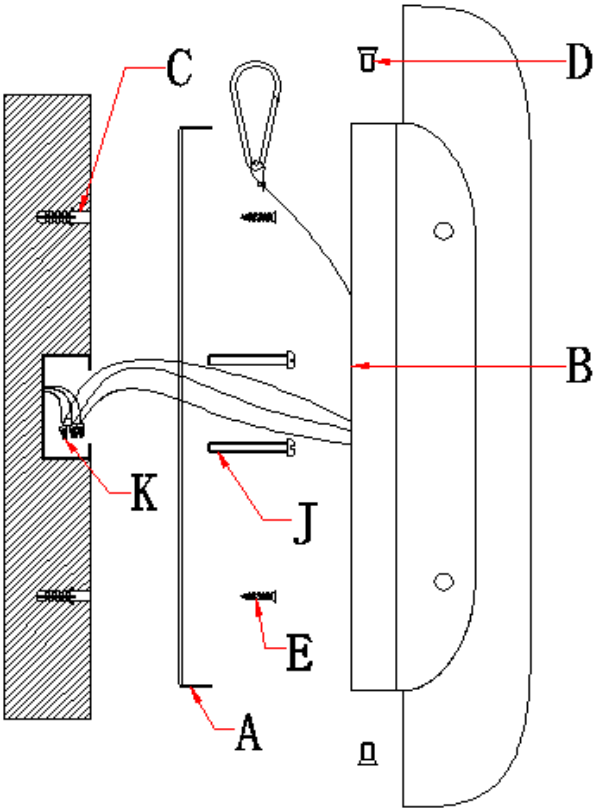

ASSEMBLY INSTRUCTIONS

- 1.REMOVE ALL PACKING CONTENTS AND PARTS FROM THE CARTON(S)CAREFULLY.
- 2.PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY.
- 3.SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
- 4.PULL THE ELECTRICAL CORD OF "J BOX"THROUGH THE EXIT HOLE OF THE MOUNTING PLATE(A).
- 5.POSITION FIXTURE IN DESIRED LOCATION ON **WALL**. THE MOUNTING PLATE (A) FEATURES (2) HOLES FOR SCREW MOUNTING.
MARK THESE SPOTS ON THE **WALL** WITH A PENCIL TO DRILL HOLES. DRILL 2 HOLES ON THESE SPOTS AND INSERT ANCHORS(C) INTO DRILLED HOLES.
6. ATTACH THE MOUNTING PLATE (A) TO THE OUTLET BOX BY USING THE ENCLOSED MOUNTING SCREW (J), AND TIGHTEN IT WITH A SCREWDRIVER.
THEN FIX THE TOP AND BOTTOM OF THE MOUNTING PLATE (A) BY INSERTING 2PCS OF STRENGTHENED SCREWS(E) INTO THE ANCHOR(C) AND TIGHTEN STRENGTHENED SCREWS (E) WITH A SCREWDRIVER.
- 7.ATTACH THE KEY CHAIN ON THE AIRCRAFT WIRE OF THE BACK PLATE TO THE MOUNTING PLATE(A).
- 8.CAREFULLY INSPECT THE FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDGES MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING.THE BARE WIRE IS THE GROUNDED WIRE.**
- 9.ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE).
FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
- 10.CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
- 11.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
- 12.PLEASE PAY SPECIAL ATTENTION THAT YOU DO NOT NEED TO CONNECT THE WIRE CONNECT DEVICE(M). IT IS USED FOR THE WIRE CONNECTION FOR EURO-MARKET.**
- 13.GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE JUNCTION BOX.
14. ATTACH THE BACK PLATE (B) ONTO THE MOUNTING PLATE (A) WITH 2PCS OF SET SCREWS (D), AND TIGHTEN IT WITH A SCREWDRIVER.
- 15.RESTORE POWER TO THE JUNCTION BOX AND TEST FIXTURE.

CARE & MAINTENANCE

DUST WITH A DRY CLOTH.

DISCLAIMERS

FOR CUSTOMER SERVICE QUESTIONS CALL 1.888.488.8866

WE RECOMMEND THE INSTALLATION OF THIS ELECTICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ARTERIORS HOME:972.488.9800

ARTERIORS CONTRACT:972.488.9800 EXT.321

ARTERIORS